

Fitn*e*x

Get your Fitn*e*x on!

Treadmill T65 / T70

User Manual V.1.1

Treadmi





TABLE OF CONTENTS



Grounding Instructions	1
Compliance	2
Safety Instructions	3-4
Installation	5-6
Overview	7
T65	8-21
T70	22-33
Stretching and Flexibility	34-35
Maintenance	36-41
Warranty	42

This product must be grounded. If it should malfunction or breakdown, grounding provides a path of least resistance for electric current to reduce the risk of electric shock. This product is equipped with a cord having an equipment-grounding conductor and grounding plug. The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.

DANGER-Improper connection of the equipment-grounding conductor can result in a risk of electric shock. Check with a qualified electrician or serviceman if you are in doubt as to whether the product is properly grounded. Do not modify the plug provided with the product- if it will not fit the outlet, have a proper outlet installed by a qualified electrician.

This product is for use on a nominal 120-volt circuit (230 optional) and has a grounding plug that looks like the plug illustrated in the figure. Make sure that the product is connected to an outlet having the same configuration as the plug. No adapter should be used with this product.

- The appliance must be positioned so that the plug is accessible.
- If the power cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a safety hazard.

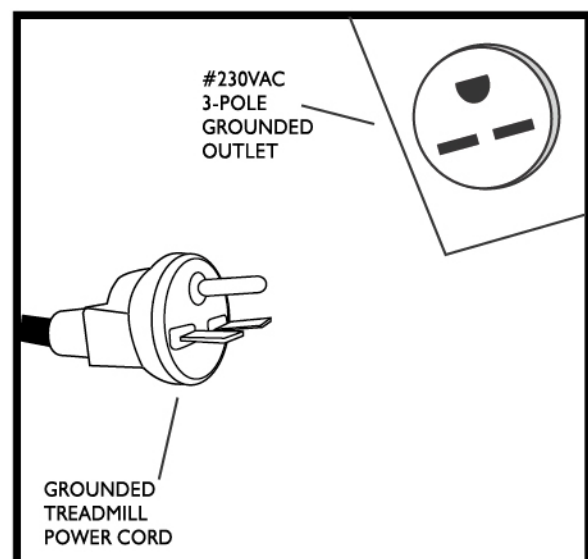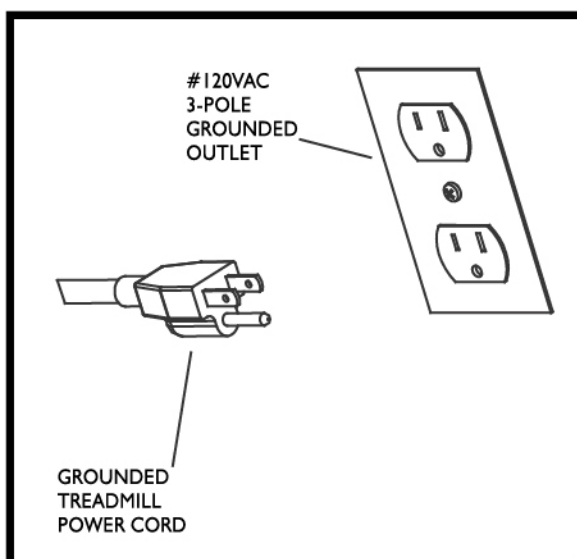

P.S. Different countries may use different voltage and shape of power cord outlet.

NOTE: This equipment has been tested and found to comply with Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. Any changes or modifications not expressly approved by the party responsible for the compliance could void the user's authority to operate the equipment. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that the interference will not occur in a particular installation. If this equipment does cause harmful radio interference to radio or television reception, which can be determined by turning the equipment off and on, you are encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase space between the equipment
- Plug the equipment into two electrical outlet located on separate circuits
- Consult an exercise equipment dealer or an experienced radio/TV technician for help

Class R (Residential) : Private or non-commercial use

When using an electrical product, basic precautions should always be followed, including the following:

Read all instructions before using this exercise product. The use of this product in any way not described in this manual is not recommended and may cause serious or fatal injury or void your warranty.

WARNING!

To reduce the risk of burns, fire, electrical shock or injury to persons:

- Use this exercise product for its intended use as described in this Manual. Do not use attachments not recommended by the manufacturer.
- Never drop or insert any object into any opening.
- Do not remove the Treadmill motor covers or roller covers. Service should be performed only by an authorized FITNEX retailer.
- Never operate this Treadmill if it has a damaged cord or plug, if it is not working properly, if it has been damaged, or immersed in water. Return the Treadmill to a retailer for examination and repair.
- Keep the cord away from heated surfaces.
- Do not use outdoors.
To disconnect, turn the switch to the OFF position, then remove plug from outlet.
- Never place the power cord under carpeting or place any object on top of the power cord, which may pinch and damage it.
- Unplug your Treadmill before moving it.
- When the FITNEX Treadmill is in use, young children and pets should be kept at least 10 feet away.

- This appliance can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.

CAUTION

FITNEX firmly recommends that you have a complete medical exam by a qualified physician before beginning any exercise program, particularly if you have a family history of high blood pressure or heart disease, are over the age of 45, or if you smoke, have high cholesterol, are obese or have not exercised regularly in the past year. If, at any time while exercising, you feel faint, dizzy, pain or a shortness of breath, stop exercising immediately.

PROPER USE


- DO NOT use this product unless proper attire is worn. Rubber-soled training, running, or tennis shoes must be worn to provide proper traction and protection while using this product.
- DO NOT use cleats, spikes or any other non-athletic style shoes.
- DO NOT use this product while barefoot or wearing only socks.

ELECTRICAL REQUIREMENT

Your FITNEX treadmill is intended for use in the country to which it was shipped. Electrical supplies outside of this country may differ and may not be compatible with the product. Please consult Customer Support before using the treadmill in a different country.

LOCATION

When choosing a location for the treadmill, pick a location that is unobstructed. The treadmill must have the following clearance.

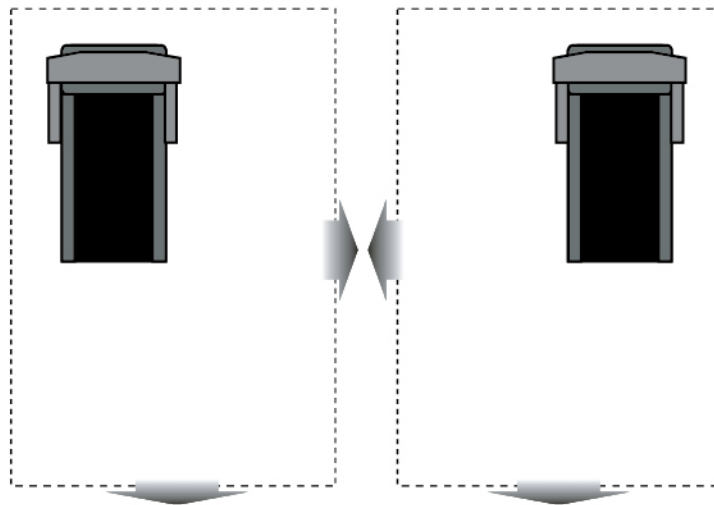

- Non-entry side of treadmill - Minimum of 8 inches (20cm)
- Entry side of treadmill - Minimum of 36 inches (90cm)
- Front of the treadmill - Minimum of 12 inches (30cm)
- Behind treadmill - Minimum of 6 feet (180cm)

These spacing requirements are mandatory for the safe use of the treadmill. If an accident occur, you must have sufficient space to move away from the treadmill.

GROUNDING INSTRUCTIONS

The treadmill must be properly grounded prior to use. Proper grounding reduces the risk of shock or damage to the treadmill. The power cord's plug is equipped with a grounding conductor that must be used with an electrical outlet installed in accordance to all local codes and ordinances. **DO NOT** use a temporary adapter that bypasses this function. This will stop the safety equipment from functioning properly and may void your warranty.


DO NOT MODIFY the plug provided with this product. If it will not fit an electrical outlet, have a proper outlet installed by a qualified electrician.

LEVELER LEGS

After finding a location that is suitable for the treadmill, the rear legs must be adjusted to provide stable support. Located on the side of each leg is a thumb-wheel that will allow you to lower or raise the leg until it is properly seated on the floor.


DO NOT adjust legs while the treadmill is on. Turn the power switch to the OFF position before adjustment.

T65/T70 ▼

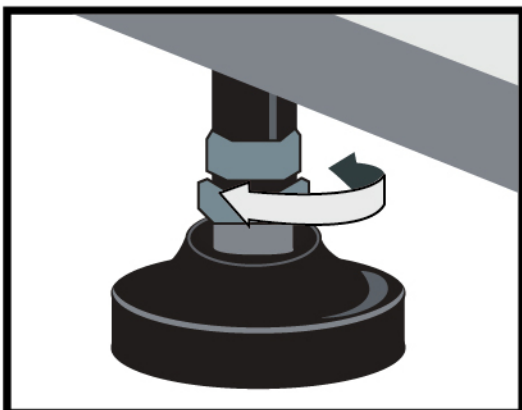

POWER SWITCH

The power switch is located on the side of the treadmill near the power cord. The power switch has two positions - ON and OFF. The display console will beep when the treadmill is plugged in and the power switch is pressed ON.

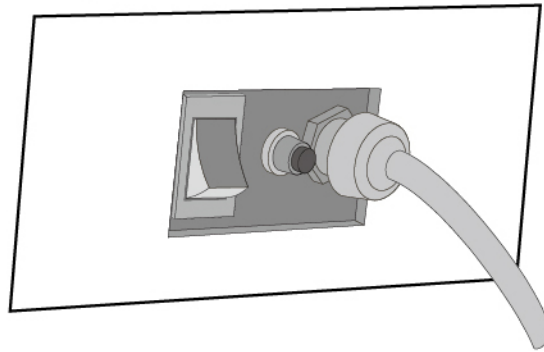

CIRCUIT BREAKER RESET

The circuit breaker is located next to the power switch. Should an electrical overload occur due to a surge in electricity or other situation, the circuit breaker will disconnect to prevent any damage from occurring to the treadmill.


If the treadmill suddenly stops with no lights visible nor beep heard, the circuit breaker. To reset the circuit breaker press the button firmly. The display console should restart and a beep should be heard.

CAUTION

If the power cord is warm to the touch a problem may exist with the electrical outlet in which the treadmill is plugged. It may be necessary to plug the treadmill into a different outlet.


POWER CORD


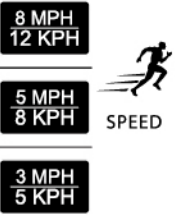


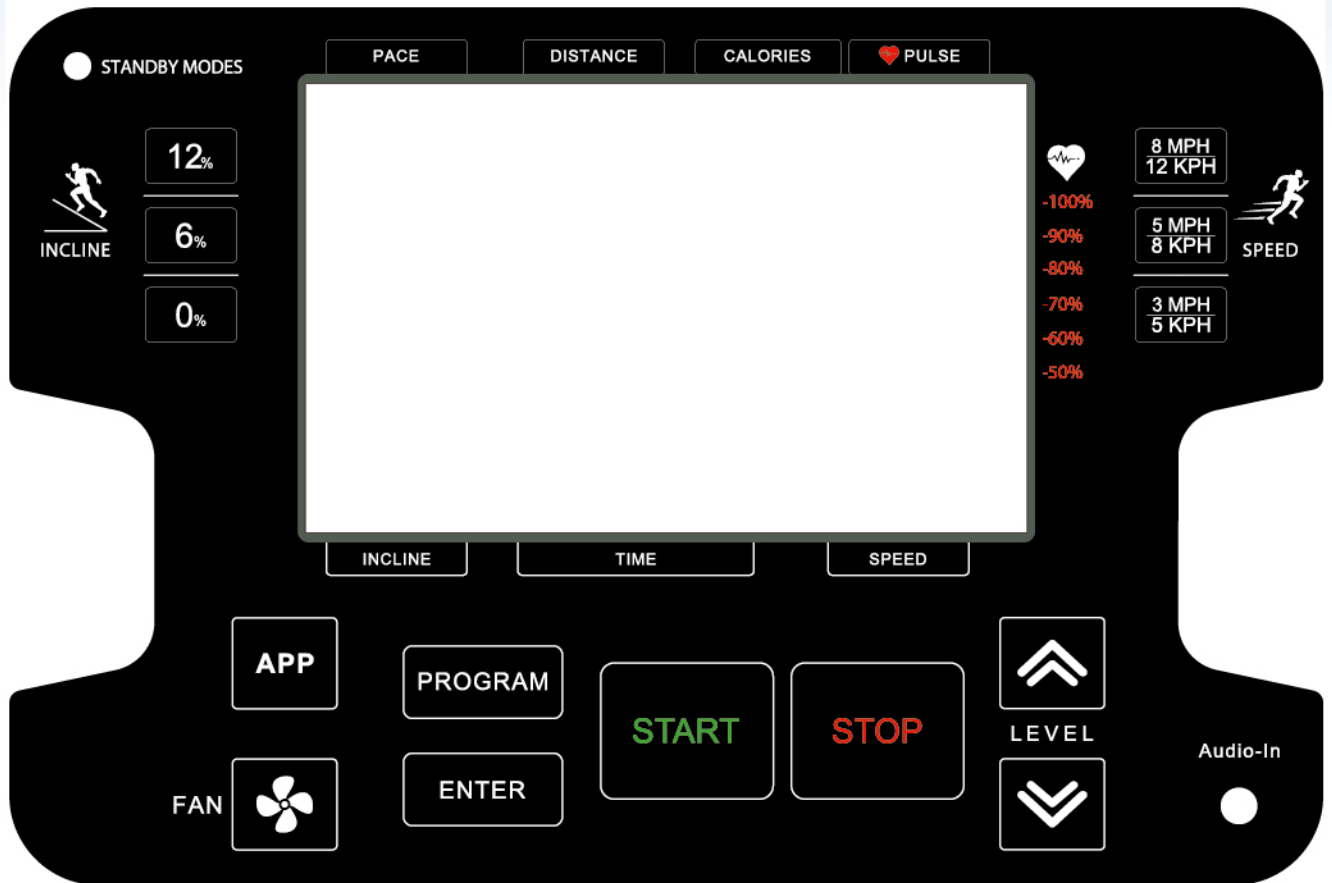

Plug the power cord into a properly grounded electrical outlet, keep power cord clean of treadmill wheels during operation. Replace the power cord if it is damaged or pinched. Damage to the power cord could result in a fire hazard or cause personal injury through electrical shock.



BUTTON INTRODUCTION

There are buttons for operating the treadmill, adjust incline level and exercise speed. A description of each button is listed below.

	Start workout
	Stop workout. Press and hold for 3 seconds to reset.
	Enter data
	Select workout program
	Adjust incline level. Every press will increase / decrease I level. Press and hold the button to adjust quickly.
	Incline quick keys.

	<p>Adjust speed. Every press will increase / decrease 0.1. Press and hold the button to adjust quickly.</p>
	<p>Speed quick keys.</p>
	<p>Adjust workout level.</p>
	<p>Adjust fan. There are three adjustments which are off, weak wind and strong wind. Fan can be used when safety key is equipped.</p>
	<p>Reset APP connect</p>
	<p>SAFETY STOP: Pulling out the safety key stops the treadmill immediately.</p>

INFORMATION WINDOW




TIME	Indicates time in minute and seconds(mm:ss).
PULSE	Indicates heart rate beats per minute during your workout. (Only displayed if you are using contact heart rate bar or chest belt.)
DISTANCE	Indicates exercising distance of user's workout.
CALORIES	Indicates accumulated calories burned during user's workout.
AGE	Indicates user's age.
SPEED	Indicates speed of user's workout. (Either miles or kilometers)
INCLINE	Indicates current incline of user's workout.
LEVEL	Indicates exercise level of user's workout.
WEIGHT	Indicates user's weight.

FitnEX cannot guarantee that the heart rate measurement system on any FitnEX product will work for all users in all instances. The accuracy of heart rate measurement will vary based on a number of factors, for example the user's physiology and age. Plus external interference and other factors may influence heart rate acquisition and processing.

MANUAL

Step 1	Set weight by pressing “  ” or “  ” , then press “  ” .
Step 2	Press “  ” to start your workout.



Note:

1. Under weight setting, if nothing is entered in 5 seconds, it enters MANUAL. Press “  ” to start your workout.
2. User can adjust speed and incline during workout.
3. During workout, if user presses “  ” , the treadmill stops. User can press “  ” and back to use, but speed will start from 0.5 MPH/0.8 KPH. It will back to standby mode if user doesn't press any button in 5 minutes.










GOAL

Step 1	Set weight by pressing “  ” or “  ” , then press “  ” .
Step 2	Press “  ” to choose GOAL, then press “  ” .
Step 3	Press “  ” or “  ” to set time, calories or distance, then press “  ” . Default value of TIME is 30 minutes. Default value of CALORIES is 200. Default value of DISTANCE is 3.
Step 4	Press “  ” to start your workout.



Note:

1. User can adjust speed and incline during workout.
2. During workout, if user presses “  ” , the treadmill stops.
User can press “  ” and back to use, but speed will start from 0.5 MPH/0.8 KPH. It will back to standby mode if user doesn't press any button in 5 minutes.



















CARDIO/FAT BURN

Step 1	Set weight by pressing “  ” or “  ” , then press “  ” .
Step 2	Press “  ” to choose CARDIO or FAT BURN, then press “  ” .
Step 3	Press “  ” or “  ” to set time, then press “  ” .
Step 4	Press “  ” to start your workout.

Note:

1. User can adjust speed and incline during workout.
2. During workout, if user presses “  ” , the treadmill stops. User can press “  ” and back to use, but speed will start from 0.5 MPH/0.8 KPH. It will back to standby mode if user doesn't press any button in 5 minutes.

INTERVAL

Step 1	Set weight by pressing “  ” or “  ”, then press “  ”.
Step 2	Press “  ” to choose INTERVAL, then press “  ”.
Step 3	Set distance by pressing “  ” or “  ”, then press “  ”. There are 3 different distances which are 0.1, 0.2 and 0.5 MILE/0.2, 0.4 and 0.8KM.
Step 4	Set speed by pressing “  ” or “  ”, then press “  ”.
Step 5	Set repeat times by pressing “  ” or “  ”, then press “  ”.
Step 6	Set sets by pressing “  ” or “  ”, then press “  ”.
Step 7	Press “  ” to start your workout.













INTERVAL

	Warm up		Sets 1				...	Sets N				Cool down				
			Repeat 1		Repeat N			Repeat 1		Repeat N						
Speed	60%	75%	100%	60%		100%	60%		100%	60%		100%	60%	60%	50%	2.5KPH
Time	3 min	9 min												3 min	4.5 min	30 sec
Distance			100%	50%		100%	50%		100%	50%		100%	50%			

Note:



1. During warm up, user can press “ **START** ” any time to skip warm up and start INTERVAL program.
2. During cool down, when user presses “ **STOP** ”, the treadmill stops. It will back to standby mode if user doesn't press any button in 5 minutes.

LONG SLOW DISTANCE







Step 1	Set weight by pressing “  ” or “  ”, then press “  ”.
Step 2	Press “  ” to choose LONG SLOW DISTANCE, then press “  ”.
Step 3	Set distance by pressing “  ” or “  ”, then press “  ”. There are 4 different distances which are 3, 6, 9 and 12 MILE(5, 10, 15 and 20 KM).
Step 4	Set speed by pressing “  ” or “  ”, then press “  ”. Lowest speed must be 5MPH(8KPH).
Step 5	Press “  ” to start your workout.

SPEED	WARM UP			COOL DOWN		
	60%	75%	100%	60%	50%	2.5 KPH
Distance 3Mile / 5 K	3 min	3 min	3 Mile / 5 K	3 min	0.5 min	30 sec
Distance 6Mile / 10 K	3 min	9 min	6 Mile / 10 K	3 min	4.5 min	30 sec
Distance 9Mile / 15 K	3 min	15 min	9 Mile / 15 K	3 min	8.5 min	30 sec
Distance 12Mile / 20 K	3 min	21 min	12 Mile / 20 K	3 min	12.5 min	30 sec



Note:

1. During warm up, user can press “  ” any time to skip warm up and start LONG SLOW DISTANCE program.
2. During cool down, when user presses “  ”, the treadmill stops. It will back to standby mode if user doesn't press any button in 5 minutes.










 








GERKIN

Step 1	Set weight by pressing “  ” or “  ”, then press “  ”.
Step 2	Press “  ” to choose GERKIN , then press “  ”.
Step 3	Press “  ” to start your workout. Default workout time is 20 minutes which can not be adjusted.



Note:

1. User can adjust speed and incline during workout.
2. During workout, if user presses “  ”, the treadmill stops.
User can press “  ” and back to use, but speed will start from 0.5 MPH/0.8 KPH. It will back to standby mode if user doesn't press any button in 5 minutes.

CUSTOM
















Step 1	Set weight by pressing “  ” or “  ”, then press “  ”.
Step 2	Press “  ” and choose CUSTOM, then press “  ”.
Step 3	Choose CUSTOM 1 or CUSTOM 2 by pressing “  ” or “  ”, then press “  ”.
Step 4	Set each segment’s speed by pressing speed “  ” or “  ”. Set each segment’s elevation by pressing incline “  ” or “  ”. After setting a segment, please press “  ” to next segment. After setting all segments, press “  ”.
Step 5	Press “  ” or “  ” to set time, then press “  ”.
Step 6	Press “  ” to start your workout.

Note:

1. User can adjust speed and incline during workout.
2. During workout, if user presses “  ”, the treadmill stops. User can press “  ” and back to use, but speed will start from 0.5 MPH/0.8 KPH. It will back to standby mode if user doesn’t press any button in 5 minutes.

H.R.C.












User needs to wear chest belt before starting this program.

Step 1	Set weight by pressing “  ” or “  ” , then press “  ” .
Step 2	Press “  ” and choose H.R.C, then press “  ” .
Step 3	Press “  ” or “  ” to set time, then press “  ” .
Step 4	Press “  ” or “  ” to set age, then press “  ” .
Step 5	Press “  ” or “  ” to set target HR, then press “  ” . Default value is 70%.
Step 6	Press “  ” to start your workout.

Note:

1. If heart rate is less than target value over 10 bpm, elevation increases 1% every 30 seconds. If heart rate is more than target value over 10 bpm, elevation decreases 1% every 30 seconds.
2. If heart rate can not be detected for 30 seconds, program ends.

ENGINEER MODE

1. When the treadmill is in standby mode, press and hold “  ” and “  ” for a while to enter engineer mode.
2. PCB Software version is showed, then press “  ” .
3. Set METRIC KG/KPH or ENGLISH LBS/MPH by pressing LEVEL “  ” or “  ” , then press “  ” .
4. Set run belt maintenance reminds, the press “  ” .
 DISABLE OCP : Turn off run belt maintenance reminds. (Default setting)
 ENABLE OCP : Turn on run belt maintenance reminds.
5. Accumulated workout time is showed, then press “  ” .
6. Accumulated workout distance is showed. If accumulated distance reaches 2000 KMS/1250 MILES, LUBE message reminds. Press and hold “  ” “  ” together for a while to clear. Press “  ” to back to standby mode.

NOTICE

When accumulated distance reaches 2000 KMS/1250 MILES, “LUBE THE BELT” shows. Press any button to skip. However, please follow run belt maintenance steps(P37-38) to spray silicone lubricant.

The display layout of T70 includes information window and button location.



Information Window
Button Location











INFORMATION WINDOW

The information window provides two different types of information: program directions and user information data. Program directions will be explained with programs later. User information data includes:

User Information Data	Description
TIME	Indicates time in minutes and seconds(mm:ss)
PULSE	Indicates heart rate beats per minute during your workout. (Only displayed if you are using contact heart rate bar or chest belt.)
DISTANCE	Indicates exercising distance of your workout.
CALORIES	Indicates accumulated calories burned during your workout.
SPEED	Indicates speed of your workout. (Either miles or kilometers.)
INCLINE	Indicates current incline of your workout.
LEVEL	Indicates exercise level of your workout.
PROGRAM	Indicates program of your workout.

BUTTON INTRODUCTION

There are buttons for operating the treadmill, adjust incline level and exercise speed. A description of each button is listed below.

	Start workout
	Enter Data
	Stop workout slowly
	Stop workout
	Adjust workout level
	Adjust incline level. Every press will increase/decrease 1 level. Press and hold the button to adjust quickly.
	Adjust speed. Every press will increase/decrease 0.1. Press and hold the button to adjust quickly.
	Adjust fan. There are three adjustments which are turn off, weak wind and strong wind. Fan can be used only when safety key is equipped.


LEVEL	Incline quick key for 0.
RISE	Incline quick key for 8%.
ASCEND	Incline quick key for 15%.
WALK	Speed quick key for 2.5MPH/4KPH.
JOG	Speed quick key for 3.5MPH/5.6KPH.
RUN	Speed quick key for 4.5MPH/7.2KPH.
CLASSIC	Choose CLASSIC exercise programs which include P1, P2, and P3. P1 is CARDIO. P2 is FAT BURN. P3 is INTERVAL.
H.R.C	Heart Rate Control program.
MANUAL	MANUAL program
GOAL	Choose GOAL exercise programs which include P1, P2 and P3. P1 is TIME. P2 is CALORIES. P3 is DISTANCE.
TRAINING	Choose TRAINING exercise programs which include P1, P2, P3, P4 and P5. P1 is GERKIN. P2 is USB. P3 is CUSTOM 1. P4 is CUSTOM 2. P5 is CUSTOM 3.

FitnEX cannot guarantee that the heart rate measurement system on any FitnEX product will work for all users in all instances. The accuracy of heart rate measurement will vary based on a number of factors, for example the user's physiology and age. Plus external interference and other factors may influence heart rate acquisition and processing.







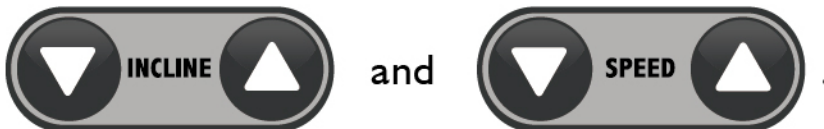


MANUAL

Step 1	Set up weight, then press  .
Step 2	Press  .
Step 3	Press  to start workout.

During workout, you can change speed and incline by using



CLASSIC













Step 1	Set up weight, then press  .
Step 2	Press  .
Step 3	Press  and  to choose P1 (CARDIO), P2 (FAT BURN) or P3 (INTERVAL) program, then press  .
Step 4	Press  and  to set time, then press  .
Step 5	Press  to start workout .

During workout, you can change speed and incline by using




HEART RATE CONTROL

User needs to wear chest belt before starting this program.

Step 1	Set up weight, then press  .
Step 2	Press  , then press  .
Step 3	Set age and you can use  and  to choose, then press  .
Step 4	Set TARGET HEART RATE and you can use  and  to adjust, then press  .
Step 5	Set TIME and you can use  and  to adjust, then press  to start workout.







HEART RATE CONTROL

During workout, you can change speed by  .
Incline will be controlled by program.

Heart rate checks all the time during your workout-

- A. If your heart rate is over 10 bmp lower than target heart rate, incline will increase 1% every 30 seconds. When incline is in highest level, speed window flashes three times every 30 seconds to inform user to increase speed, but speed will be not increased automatically.
- B. If your heart rate is over 10 bmp higher than target heart rate, incline will be decreased 1% every 10 seconds. If incline is already decreased to 0%, speed will be decreased 0.1 mph every 10 seconds automatically to lowest speed.
- C. If no heart rate is detected, heart rate window flashes, and treadmill will be turned off in 30 seconds.







GOAL

Step 1	Set up weight, then press  .
Step 2	Press  .
Step 3	<p>Press  and  to choose P1 (TIME), P2 (CALORIES) or P3 (DISTANCE) program, then press  .</p> <p>Default time for P1 is 20. Default calories for P2 is 200. Default distance for P3 is 5.</p>
Step 4	Press  to start workout .

During workout, you can change speed and incline by using



Training




Step 1	Set up weight, then press  .
Step 2	Press  .
Step 3	Press  and  to choose P1 (GERKIN), P2 (USB), P3 (CUSTOM 1), P4 (CUSTOM 2), or P5 (CUSTOM 3) program, then press  .
Step 4	Press  to start workout .

1. During workout, you can change speed and incline by using



2. When using USB, it will read information of USB automatically. If nothing is read, it will show DATA ERROR on the console.


Note

1. Press  during your workout, drive motor will stop, but incline level will not change. “STOP” will be shown on the display and count down 5 minutes. When counting down to 0, it will be reset automatically and turn off display.
2. Press  during your workout, incline level and speed will decrease to 0. When incline level and speed decrease to 0, it will be reset automatically and turn off display. During cool down, if you press , drive motor will stop and start counting down 5 minutes. When it counts down to 0, it resets automatically and turns off display.


ERROR CODE

1. E1 means no speed signal feedback.
2. E6 means no elevation motor signal feedback.
3. E7 means no elevation motor signal in start point feedback.

NOTICE



When turn on the treadmill, if the console shows “LUBE BELT”, please follow run belt maintenance steps (P39) to spray silicone lubricant. After spraying, press  and hold for a while until the “LUBE BELT” notice is gone.

ENGINEER MODE

1. Turn on power, and press and hold  for 3 seconds to set date/time.

While setting, you can use any up and down button to adjust.

Then press  to confirm the value you set.

2. Turn on power, press and hold  and “ SPEED  ” for 3 seconds.

a. It will show software version.

b. Press  to show flywheel diameter setting value.

c. Press  to set MPH/KPH.

d. Press  to set calendar.

e. Press  and it will show total workout distance.

f. Press  and it will show total workout time by hour.


g. Press  and it will go back to start window.

Lower Back, Hips, Groin, and Hamstrings

1. Stand with the feet about shoulder-width apart and pointed straight ahead. If you are pretty flexible and need more of a stretch, cross one leg in front of the other for a few stretches, then switch legs.
2. Slowly bend forward from the hips, always keeping your knees slightly bent.
3. Stretch only to the point where you feel a tugging in the back of your legs.


Side Bends

1. Stand with your feet about shoulder-width apart and toes pointed straight ahead. Keep your knees slightly bent, one hand on your hip; extend your other arm up and over your head. Slowly bend at your waist to one side, toward the hand on your hip.
2. Extend both arms overhead. Hold your right hand with your left hand and bend slowly to the left, using your left arm to pull the right arm gently over the head and down toward the ground.
3. Repeat with other side.

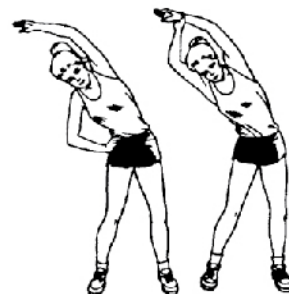

Quadriceps (front of thigh)

1. Lying on our stomach, pull the heel toward your buttocks with the opposite hand. Keep the thigh of the leg being stretched close to the leg on the floor.
2. The same stretch can be done standing. Do not allow the thigh to come in front of you and so not bend forward at the waist.
3. Do this exercise twice - once on each leg.

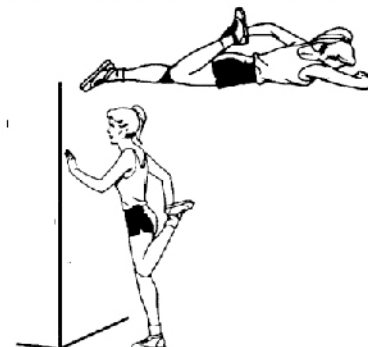

Groin (inside of thigh)

1. Sit on the floor with the soles of your feet together. Gently push knees down toward the floor with your elbows.
2. Stand with your feet three to four feet apart and turned out slightly.
3. Keep the knee of the leg to be stretched straight, and bend the opposite knee as you move your body toward the bent leg. Keep your toes pointed forward.
4. Repeat using the other leg



Hamstrings (back side of upper leg)

1. Sit with one knee bent and the leg to be stretched out straight. Reach for the toes of the straight leg with the right hand and then the left hand.
2. Repeat with the other leg.




Gluteus (back of hip)

1. Lie on your back. Pull one knee up to your chest while keeping the opposite leg down on the floor with the knee straight.
2. The same may be done standing.
3. Repeat with the other leg.



Anterior Tibials (front of shin)

1. Stand with all of your weight on one leg. Extend the opposite leg forward and flex and point at the ankle.
2. Repeat with the other leg.

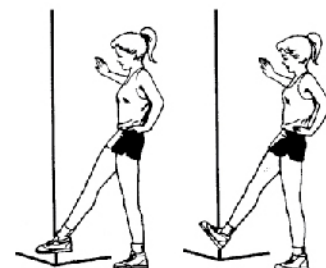

Here are some preventative maintenance tips that will keep your treadmill operating at its best.

Cleaning

When cleaning the exterior of the unit, a non-abrasive cleanser and soft cotton cloth are strongly recommended. At no time should cleanser be applied directly to any part of the equipment. Instead, place the non-abrasive cleaning solution on a soft cloth and wipe down the unit.

- Clean the console and all exterior surfaces regularly.
- Vacuum running belt regularly to keep debris from accumulating.
- Inspect exterior parts regularly for wear and tear. Especially the running belt and deck.
- Inspect area under treadmill and vacuum regularly.

Recommended Maintenance

Item	Daily	Weekly	Monthly	Quarterly	Bi-annual
Console Mounting Bolts					Inspect
Frame	Clean				Inspect
Console	Clean		Inspect		
Safety Stop	Test				
Power Cord			Inspect		
Running Belt Top		Clean (Vacuum)			
Running Belt Tension			Inspect		
Running Belt				Inspect	
Rear Adjustable foot				Adjust	
V Belt				Adjust	Inspect
Motor Pulley				Clean	
Running Belt Lubricant	Suggested time to spray lubricant: Accumulated distance is 1250 miles (2000km).				

Steps for spray lubricant on the run belt for T65.


Step 1: Power off.



Step 2: Inspect run belt situation. Lift run belt as left picture shows. Touch running area's back of run belt by hand to feel if lubricant enough on the back of run belt. If run belt needs to be lubricated, please take a wiper to clean run deck and roller.



Step 3: Lift right side belt and spray lubricant as left picture showed. When spraying, the hand lifts the run belt needs to pull the run belt and make the run belt turn until run belt turns a revolution.

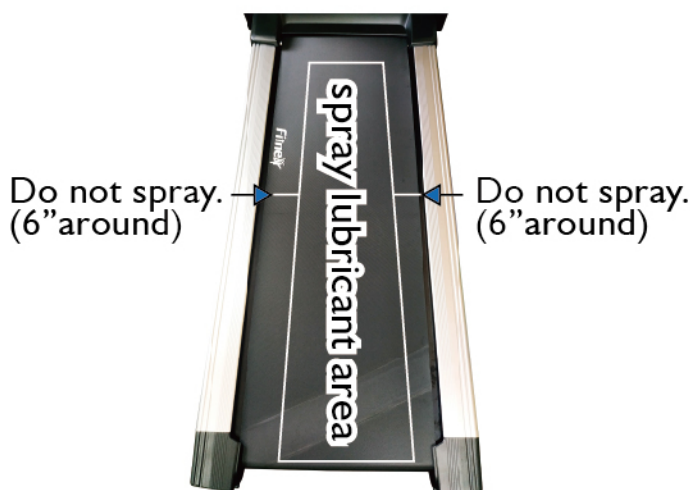

Notice:
When spray lubricant, please spray in center area. Please don't spray in side area.



Step 4:

Lift left side belt and spray lubricant as left picture showed. When spraying, the hand lifts the run belt needs to pull the run belt and make the run belt turn until run belt turns a revolution.

Notice:

When spray lubricant, please spray in center area. Please don't spray in side area.

Do not spray.
(6"around)



Do not spray.
(6"around)

Step 5: Power on.

Press "START", and increase speed to 1MPH(1.6 KPH). Have a people walk on the treadmill to help run belt absorbs.

Please notice:

DO NOT make the treadmill run in high speed when just spray lubricant. If lubricant is not absorbed, lubricant will spray out to drive motor and MCB.

Remark:

1.For each time maintenance, spray 30-50 cc. lubricant is suggested.

2.Suggested time to spray lubricant:

Accumulated distance is 1250 mile (2000km).

Steps for spray lubricant on the run belt for T70.

Step 1: Power off.



Step 2:
Prepare lubricant as left picture.




Step 3:
Lift right side belt and spray lubricant in center area. When spraying, the hand lifts the run belt needs to pull the run belt and make the run belt turn until run belt turns a revolution. Lift left side belt and spray lubricant in center area. When spraying, the hand lifts the run belt needs to pull the run belt and make the run belt turn until run belt turns a revolution.

Step 4:
Press “START”, and increase speed to 1 MPH(1.6 KPH). Have a people walk on the treadmill to help run belt absorbs.
Please notice:
DO NOT make the treadmill run in high speed when just spray lubricant. If lubricant is not absorbed, lubricant will spray out to drive motor and MCB.


Remark:

1. For each time maintenance, spray 30-50 cc. lubricant is suggested.
2. Suggested time to spray lubricant: Accumulated distance is 1250 mile (2000km).

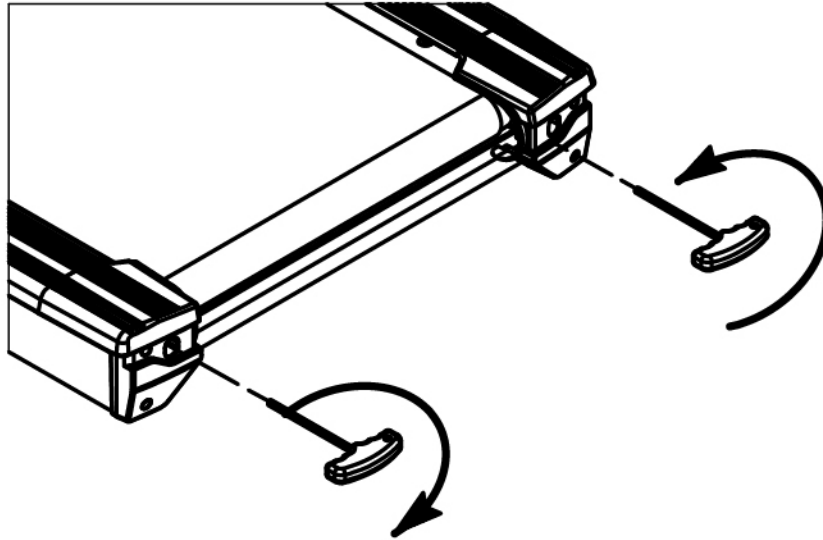BELT ADJUSTMENT


If belt is too far to the left side

- 1) turn the left roller bolt 1/4 turn clockwise(tighten)
- 2) turn the right roller bolt 1/4 turn counterclockwise(loosen)

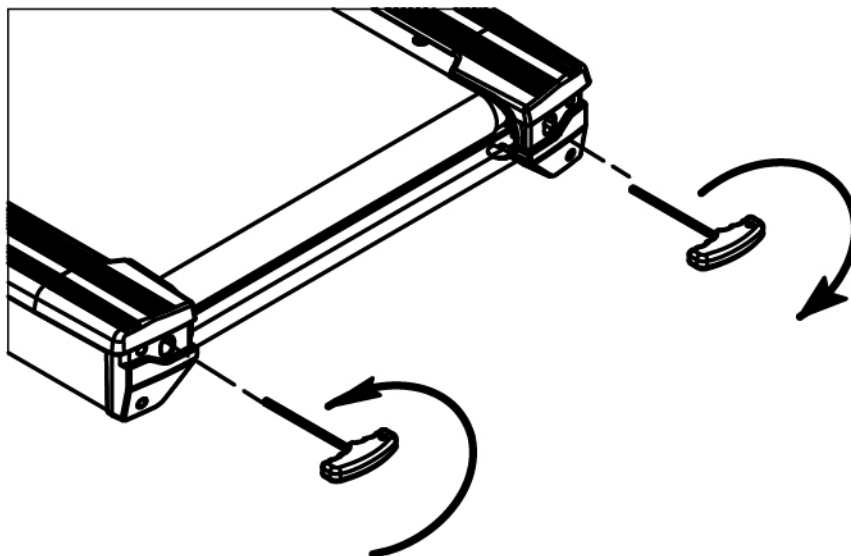

If belt is too far to the right side

- 1) turn the right roller bolt 1/4 turn clockwise(tighten)
- 2) turn the left roller bolt 1/4 turn counterclockwise(loosen)

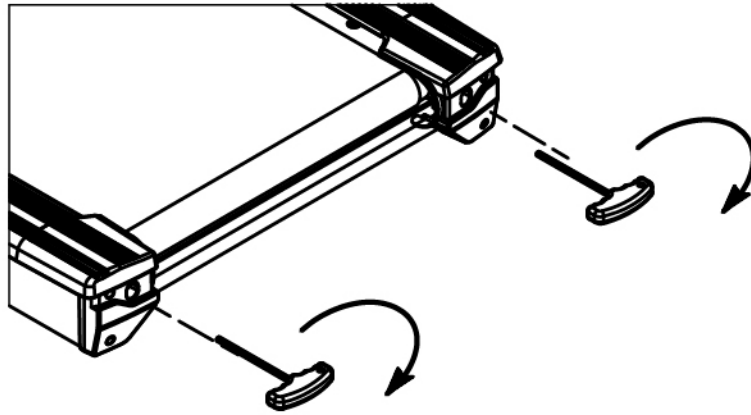

TENSIONING THE BELT

If when you plant your foot on the belt, you can feel a slipping sensation then the belt has been stretched and is slipping over the roller.

This is normal and common adjustment on a new treadmill.

To eliminate this slipping, tighten both sides of the rear roller by turning an allen wrench 1/4 as shown above. Try the treadmill again to check for slipping. Repeat if necessary, but NEVER TURN the roller bolt more than 1/4 turn at a time.

CAUTION:OVER TIGHTENING OF THE ROLLER WILL SEVERELY SHORTEN THE LIFE OF THE BELT AND MAY CAUSE FURTHER DAMAGE TO OTHER COMPONENTS.

WARNING:

*Means of disconnect must be incorporated in the fixed wiring in accordance with the wiring rules.

Drive Belt

If you have tightened the running belt and are still experiencing a slipping sensation, call your Fitnex Dealer. Tightening of the drive belt should only be performed by an authorized dealer.

1. The Warranty applies to the original owner and is extended to cover the cost of part(s) repair and/or replacement and does not include associated freight charges. Proof of purchase must be demonstrated.
2. Warranty is non transferable. If you are in USA, the warranty card must be completed and sent back to Fitness Master Inc. to complete registration. If you are out of USA, please contact your local dealer about the warranty.
3. Labor coverage is provided only if an authorized Fitnex dealer or the Fitnex factory representative does the work.
4. Any reimbursement for travel outside of the dealers' normal service or coverage area will be the responsibility of the customer.
5. Warranty does not cover failure due to improper assembly, installation or use.
6. This warranty does not cover customer instruction, installation, set up or adjustment. Note that tread belt tensioning and tracking are the responsibility of the user and are not covered by this warranty. User is also responsible for reasonable and necessary maintenance. Failure to maintain proper tread belt tracking and tensioning will void this warranty.
7. This warranty will not be extended to any product whose serial number has been removed, altered, or defaced.
8. This warranty does not cover damage or equipment failure caused by, or resulting from accident, misuse, abuse, improper assembly or installation, un-authorized modification, or failure to provide reasonable and necessary care as outlined in the owner's manual.

Get your Fitnex on!

Fitnex 

Treadmill