


XB 4300


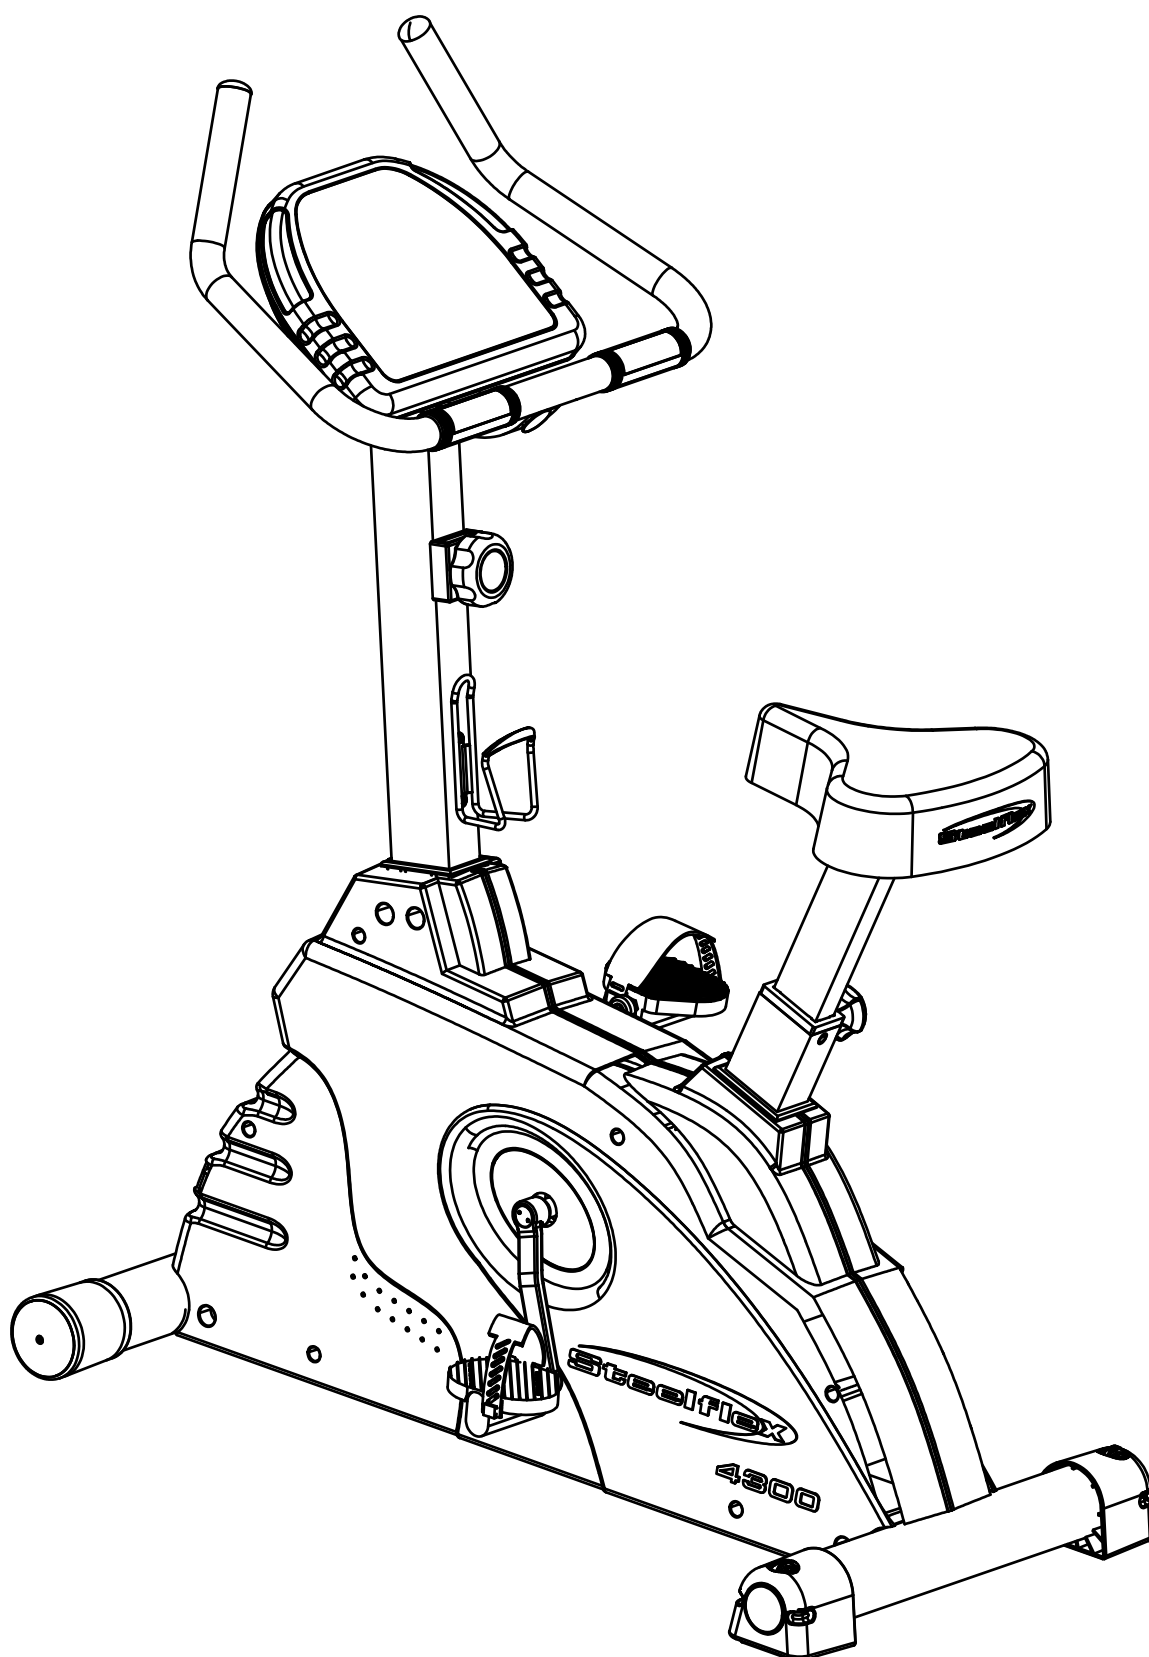


VERSION 0604

XB4300 HARDWARE ILLUSTRATION SHEET


- A1. M4X10 ROUND CROSS SCREW ----- 【2PCS】
- A2. M5X15 ROUND CROSS SCREW ----- 【4PCS】
- A3. M8X90 ROUND INNER HEX SCREW ----- 【1PCS】
- A4. M10X16 ROUND INNER HEX CROSS SCREW --- 【14PCS】
- A5. M10X65 ROUND INNER HEX SCREW ----- 【2PCS】

- C2. M10 (I.D) WASHER ----- 【6PCS】
- C3. M8 SPRING WASHER ----- 【1PCS】
- C4. M8XØ18 (I.D) WASHER ----- 【1PCS】
- C5. M10 SPRING WASHER ----- 【2PCS】
- D4. Ø21 ROUND END CAP (9261012) ----- 【3PCS】

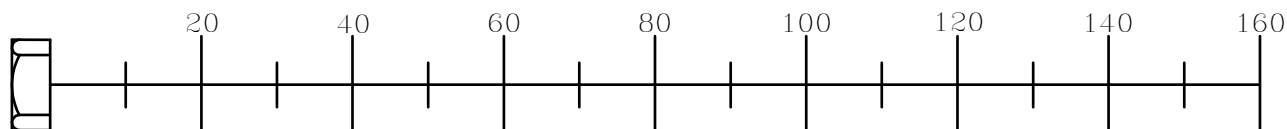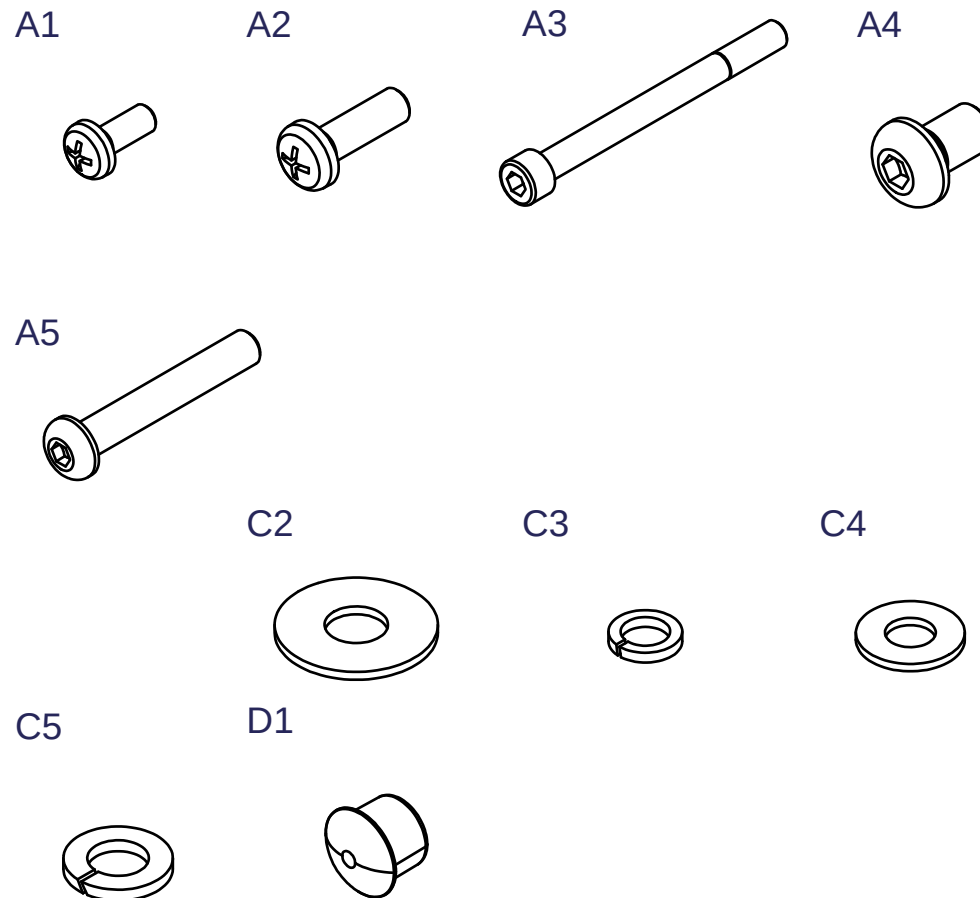


XB4300 PARTS ILLUSTRATION SHEET


A [1PCS]

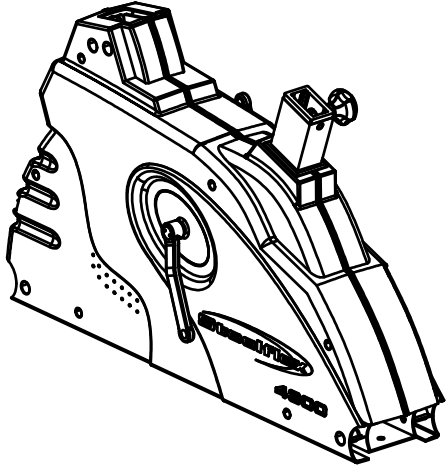


B [1PCS]

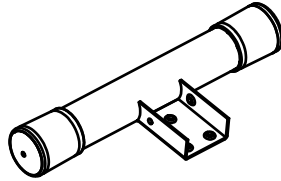


C [1PCS]

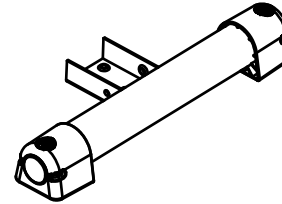


D [1PCS]

 


E [1PCS]

 


F [1PCS]

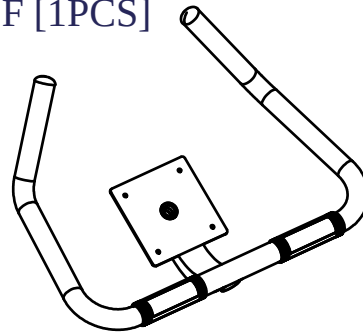

G [1PCS]

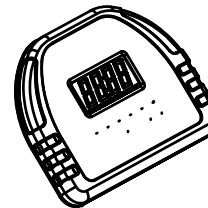

H [1PCS]

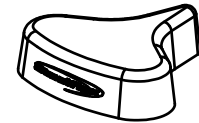

I [1PCS]



J [1PCS]



K [1PCS]



L [1PCS]



XB4300

Assemble Procedures : 1.B

2.C

3.D+H

4.E+F


5.4

6.①

7.2

8.③

After assembly of E and F,
connect wire in ①,
When put console into main
frame, pull connecting wire upward.

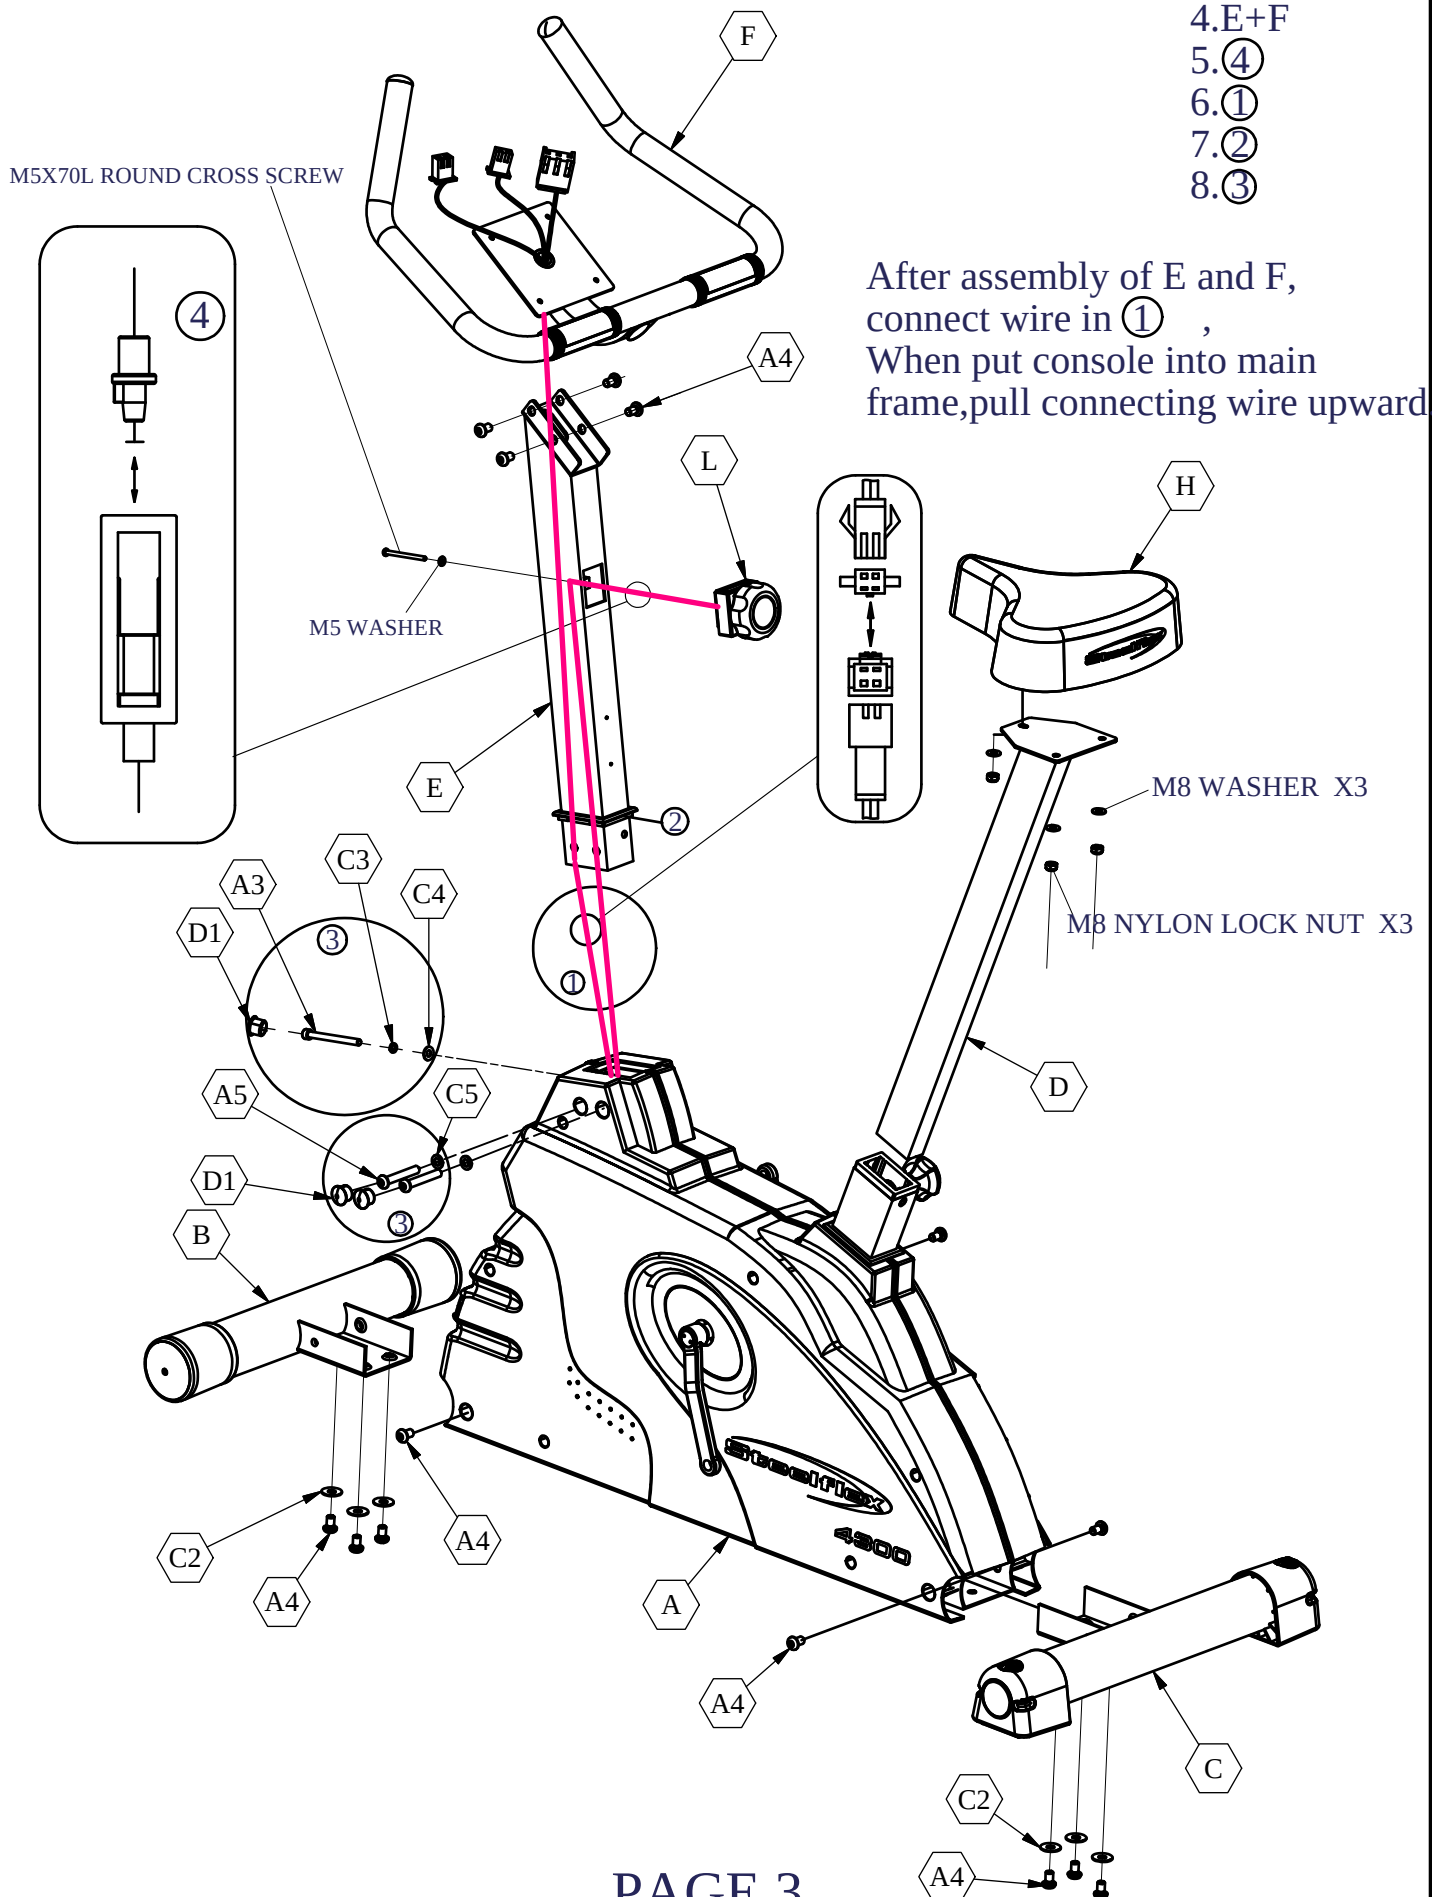

XB 4300

Assemble Procedures: 1. G
2. J
3. K
4. I

