 


HOPE

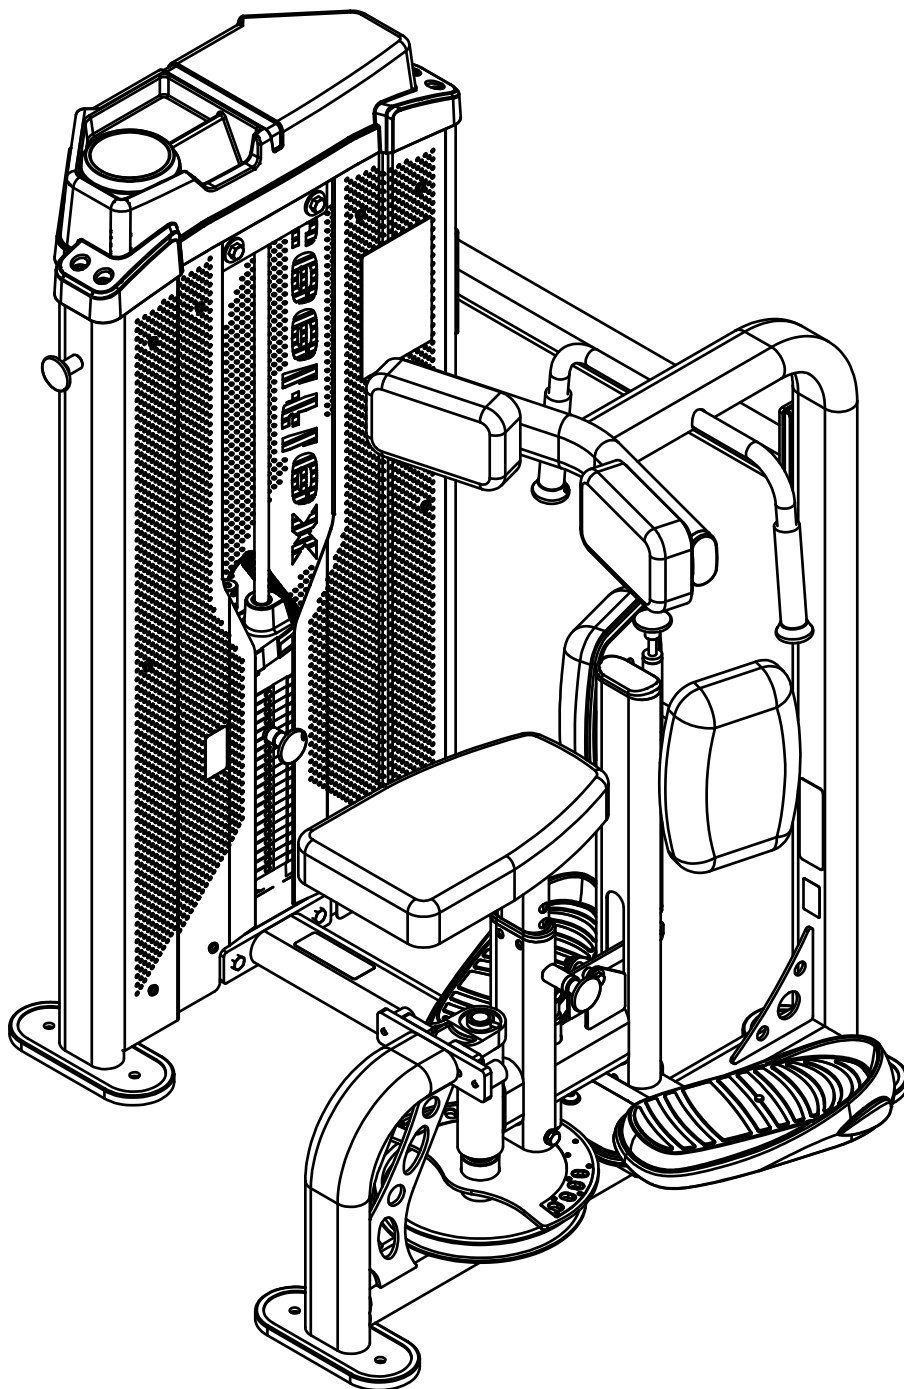

Steelflex

JOONG CHENN INDUSTRY CO., LTD.

Sales Office:

3F28, No.5, Shin-Yi Rd., Sec. 5, Taipei, Taiwan 110 R.O.C.

Tel: 886-2-27209980

 
 
Fax: 886-2-27229750

www.steelflexfitness.com



HOT-1800.3 OWNER'S MANUAL

HOT1800 ASSEMBLY INSTRUCTIONS


HARDWARE ILLUSTRATION

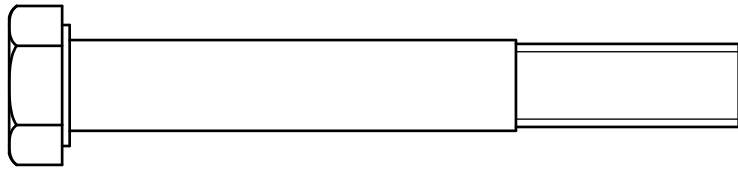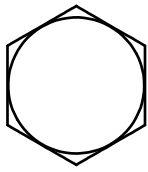

 
 
(A1)HEX BOLT M12X90L PARTIAL THREAD QTY.2



 
(A3)ROUND INNER HEX SCREW M8X70L PARTIAL THREAD QTY.4



  (A4)ROUND ALLEN HAED M8X40L PARTIAL QTY.1





 (A5)ROUND INNER HEX SCREW M8X35L PARTIAL THREAD QTY.4

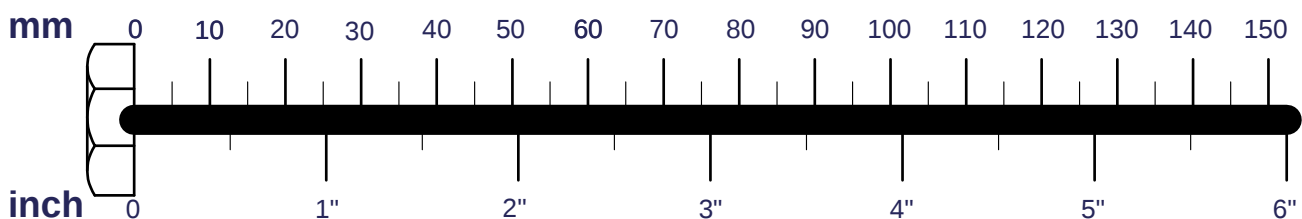


HOT1800 ASSEMBLY INSTRUCTIONS

  
HARDWARE ILLUSTRATION

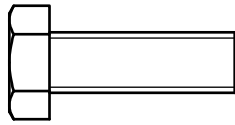


(A6)HEX BOLT M8X25L PARTIAL QTY.4

 

 (A7)ROUND CROSS SCREW M5X15L PARTIAL QTY.10





 (A8)Ø12.7XØ8.5X23L STEEL BUSHING(8110-062) QTY.1


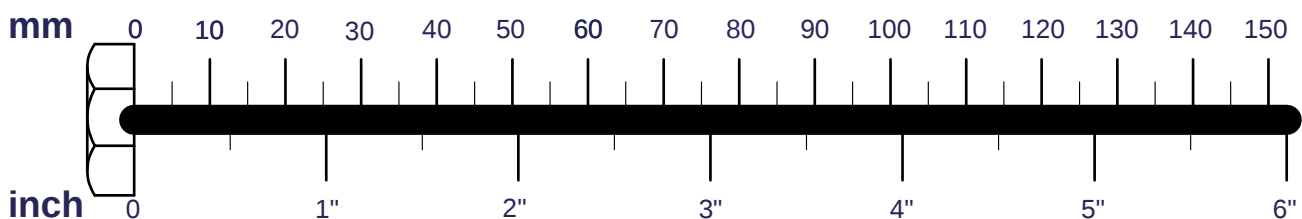


HOT1800 ASSEMBLY INSTRUCTIONS

  
HARDWARE ILLUSTRATION

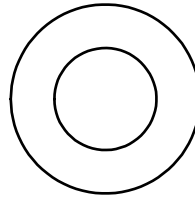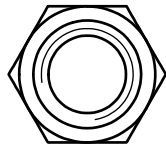

  
(B1)NYLON LOCK NUT M12 QTY.2 (C1)M12(I.D.)FLAT WASHER Ø25 QTY.4




(B2)NYLON LOCK NUT M8 QTY.1

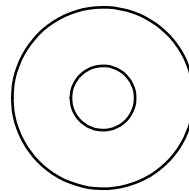 


(C3)M8(I.D.)FLAT WASHER Ø24 QTY.12

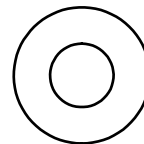 

(C4)M8(I.D.)FLAT WASHER Ø18 QTY.2

 


(C5)M5(I.D.)FLAT WASHER Ø14 QTY.10

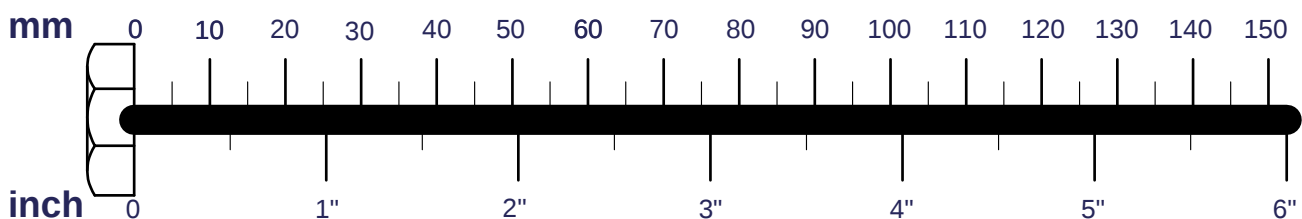 

HOT1800 ASSEMBLY INSTRUCTIONS

 
HARDWARE ILLUSTRATION



(C7)SPRING WASHER M8 QTY.12





 (C8)SPRING WASHER M5 QTY.10


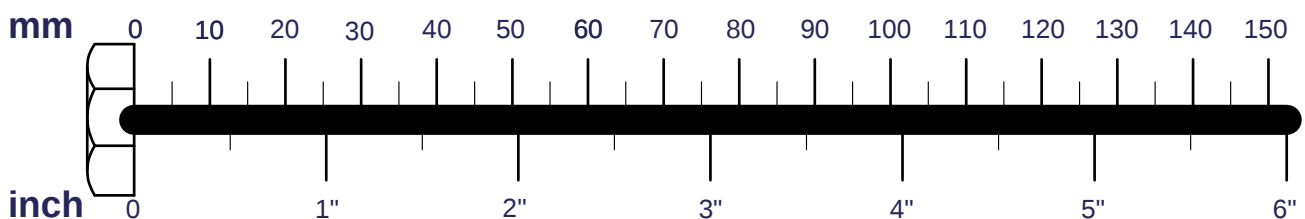


HOT1800 ASSEMBLY INSTRUCTIONS

  
FRAME HARDWARE ILLUSTRATION

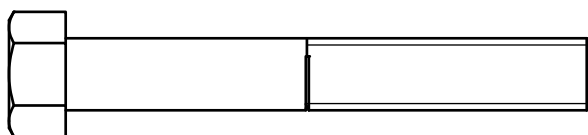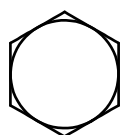


(AA2)HEX BOLT 3/8"X2-3/4"L PARTIAL THREAD QTY.1

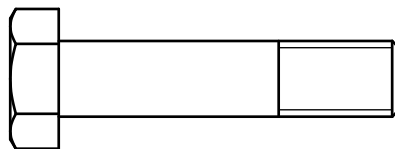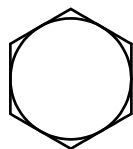  

(AA3)HEX BOLT M10X45L PARTIAL THREAD QTY.2

 


(AA4)ROUND INNER HEX SCREW M6x16L PARTIAL THREAD QTY.24

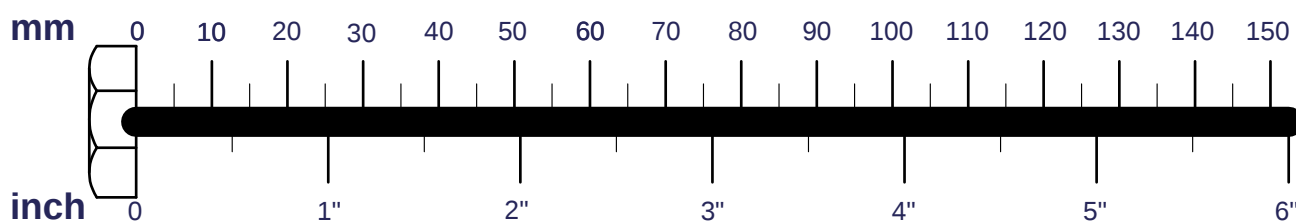 


HOT1800 ASSEMBLY INSTRUCTIONS

 
FRAME HARDWARE ILLUSTRATION




(AA5)ROUND INNER HEX SCREW M4x12L PARTIAL THREAD QTY.4

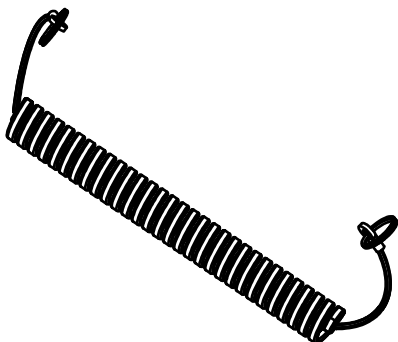 


(AA7)ELASTIC BELT QTY.1

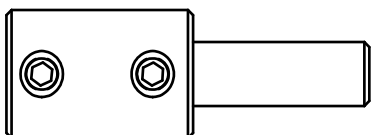 


(AA8)RT3(8260-009) QTY.1

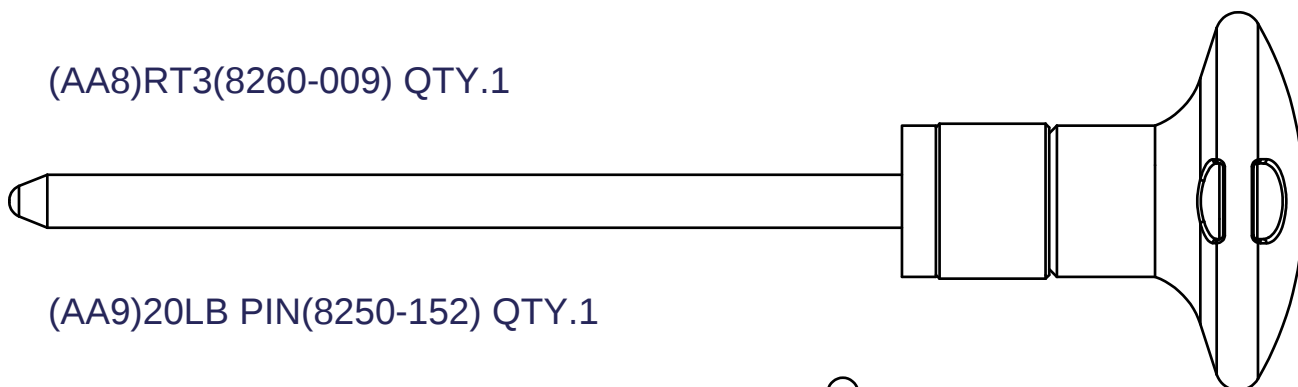 


(AA9)20LB PIN(8250-152) QTY.1

 

(AA10)Ø5/16" FIXED PIN (8250-166) QTY.1

 


(AA11)Ø5/16" FIXED PIN (8250-167) QTY.1

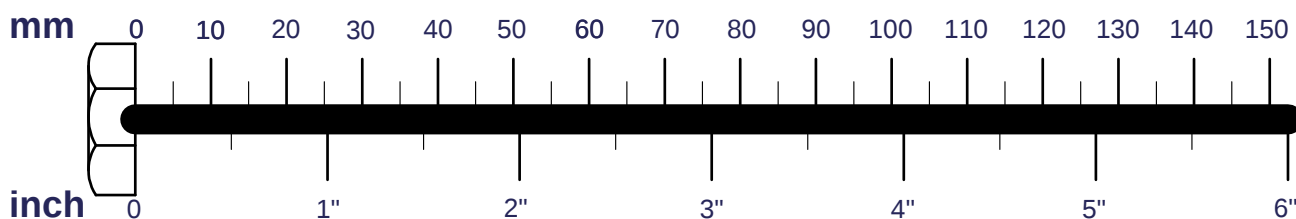 


HOT1800 ASSEMBLY INSTRUCTIONS

 
HARDWARE ILLUSTRATION

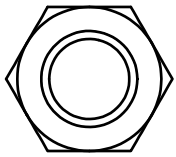



(BB1)1/2"NUT-13UNC QTY.1

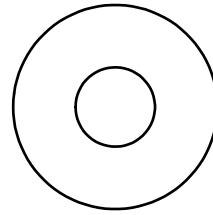 

(CC1)M10(I.D.)FLAT WASHER Ø27 QTY.5

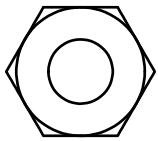 

(BB2)NYLON LOCK NUT M10 QTY.2

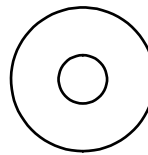  


(CC2)M6(I.D.)FLAT WASHER Ø19 QTY.24





(BB3)NYLON LOCK NUT M4 QTY.4



 (CC3)M4(I.D.)FLAT WASHER Ø10 QTY.8

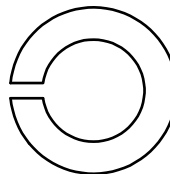

(CC5)SPRING WASHER 1/2" QTY.1

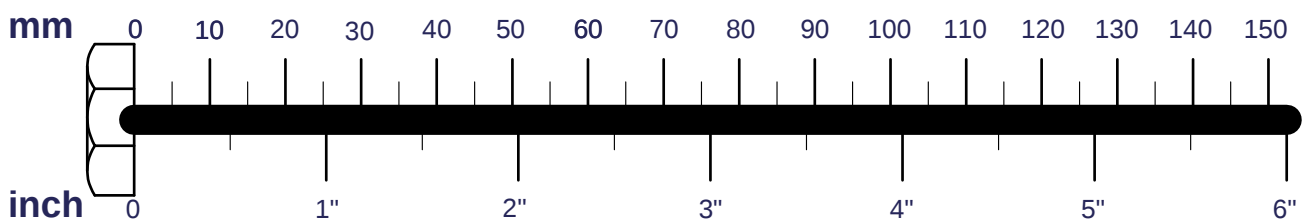  

HOT1800 ASSEMBLY INSTRUCTIONS


FARME HARDWARE ILLUSTRATION

DD1.Ø3/4" SHAFT COLLAR(9211-046)-----	[2PCS]
DD2.50X4tX50L RUBBER PAD(9214-002)-----	[3PCS]
DD3.Ø50X33.5L PLASTICS BAR(9215-024)-----	[1PCS]
DD4.Ø65XØ20X70L RUBBER DOUNT(9310-049)-----	[2PCS]
DD6.108X14.5tX263L RUBBER PAD(9310-075)-----	[2PCS]
DD7.Ø110X22 PULLEY (9213-002B)-----	[2PCS]


DD1.



 
DD2.

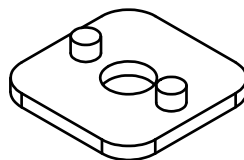


DD3.

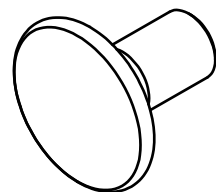 


DD4.

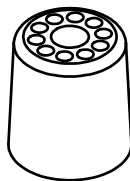 

DD6.

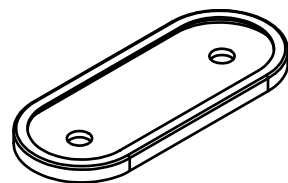 

DD7.

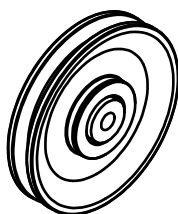 

HOT1800 ASSEMBLY INSTRUCTIONS


HARDWARE ILLUSTRATION

D1.	STEEL BUSHING Ø12.7XØ8.5X21L(8110-014)	[2PCS]
D2.	STEEL BUSHING Ø38XØ25.8X10L(8120-071)	[1PCS]
D3.	THRUST BEARING(8510-008)	[1PCS]
D4.	Ø38XØ26X1.5t CU WSAHER(8520-008)	[3PCS]
D5.	25X50 END CAP(9211-009)	[4PCS]
D6.	40X80X2tX35H END CAP(9211-113)	[2PCS]
D7.	50X100X2.0tX30H END CAP(9211-114)	[1PCS]
D8.	Ø60XØ30.1X2t NYLON WASHER(9214-006)	[1PCS]
D9.	PEDAL(9260-121)	[2PCS]
D10.	108X14.5tX263L RUBBER PAD(9310-075)	[2PCS]
D11.	Ø100X25 PULLEY (9213-017B)	[3PCS]
D12.	3155mm STEEL CABLE(FHOT1800A1)	[1PCS]


D1.



 
D2.

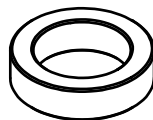


D3.

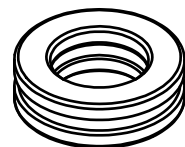 


D4.

 


D5.

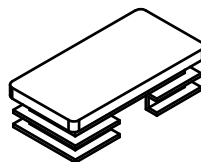 


D6.

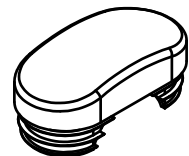 


D7.

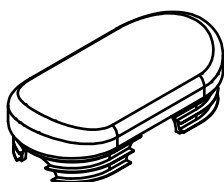 


D8.

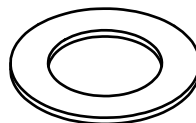 


D9.

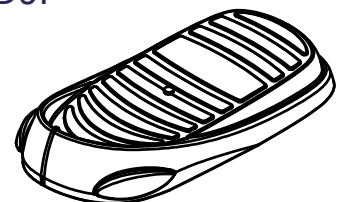 


D10.

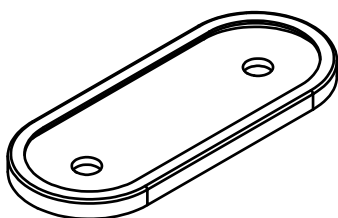 

D11.

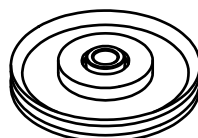 


D12.

 


HOT1800 ASSEMBLY INSTRUCTIONS

PARTS ILLUSTRATION SHEET

 
A2 [1SET]

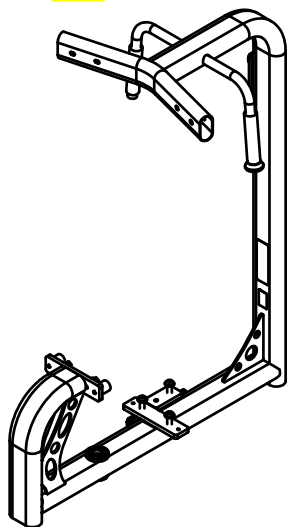


C [1SET]

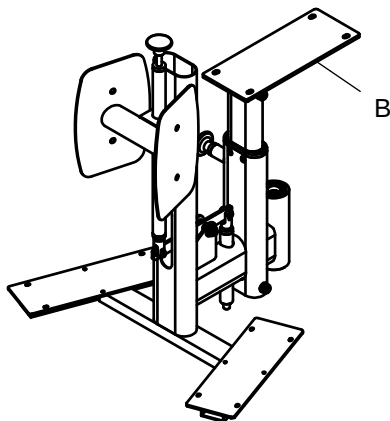 


D [1SET]

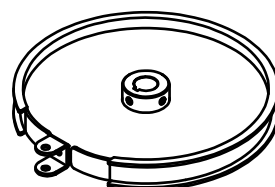 


E [1SET]

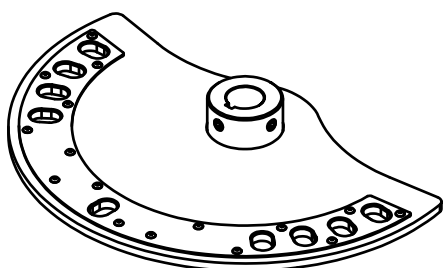 


F [1SET]

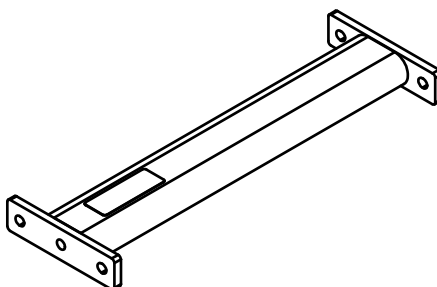 


G [1SET]

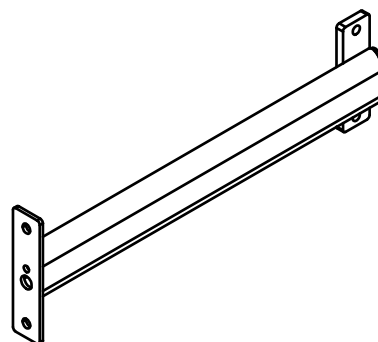 


H1 [1PCS]
8220-237

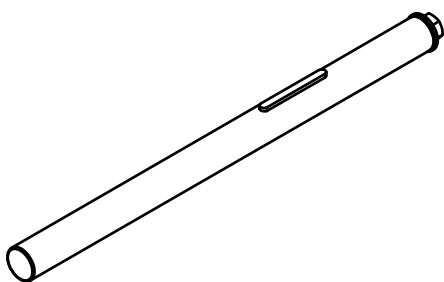 

I [1PCS]
8343-289

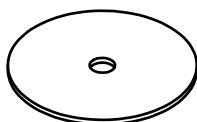 


J [2PCS]
8313-188

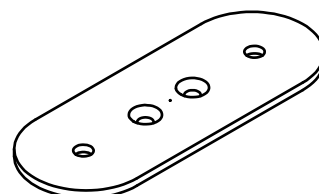 


HOT1800 ASSEMBLY INSTRUCTIONS

PARTS ILLUSTRATION SHEET

 
K [1PCS]
8312-077

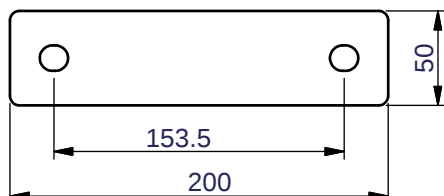


L [1PCS]
8313-194

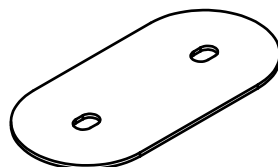 


M [1SET]
9121-099

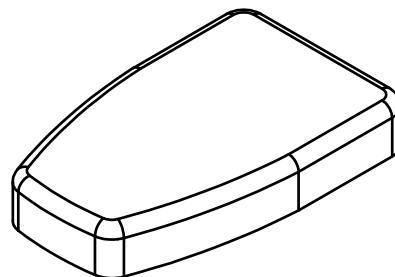 


N [2SET]
9131-052

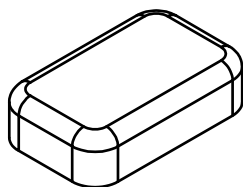 


O [2SET]
9131-053

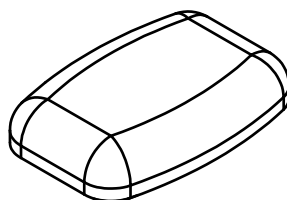 

P [1PCS]
9420-094

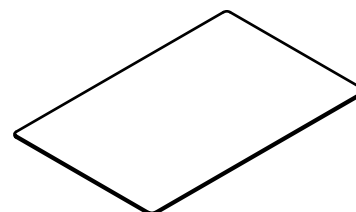 


S [1SET]
8510-058

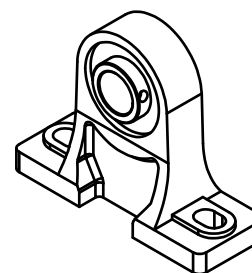 


HOT1800 ASSEMBLY INSTRUCTIONS

FARME PARTS ILLUSTRATION SHEET

 
AA1 [1SET]
6610-027

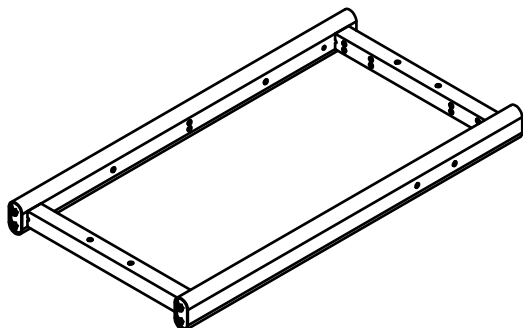


AB [1SET]
6610-017

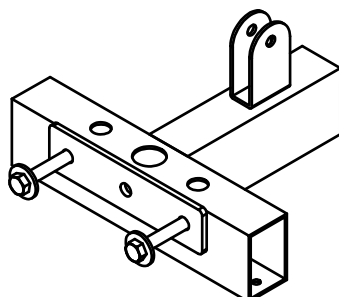 


AC [1PCS]
6610-018

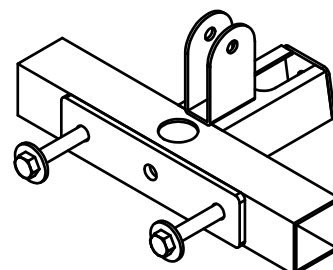 


AD [1PCS]
9211170-023

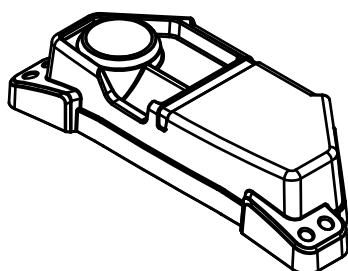 


AE [1PCS]
8380-066

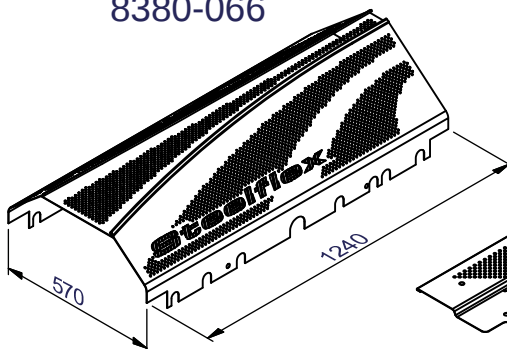 


AF [1SET]
8380-067

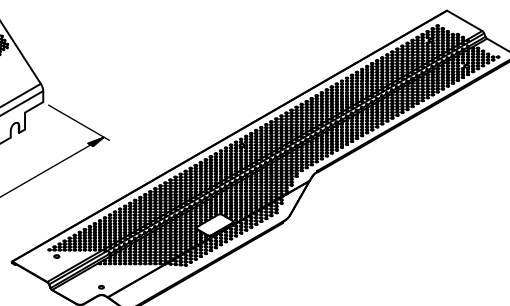 


AG [1PCS]
8380-068

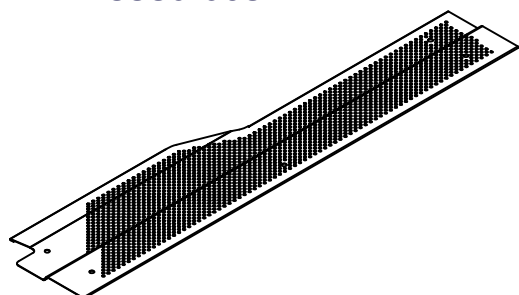 


AH [1SET]
8400-006

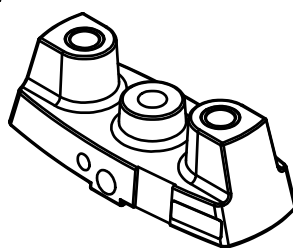 


AI1 [1PCS]
8210-191

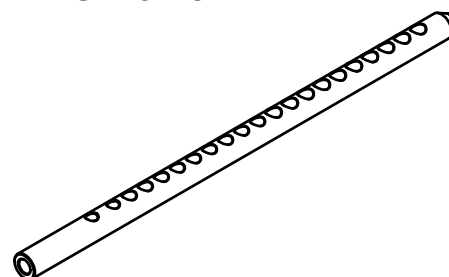 


AJ[6SET]
8331-064

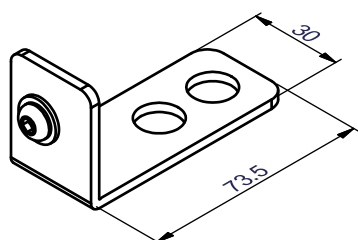 

AK[4SET]
8331-065

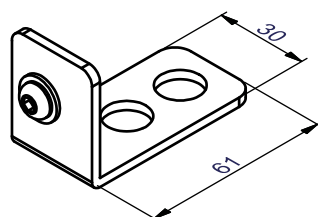 


AL[2PCS]
8313-188

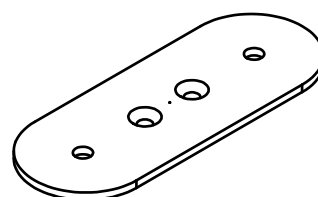 


HOT1800 ASSEMBLY INSTRUCTIONS

FARME PARTS ILLUSTRATION SHEET

 
AM [1PCS]
8331-017

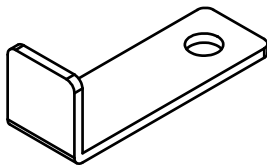


AN1 [2PCS]
8280-036
Ø3/4"X1222L

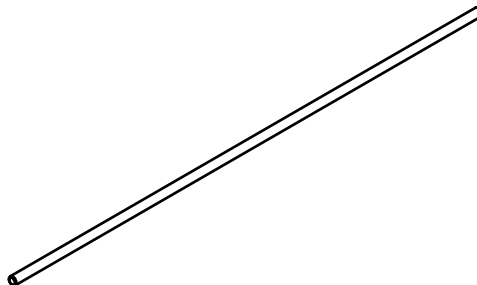 


AO [1PCS]
8345-014

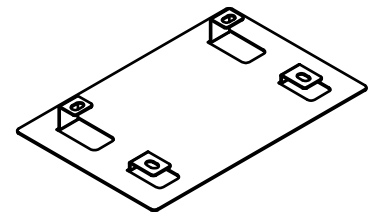 


AP [1PCS]
8311-194

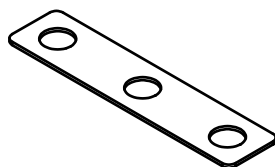 


HOT1800 ASSEMBLY INSTRUCTIONS

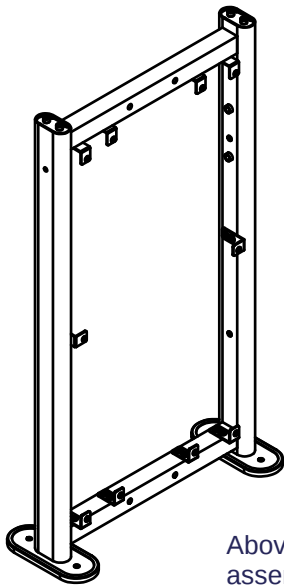 

 Above shows STEP 1
assembled and completed

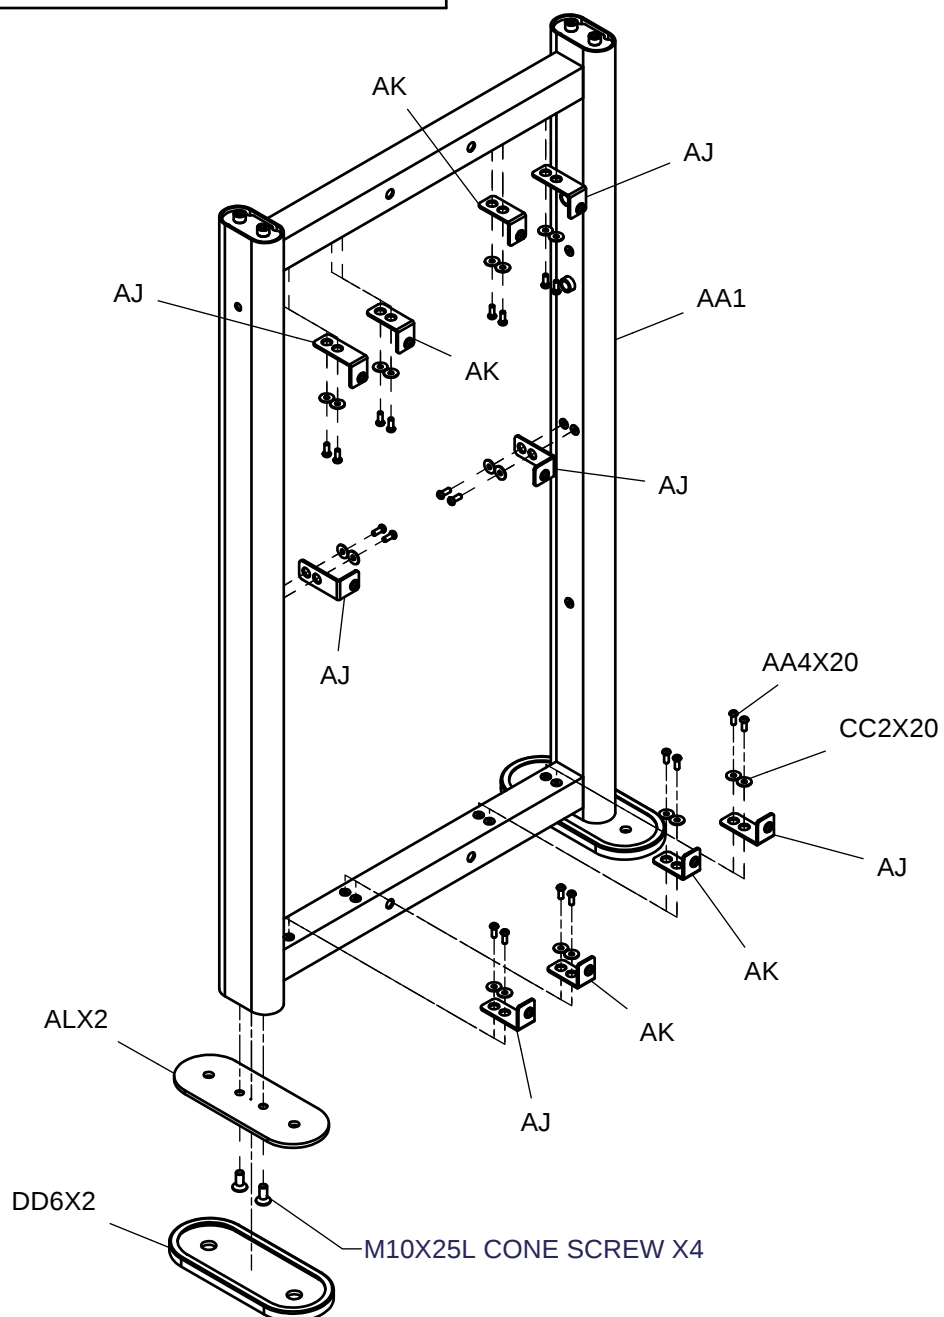


HOT1800 ASSEMBLY INSTRUCTIONS

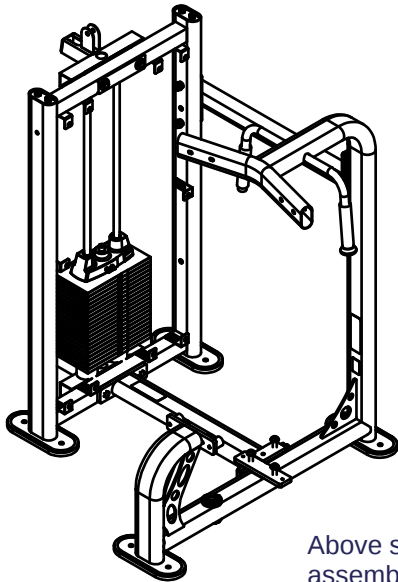 


Above shows STEP 2
assembled and completed

NOTE:

 1. Place AA10 - 8250-166 (pin) into the first weight plate.
2. Make sure AH- 8400-006 (top plate) cling to (first weight plate) and fix in AA11 - 8250-167(pin).


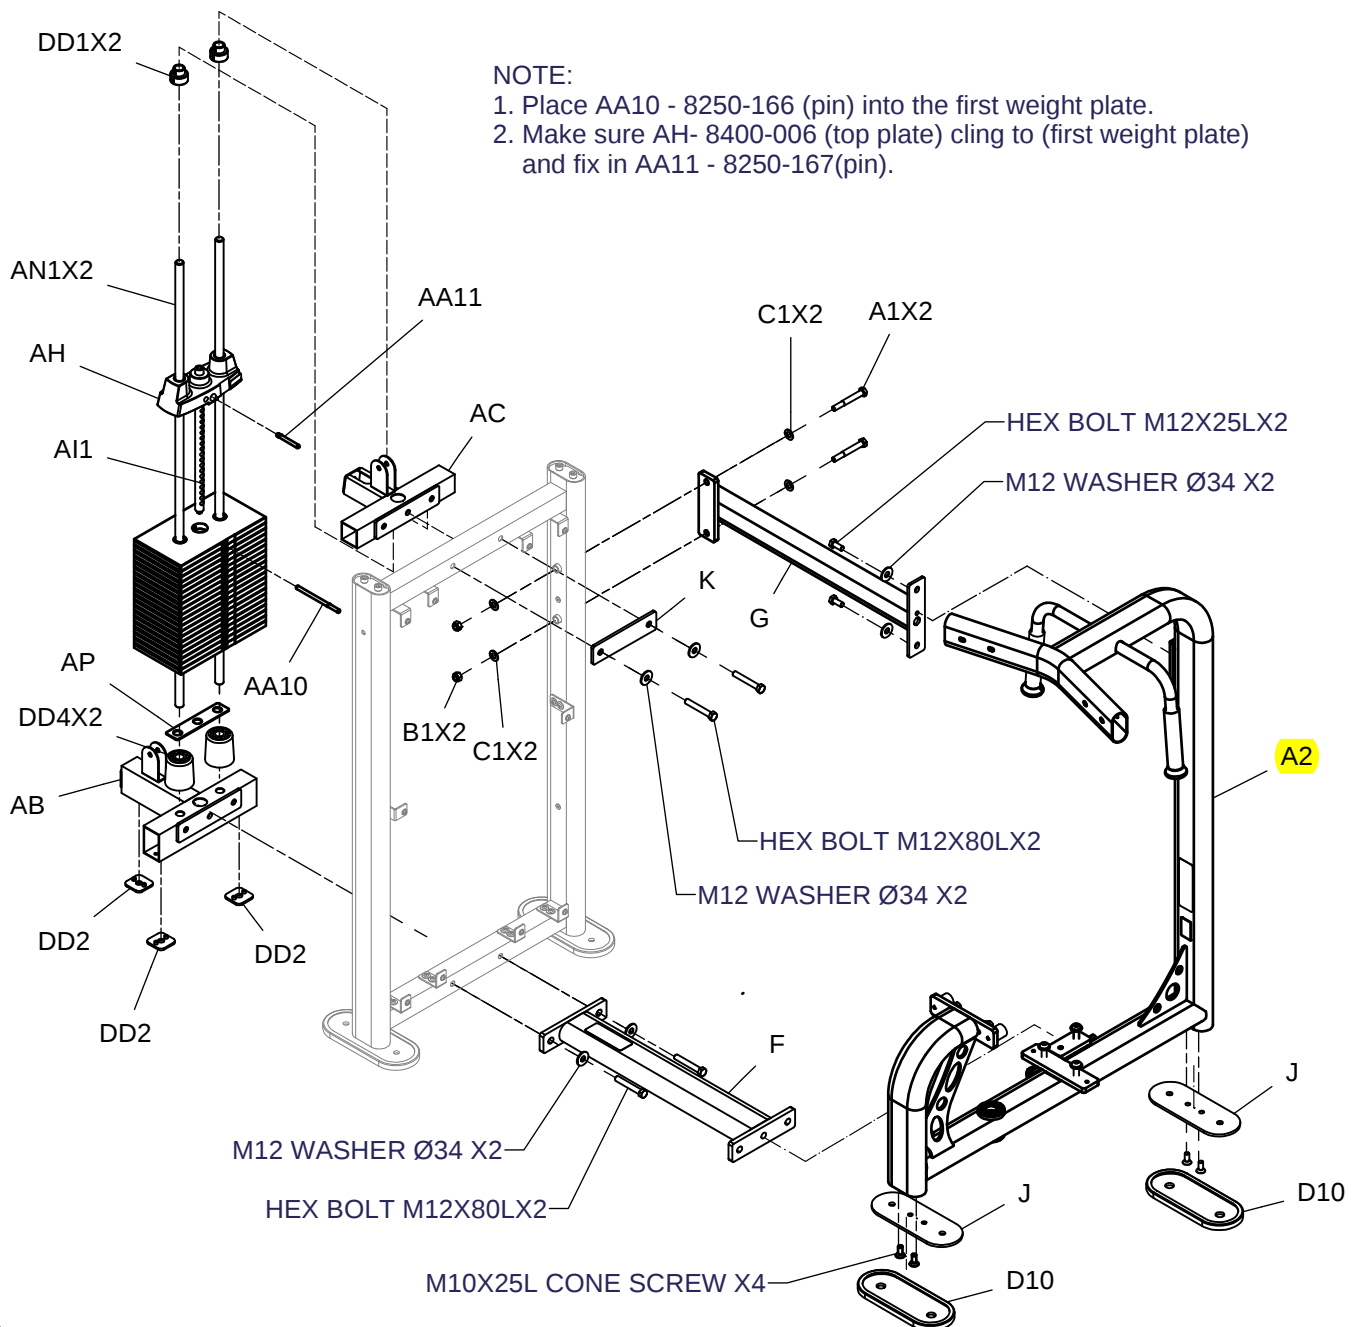


HOT1800 ASSEMBLY INSTRUCTIONS

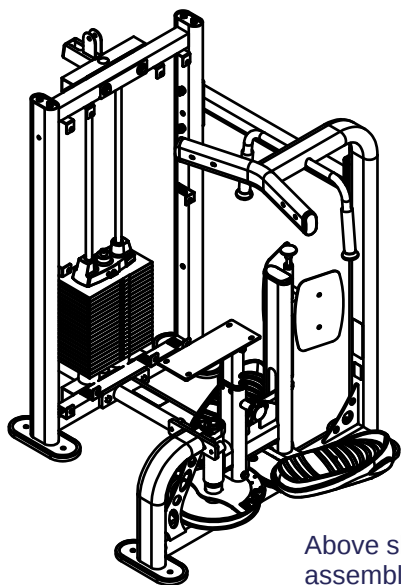 


Above shows STEP 4
assembled and completed

  
STEP1.

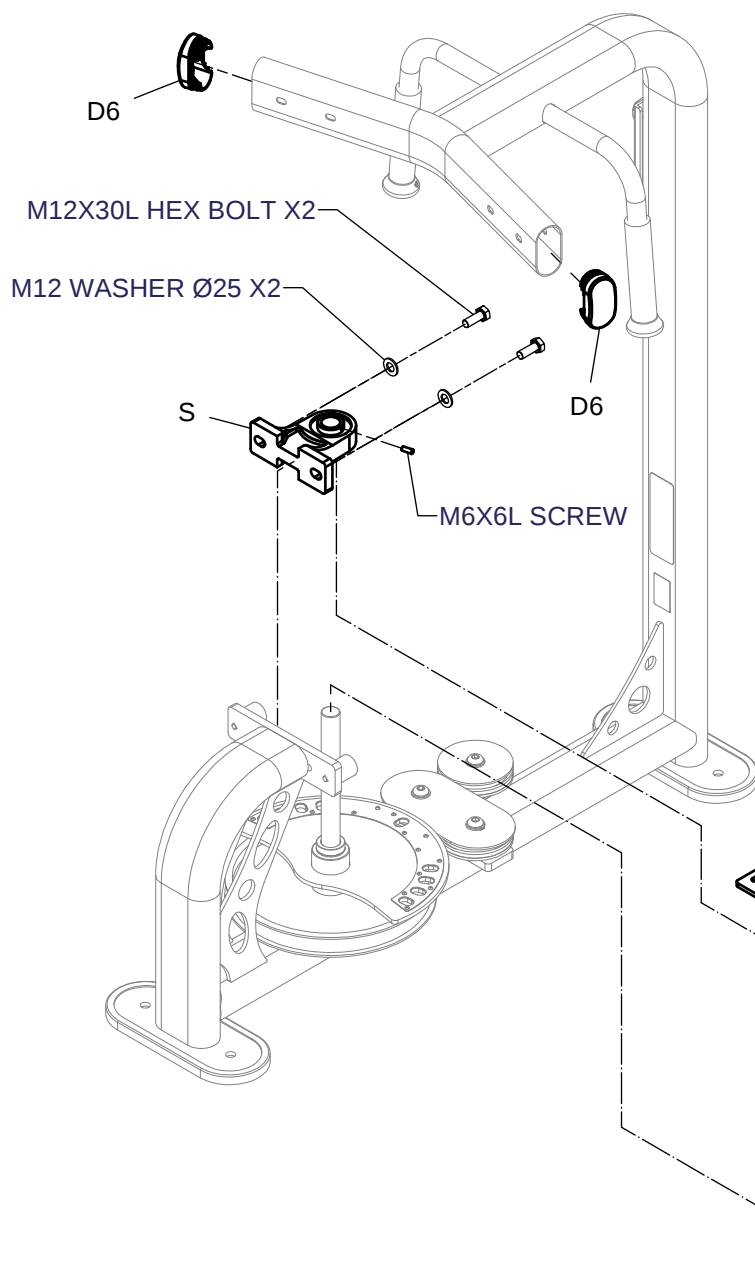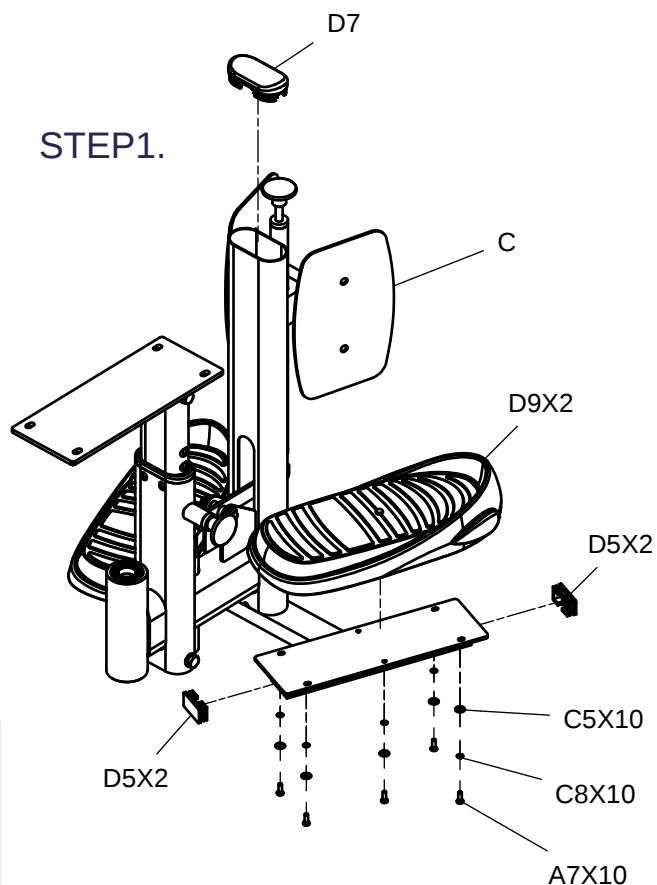

HOT1800 ASSEMBLY INSTRUCTIONS

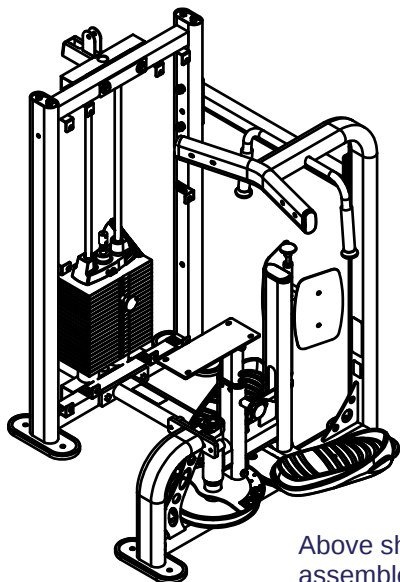 

 
Above shows STEP 5
assembled and completed

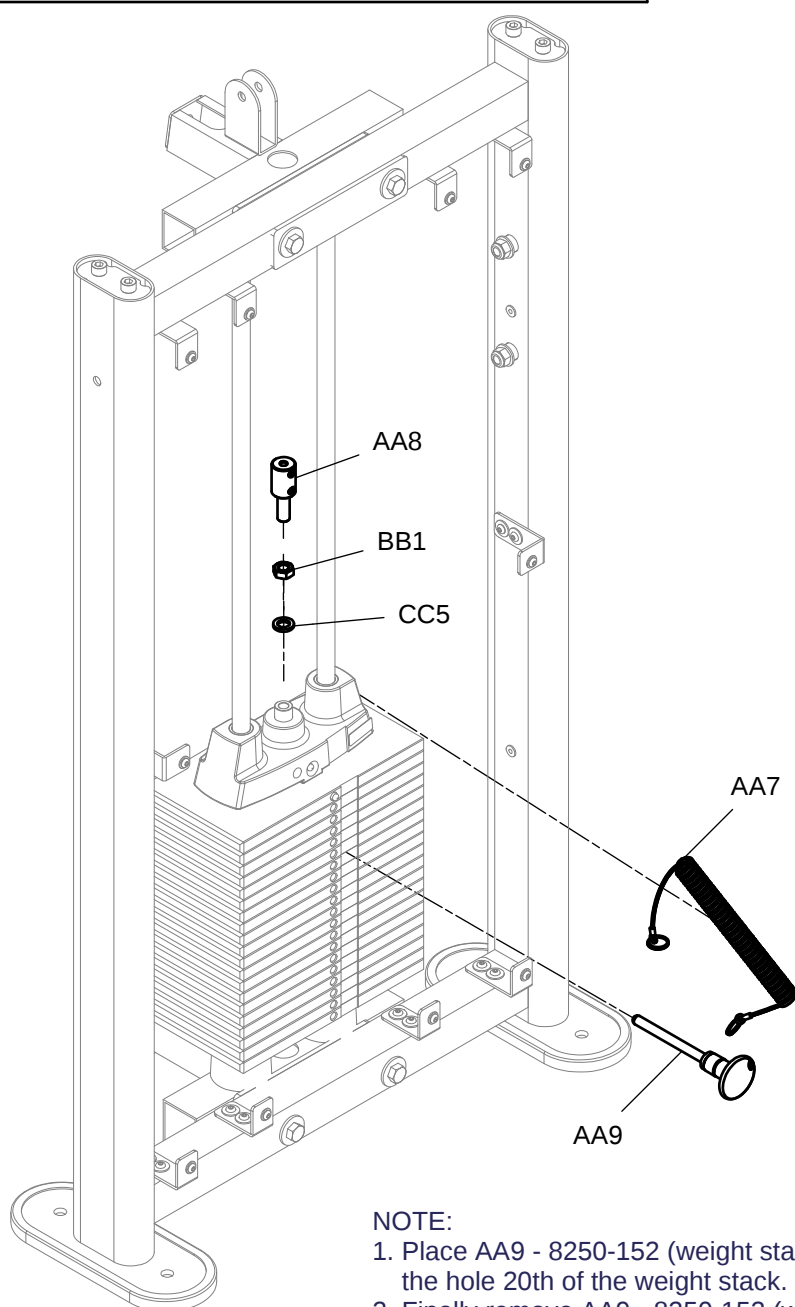

NOTE:


1. Place AA9 - 8250-152 (weight stack pin) into the the hole 20th of the weight stack.
2. Finally remove AA9 - 8250-152 (weight stack pin) and use as usual.

 HOT1800 ASSEMBLY INSTRUCTIONS

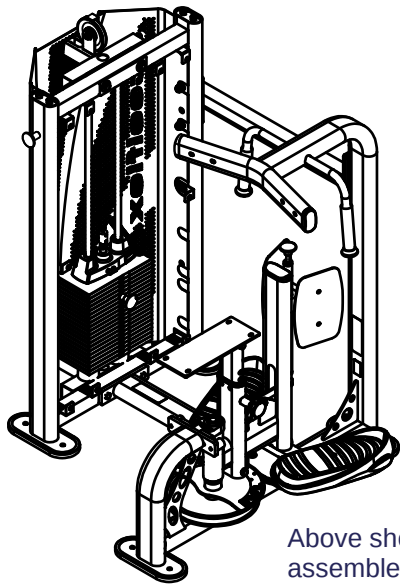


Above shows STEP 7
assembled and completed

 
STEP1.

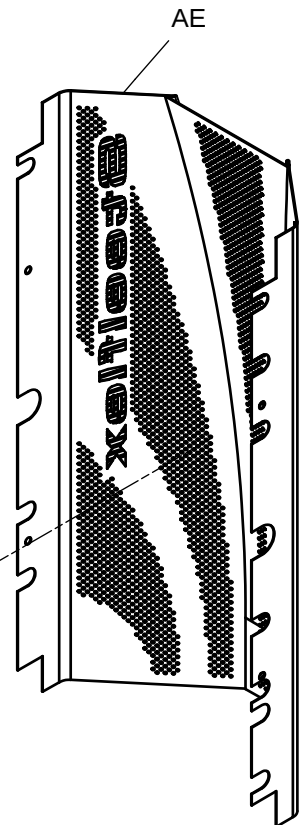

 STEP2.


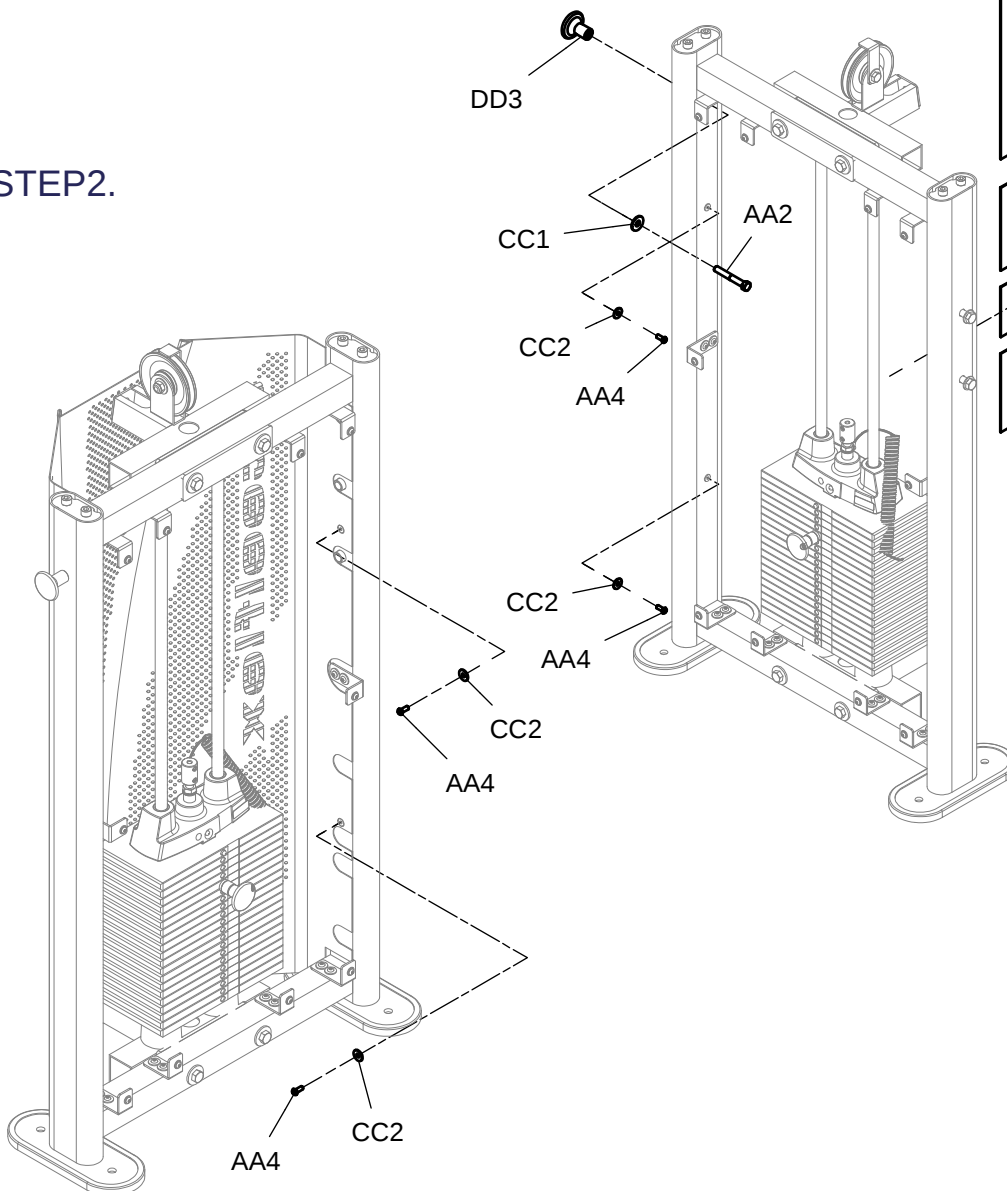


HOT1800 ASSEMBLY INSTRUCTIONS

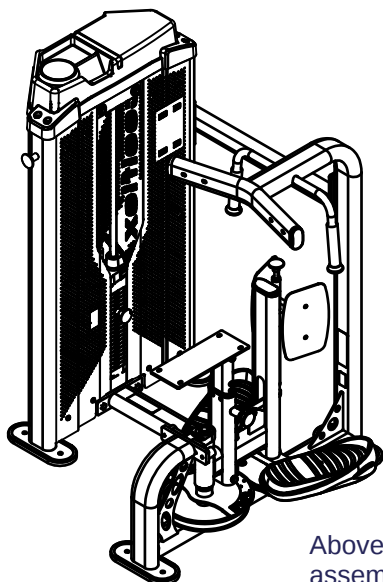 


Above shows STEP 8
assembled and completed

  
STEP.1

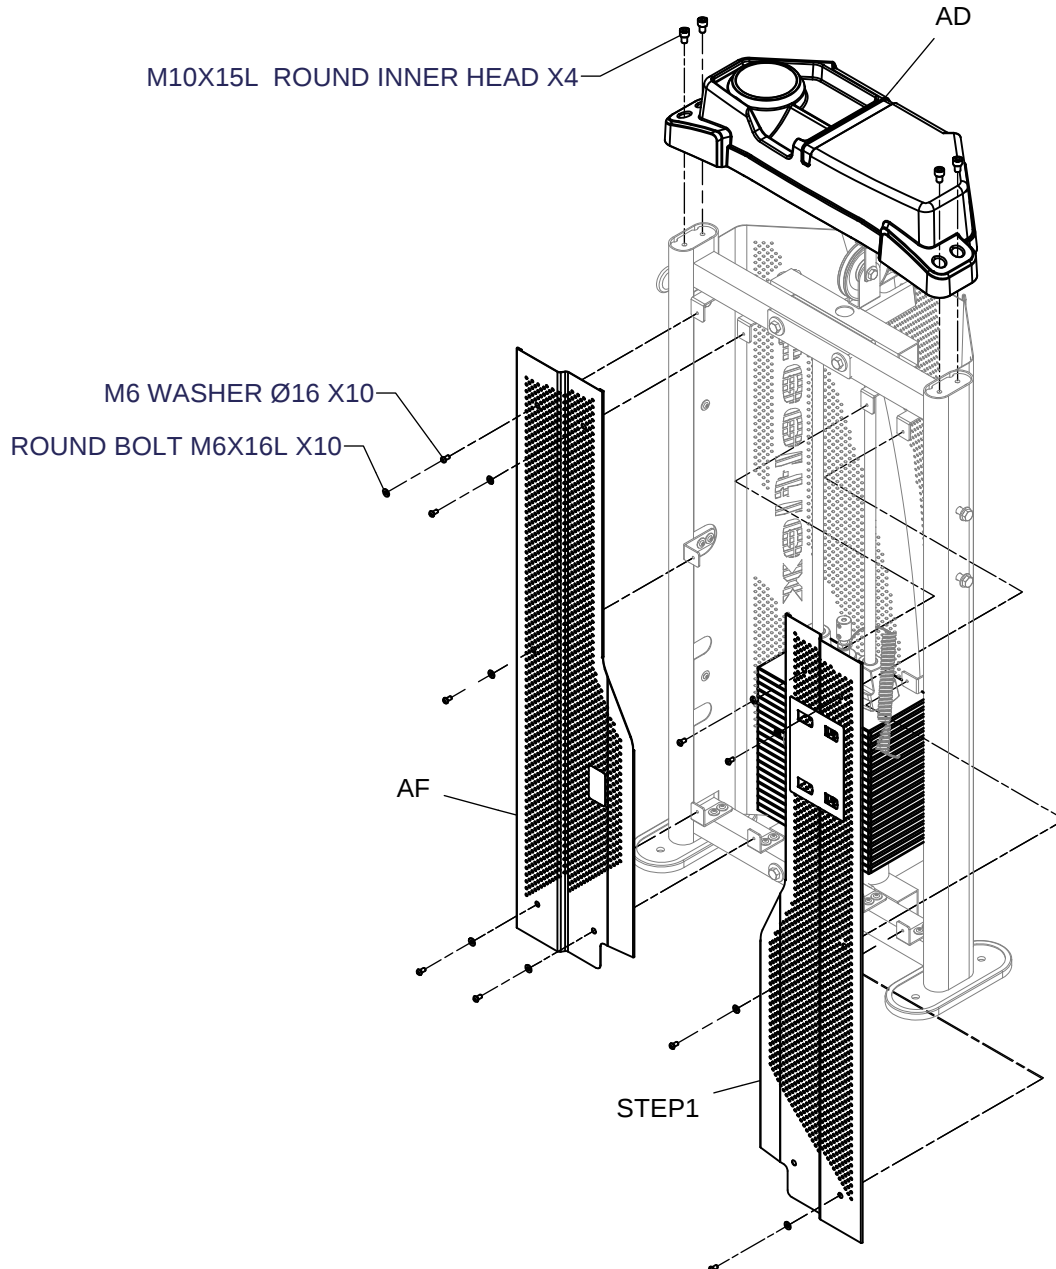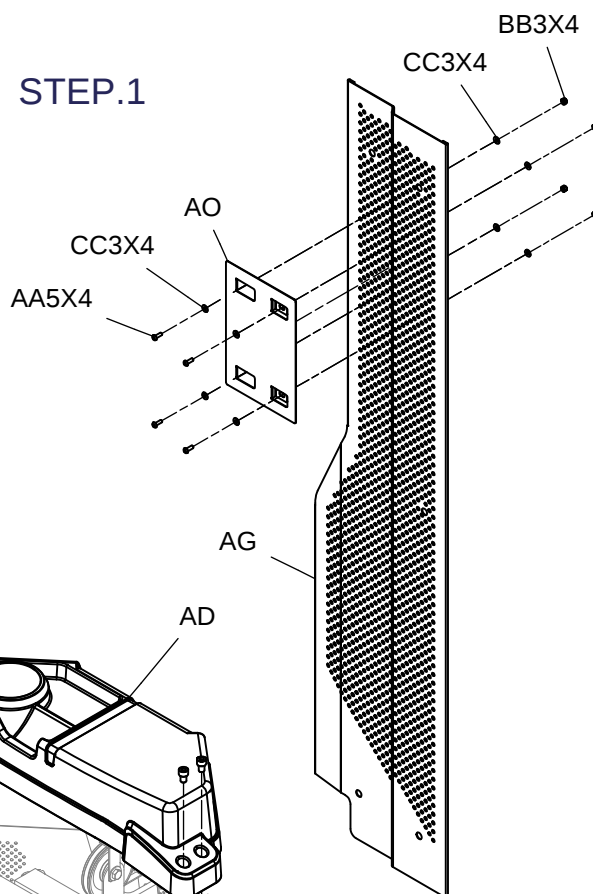

HOT1800 ASSEMBLY INSTRUCTIONS

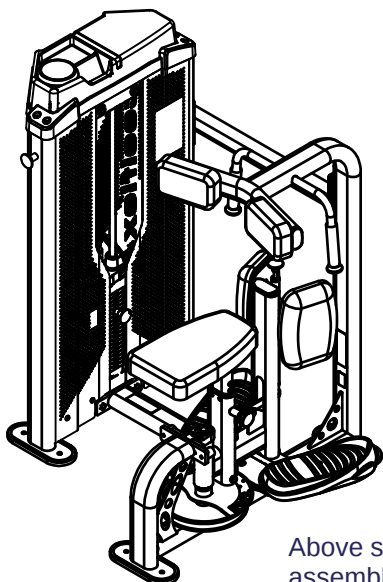 

 Above shows STEP 9
assembled and completed

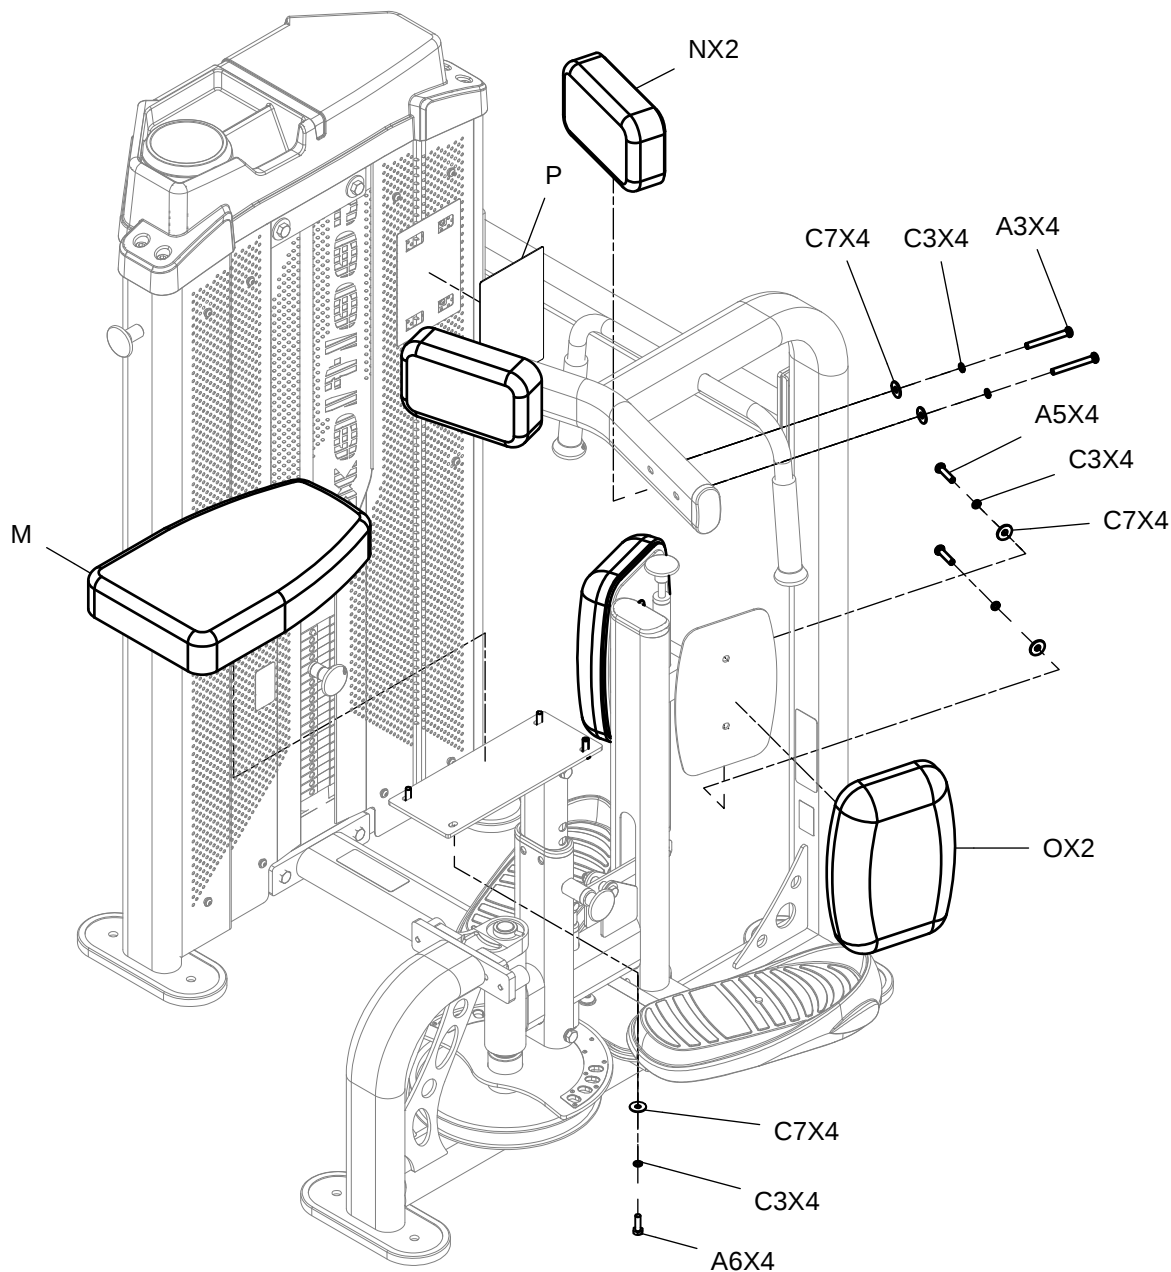

HOPE ASSEMBLY INSTRUCTIONS

DECAL REFERENCE

MAINTENANCE SCHEDULE

Check the function and integrity of the following components. As noted, inspect equipment before each workout. Replace all damaged, broken or worn components immediately.

		WEEKLY	DAILY
Cables:	Check tension, end fittings, and coating	✓	
	Check that locking nut at weight stack is tight	✓	
Upholstery:	Wipe down and dry	✓	
	Clean and condition	✓	
Frame:	Wipe down and dry	✓	
	Polish / Wax	✓	
Chrome:	Wipe down and dry	✓	
	Polish / Lubricate	✓	
Nut / Bolts / Fasteners:	Tighten and / or adjust as needed	✓	
Guide Rods:	Lubricate and clean	✓	
Linear Rods:	Lubricate and clean	✓	
Seat Sleeves:	Lubricate and clean	✓	
Adjustments / Locking Pins / Tightening Knobs		✓	
Weight Stack Pins		✓	
Warning Instruction Labels		✓	
Springs / Pop Pins		✓	
Anti Skid Surfaces		✓	
Hand Grips / Rollers		✓	

For Steelflex Customer Service
Call +886 2 27209980

9440-258

 
 
THERE IS A RISK ASSUMED BY INDIVIDUALS WHO USE THIS TYPE OF EQUIPMENT. TO MINIMIZE RISK, YOU MUST FOLLOW THESE RULES:

1. Inspect equipment before each workout. Check that all nuts, bolts, screws and pop pins are in place and fully tightened. Also, before use, check cables for signs of wear. Replace all worn parts immediately. Never use machine if any parts are damaged or missing.
2. Keep clear of the cables and all moving parts when the machine is in use.
3. Always make sure all Snap Links are closed when doing any cable/pulley/strap exercises.
4. Exercise with care. Perform your exercises at a smooth moderate pace; never perform jerky or uncoordinated movements that may cause injury.
5. It is recommended that you should workout with a training partner.
6. Do not allow children or minors to play on or around this equipment.
7. If unsure of proper use of equipment, call Steelflex Customer Service +886 2 27209980.
8. **WARNING:** Consult your physician before starting your exercise program. For your own safety, do not begin any exercise program without proper instruction.

9440-259



9440-047

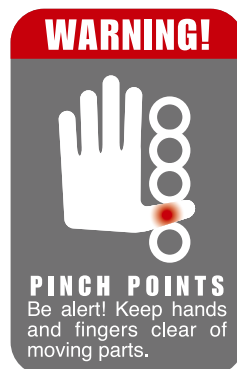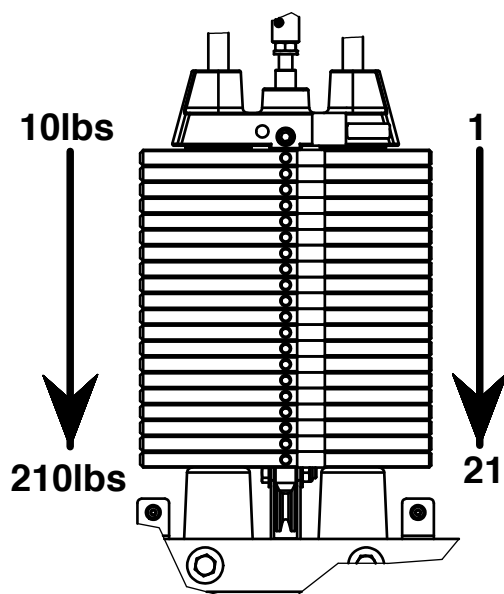

9440-117