

*EXM2500 Maintenance



*EXM2500S



* Customers can put some grease on pivot points (red circle place), with brass or gunmetal bushings.




* Let's maintain your machine!

EXM-2500B PARTS ILLUSTRATION SHEET

A [1PCS]




G [1PCS]

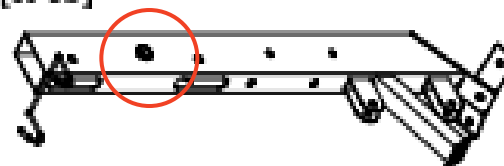


B [1PCS]



H [1PCS]

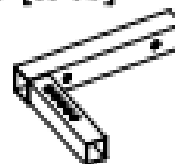


I-1 [1PCS]

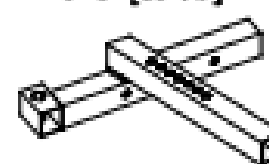


C [1PCS]




J-1 [1PCS]

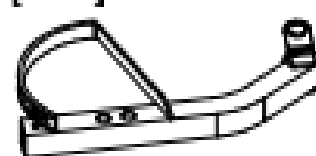


K [1PCS]

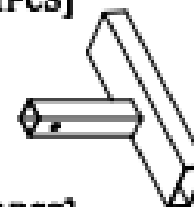

D-1 [1PCS]

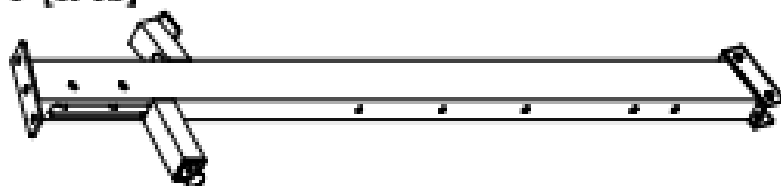

L [1PCS]

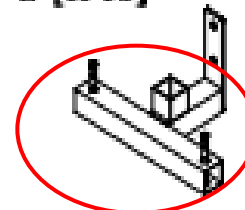


M [1PCS]




E [1PCS]



F-2 [1PCS]

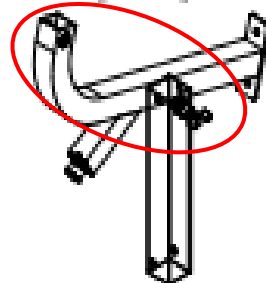

N [1PCS]

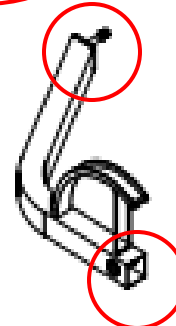


O [1PCS]




EXM-2500B PARTS ILLUSTRATION SHEET

P [1PCS]

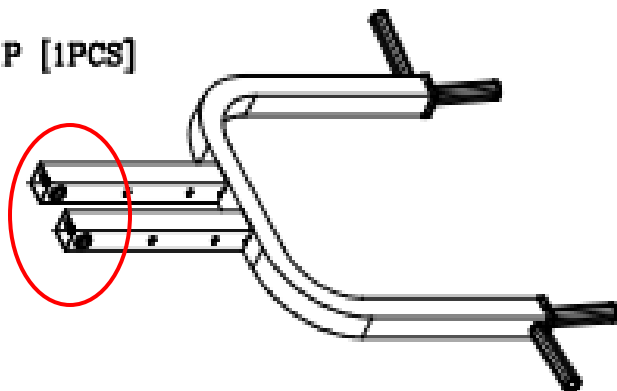


X [2PCS]



Y [1PCS]

LB1200A



Q [2PCS]



T [1PCS]



Z [1PCS]

LB500A



R [1PCS]


9124-005




S [1PCS] 9124-001



AA [1PCS]

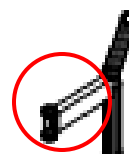

AB [1PCS]

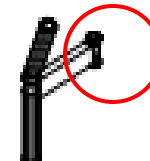

U [2PCS] 8312-090



U-2 [1PCS]



AC [2PCS] 9114-001



AD [2PCS]




V [1PCS]



W [1PCS]





EXM-2500.4



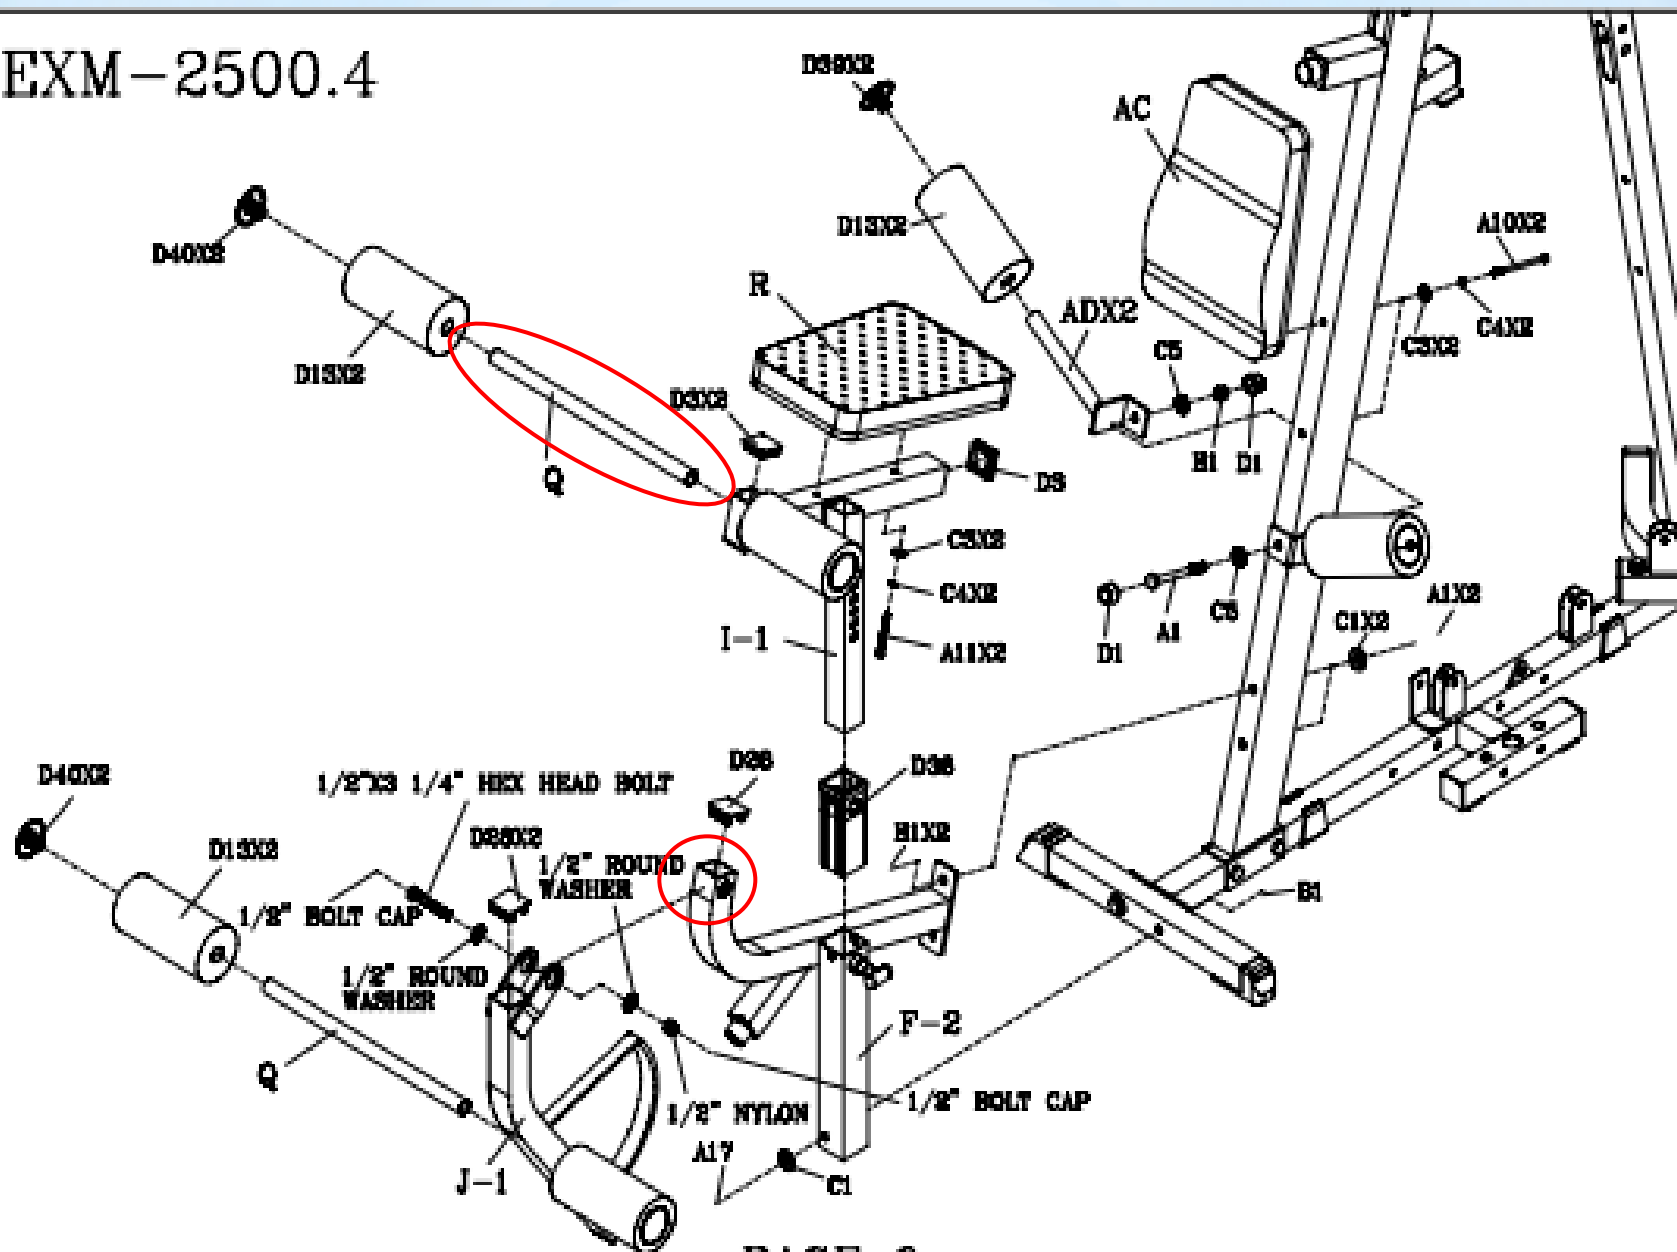


EXM-2500.4


NEED TO LOOSEN BOTH
ALLEN HEAD BOLT IN
ORDER TO REMOVE SHAFT

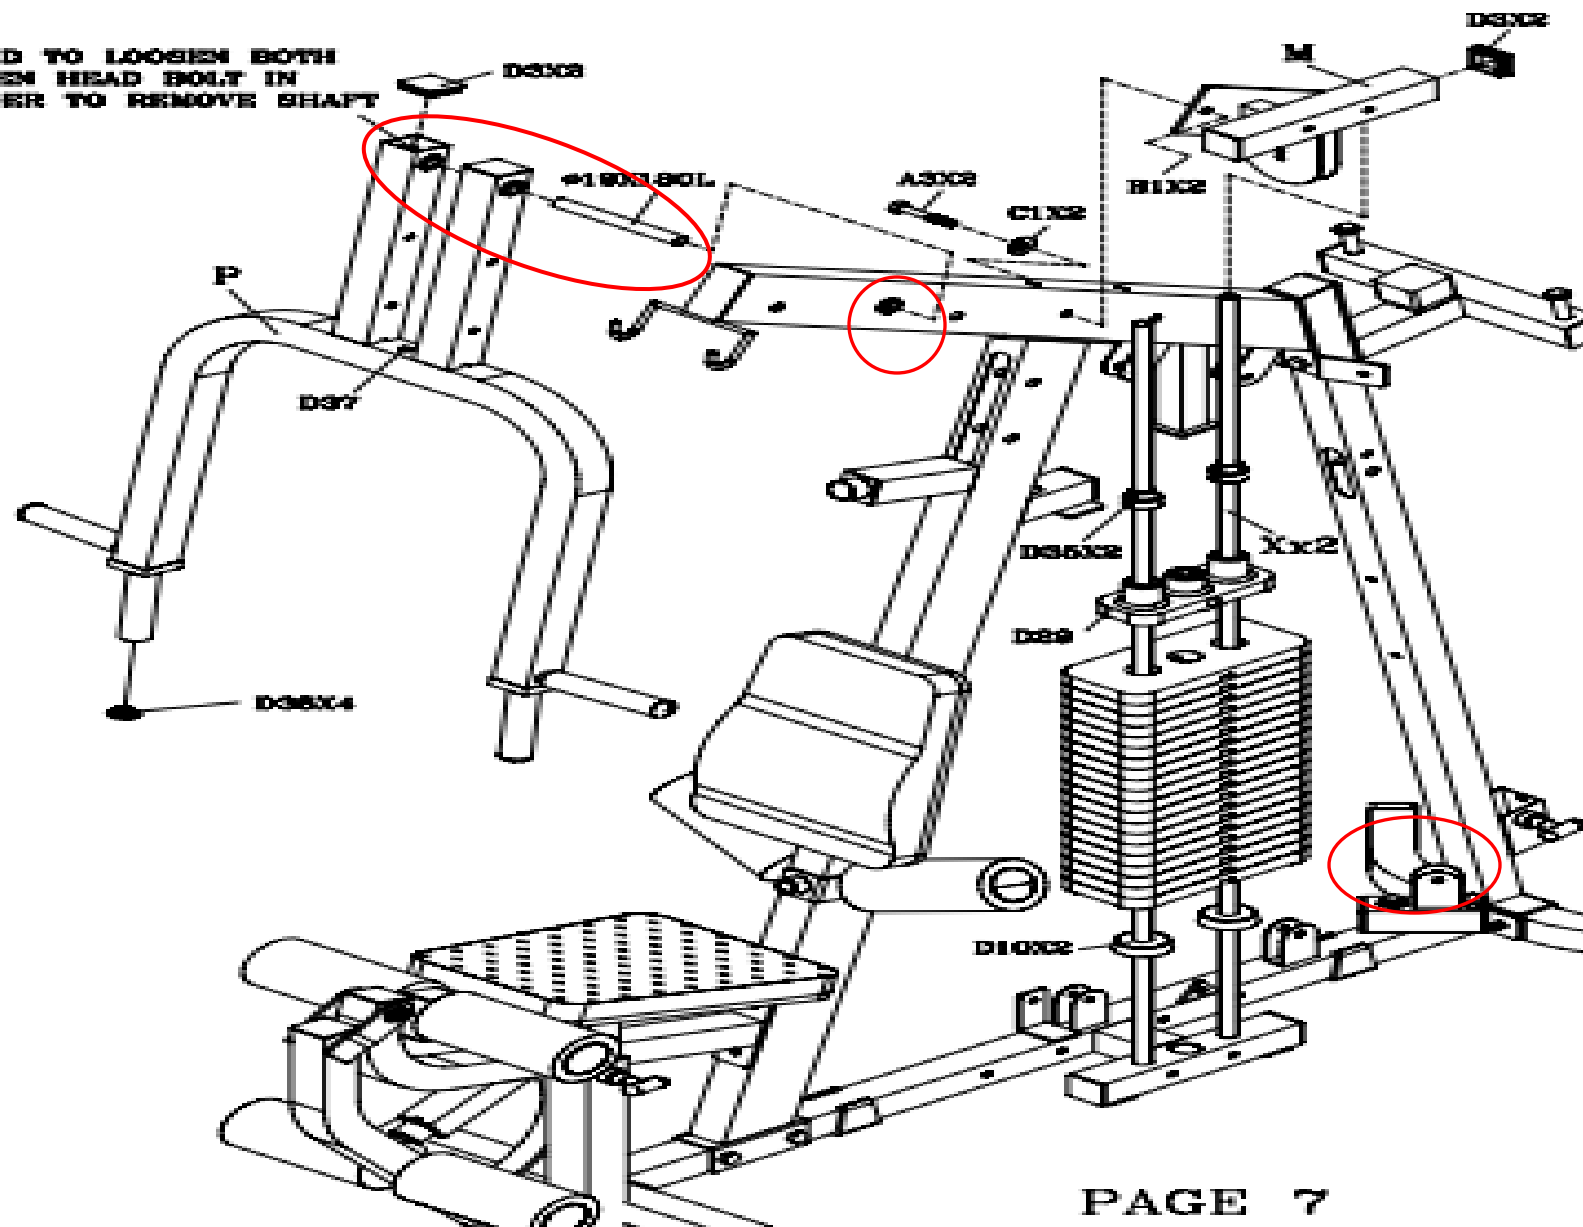

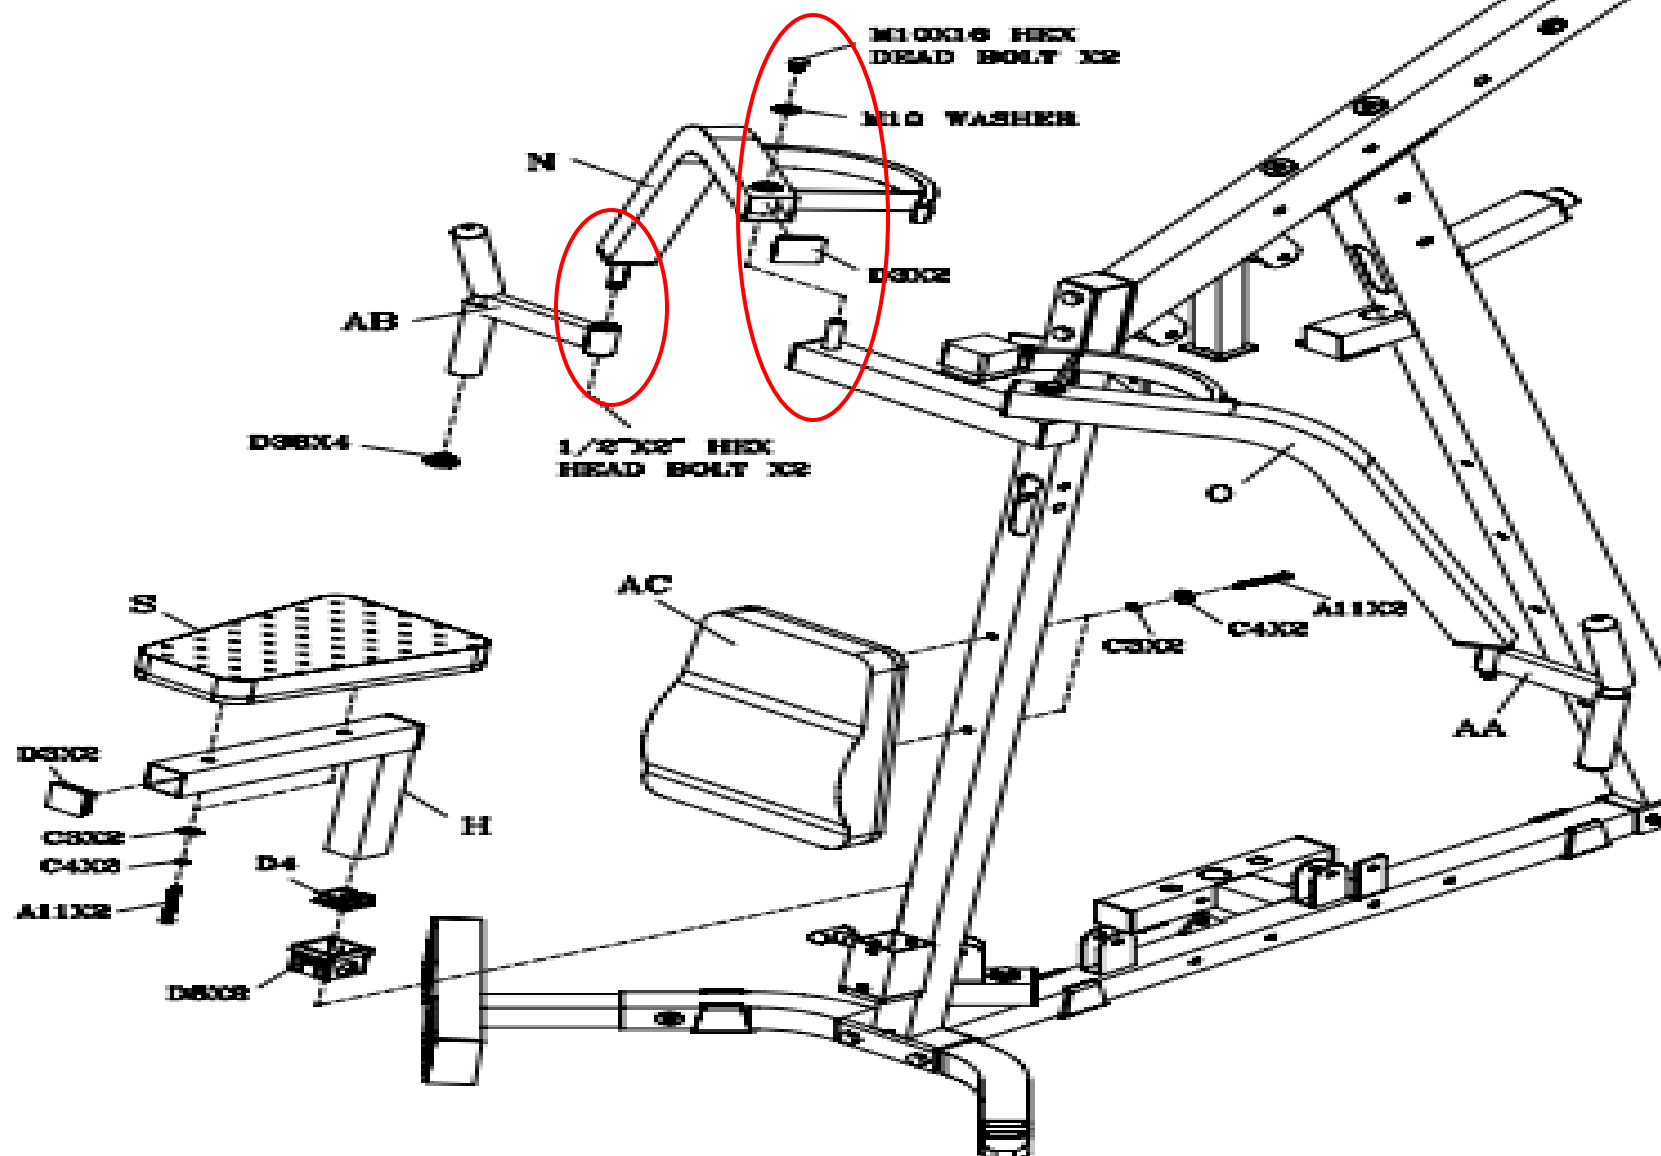


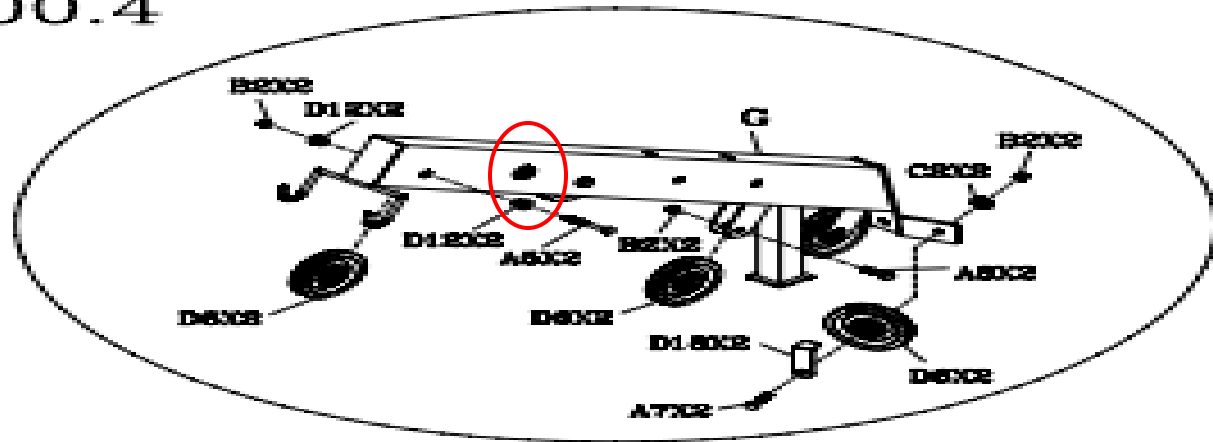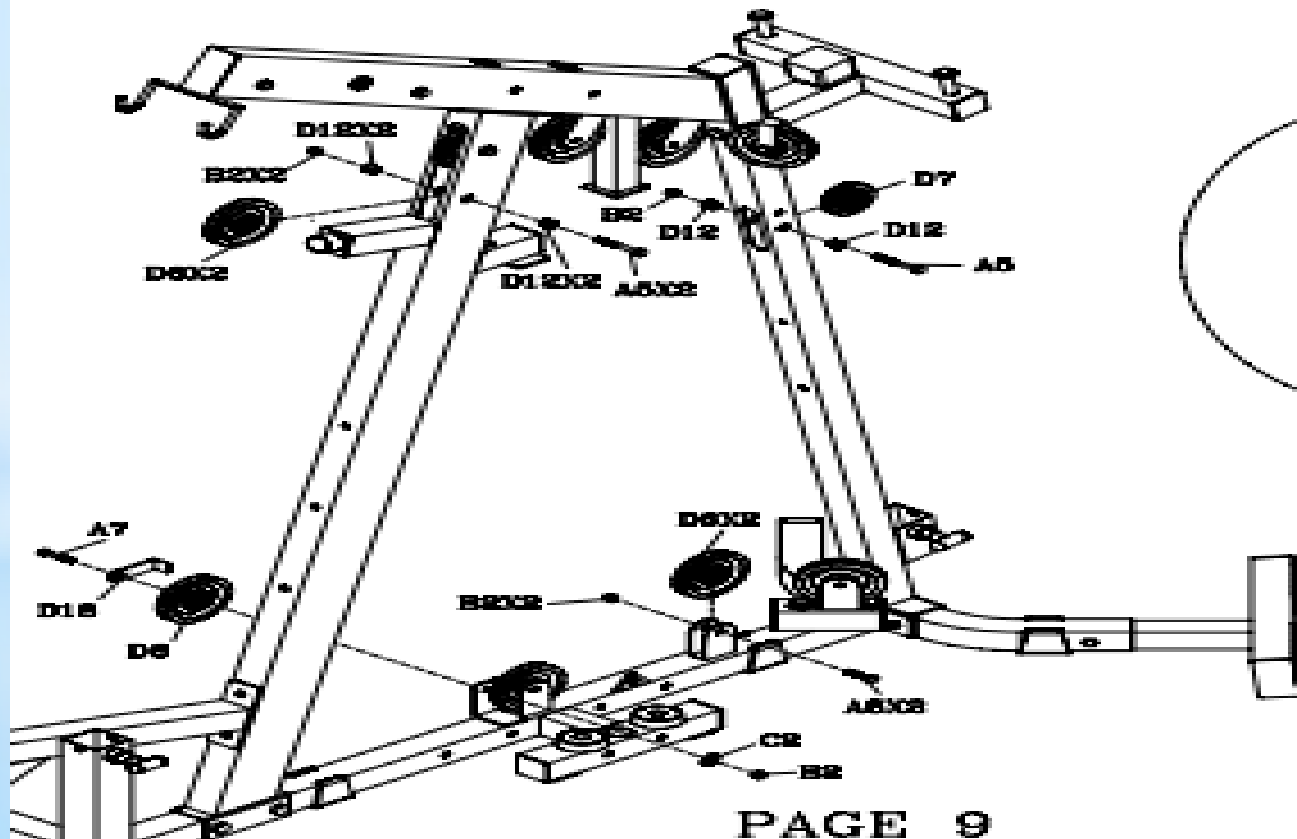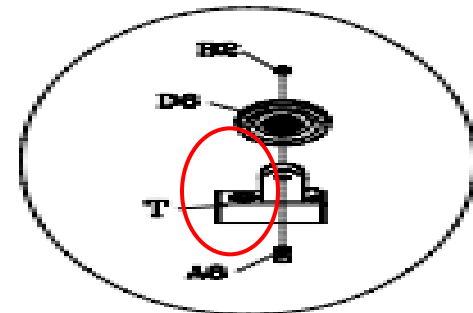




IXM-2500.4

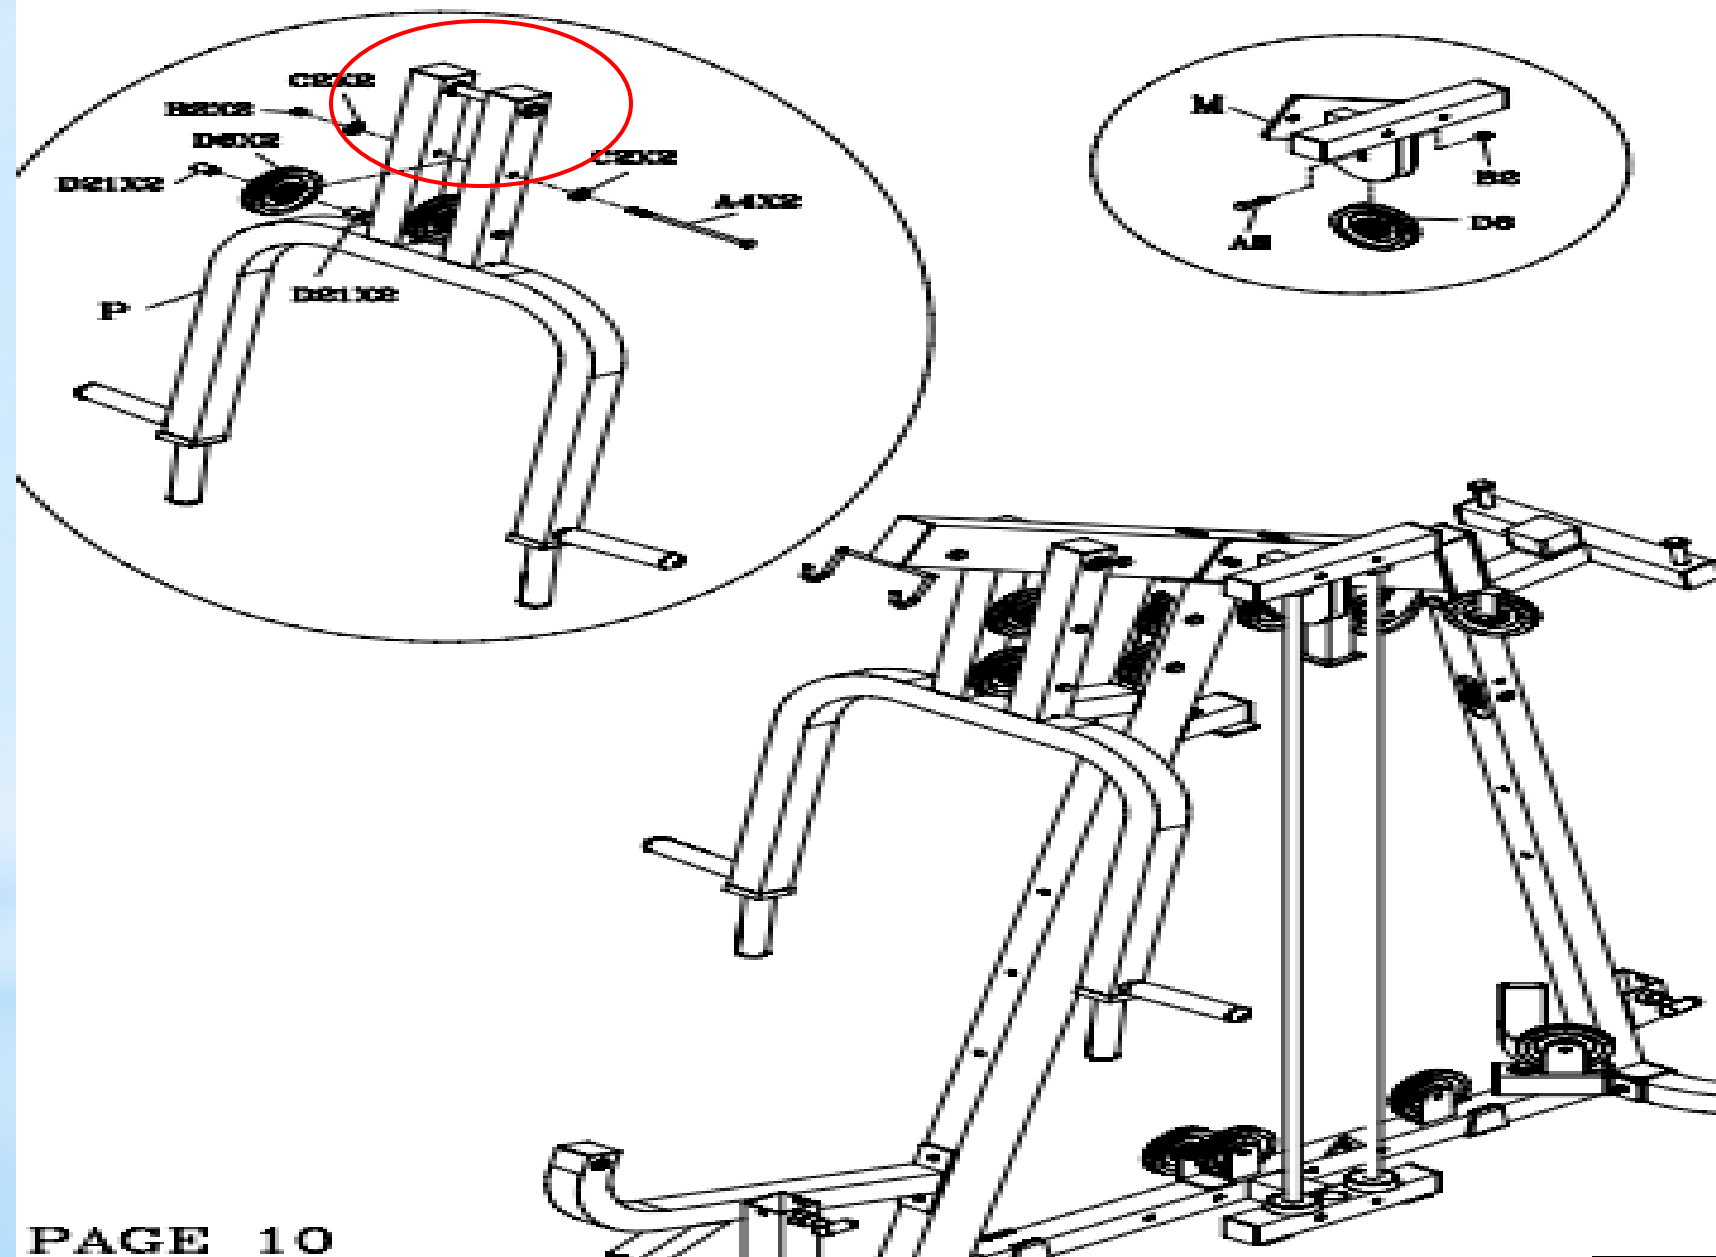





EXM-2500.4

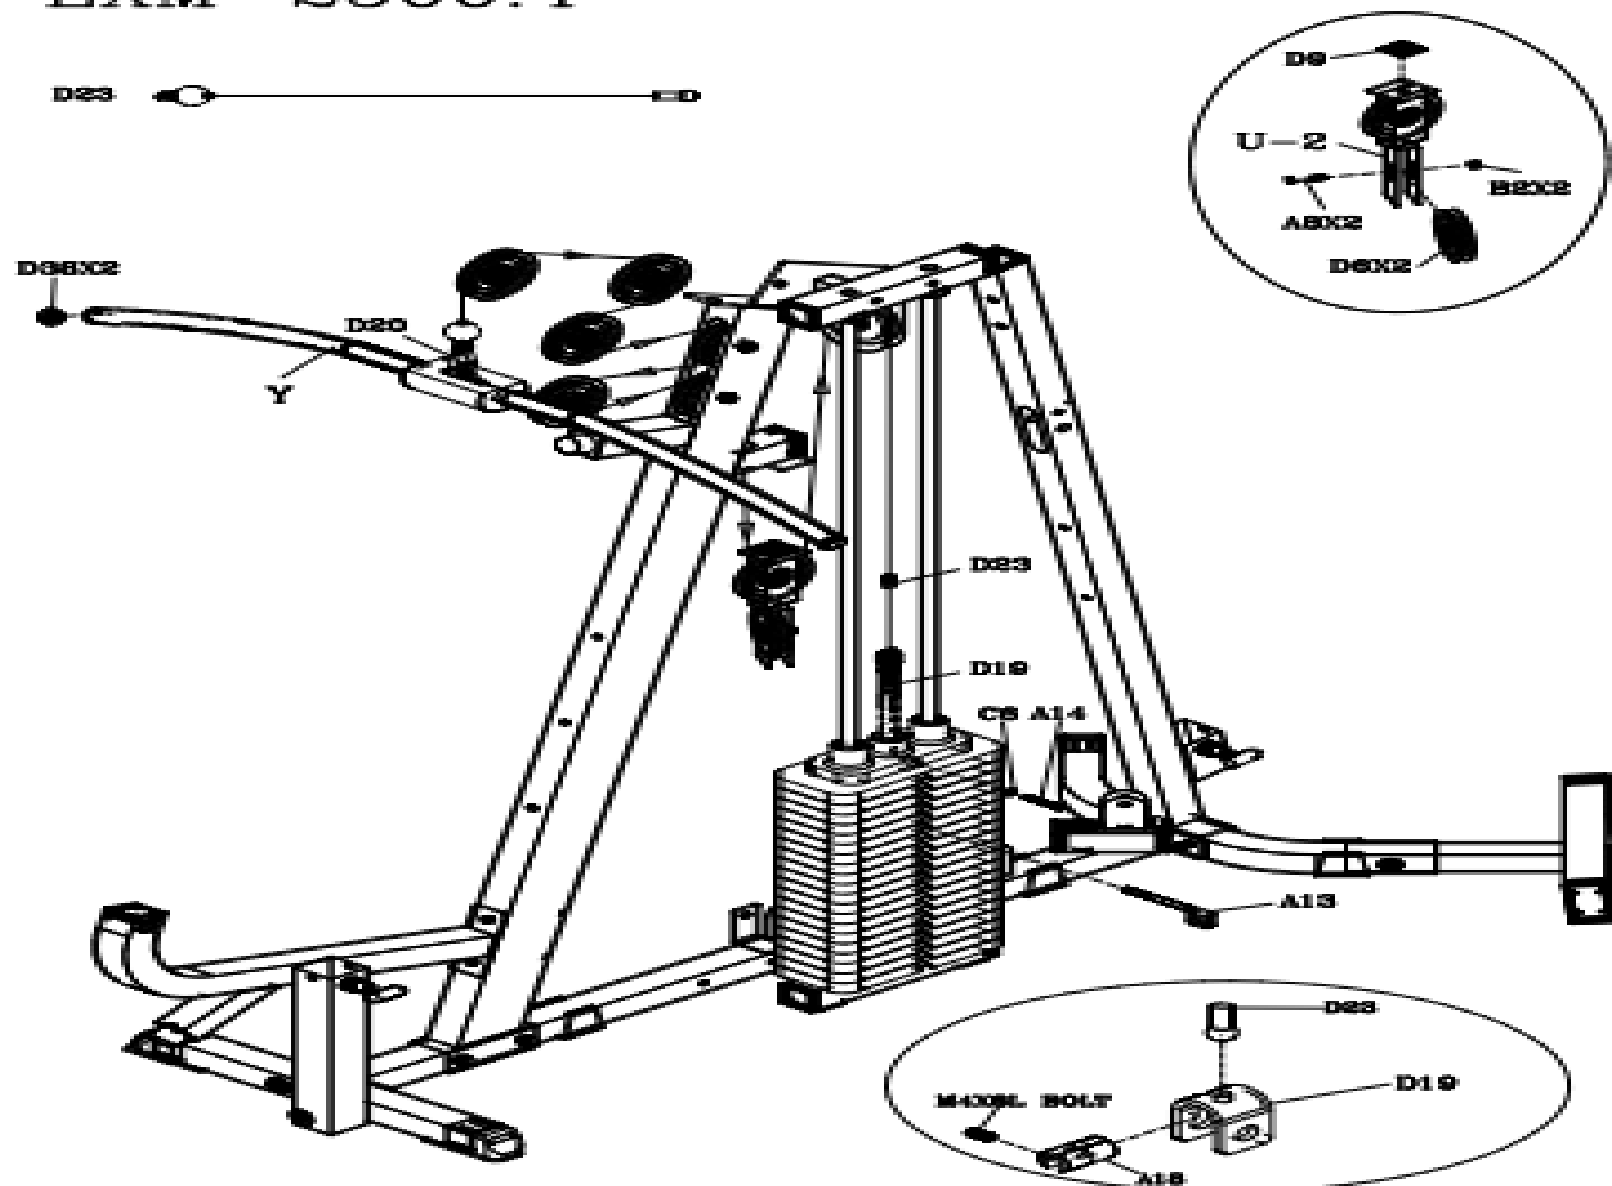


EXM-2500.4

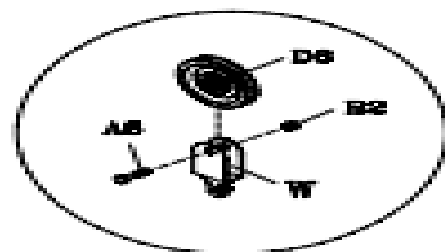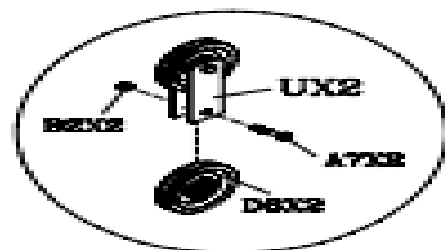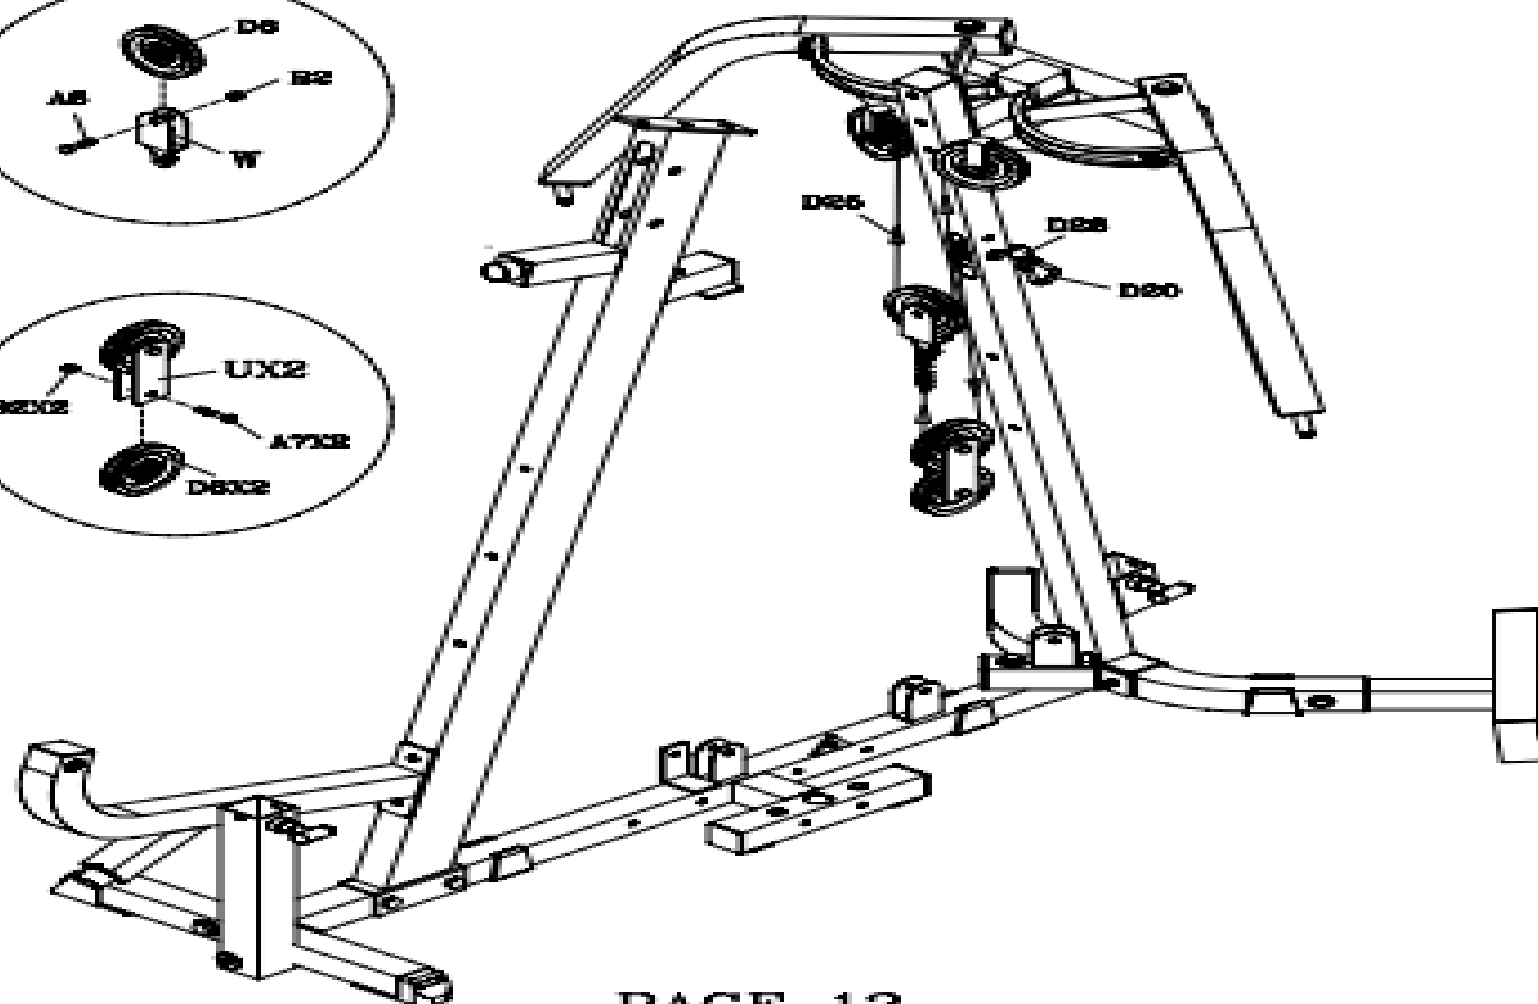

EXM-2500.4

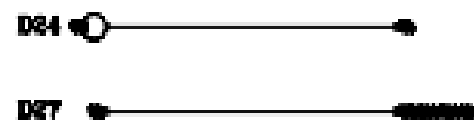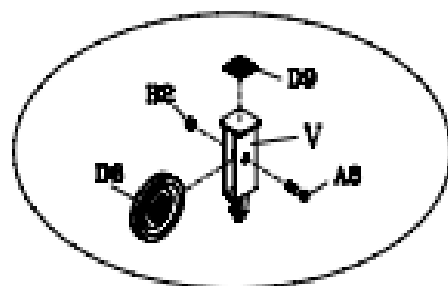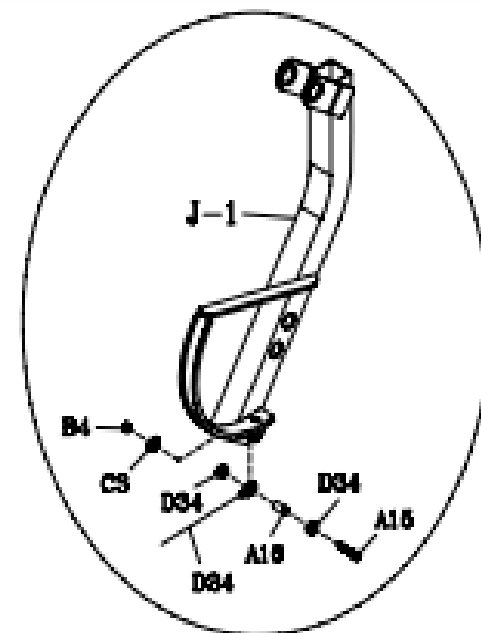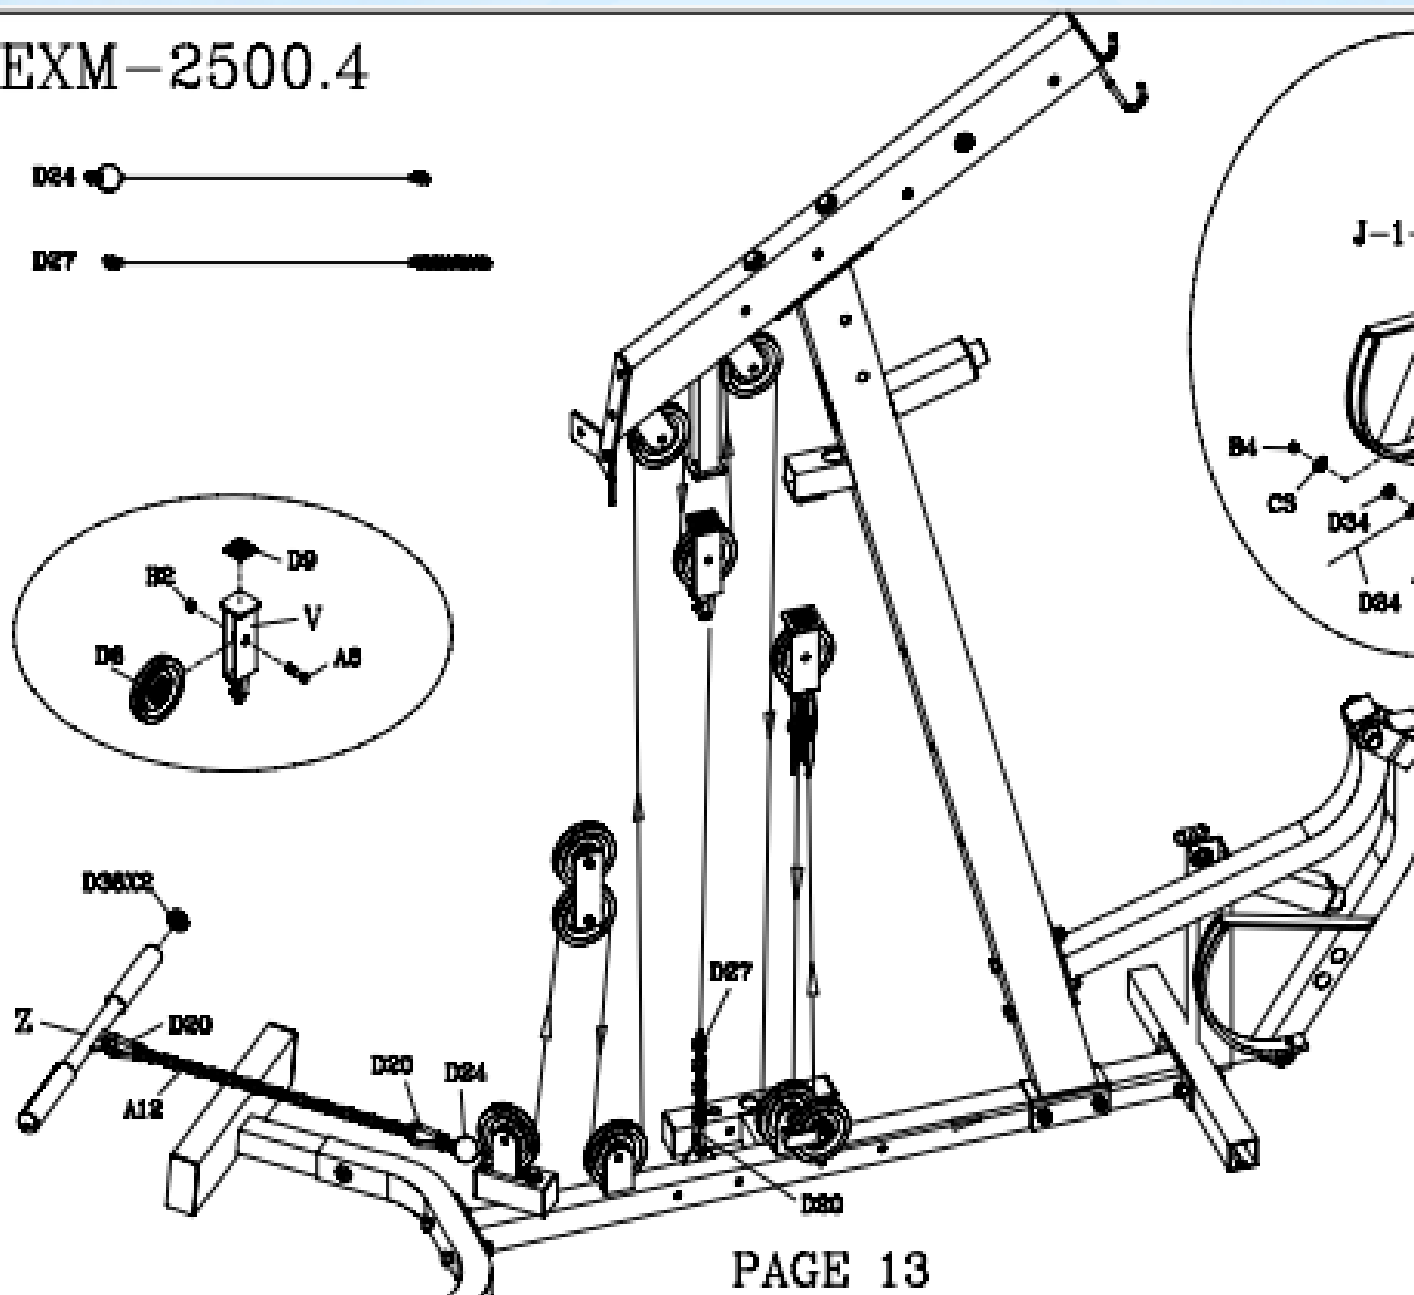


LP-25C

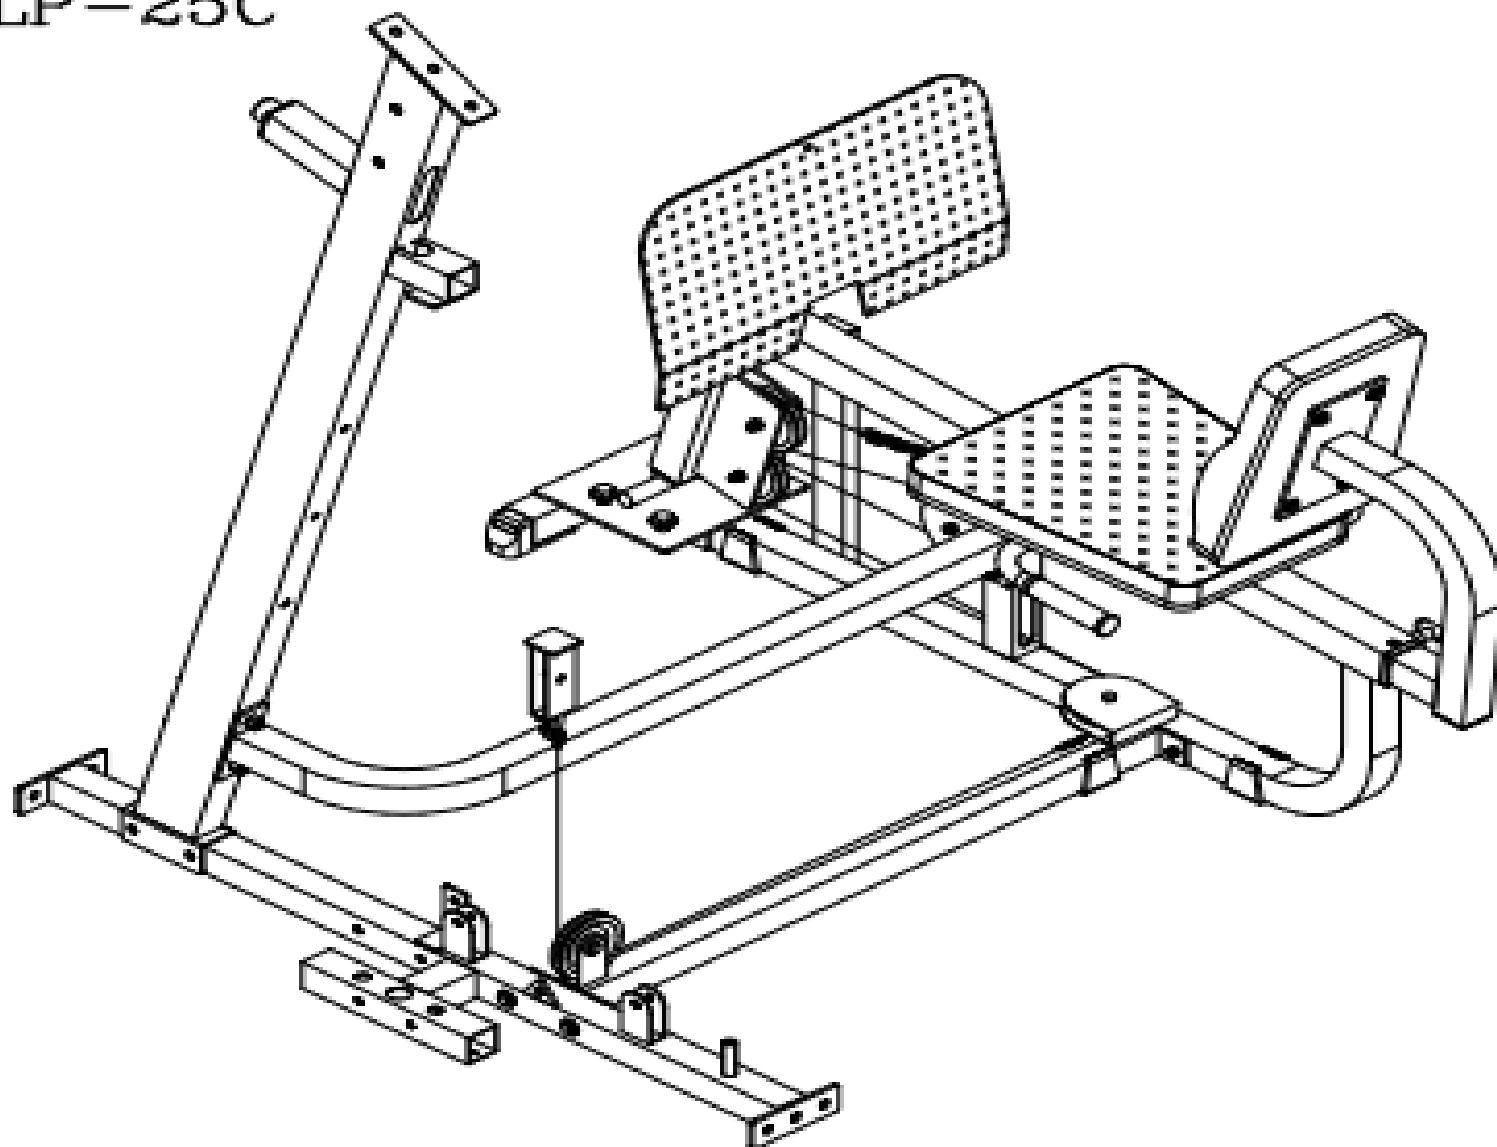


VERSION 9811

LP-25C PARTS ILLUSTRATION SHEET

A [1PCS]

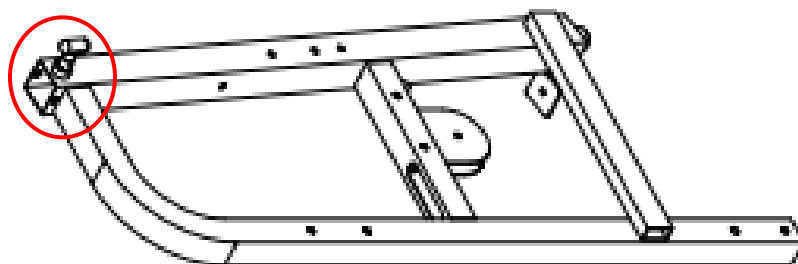

E [1PCS]

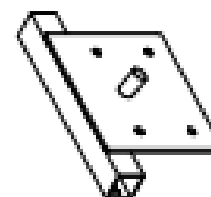


F [2PCS]




B [1PCS]



G [1PCS]

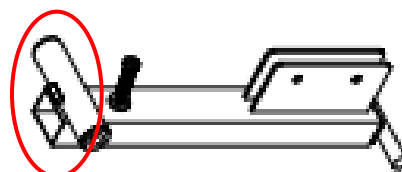


H [1PCS]

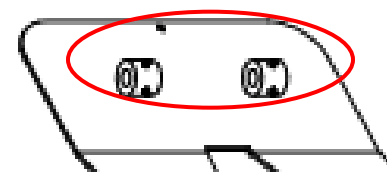


C [1PCS]



D [1PCS]

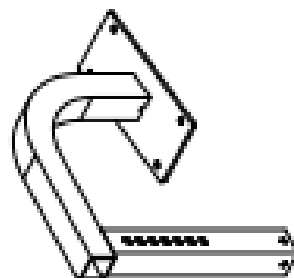

J [1PCS]

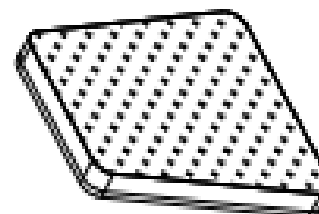


K [1PCS]




I [2PCS]



LP-25C

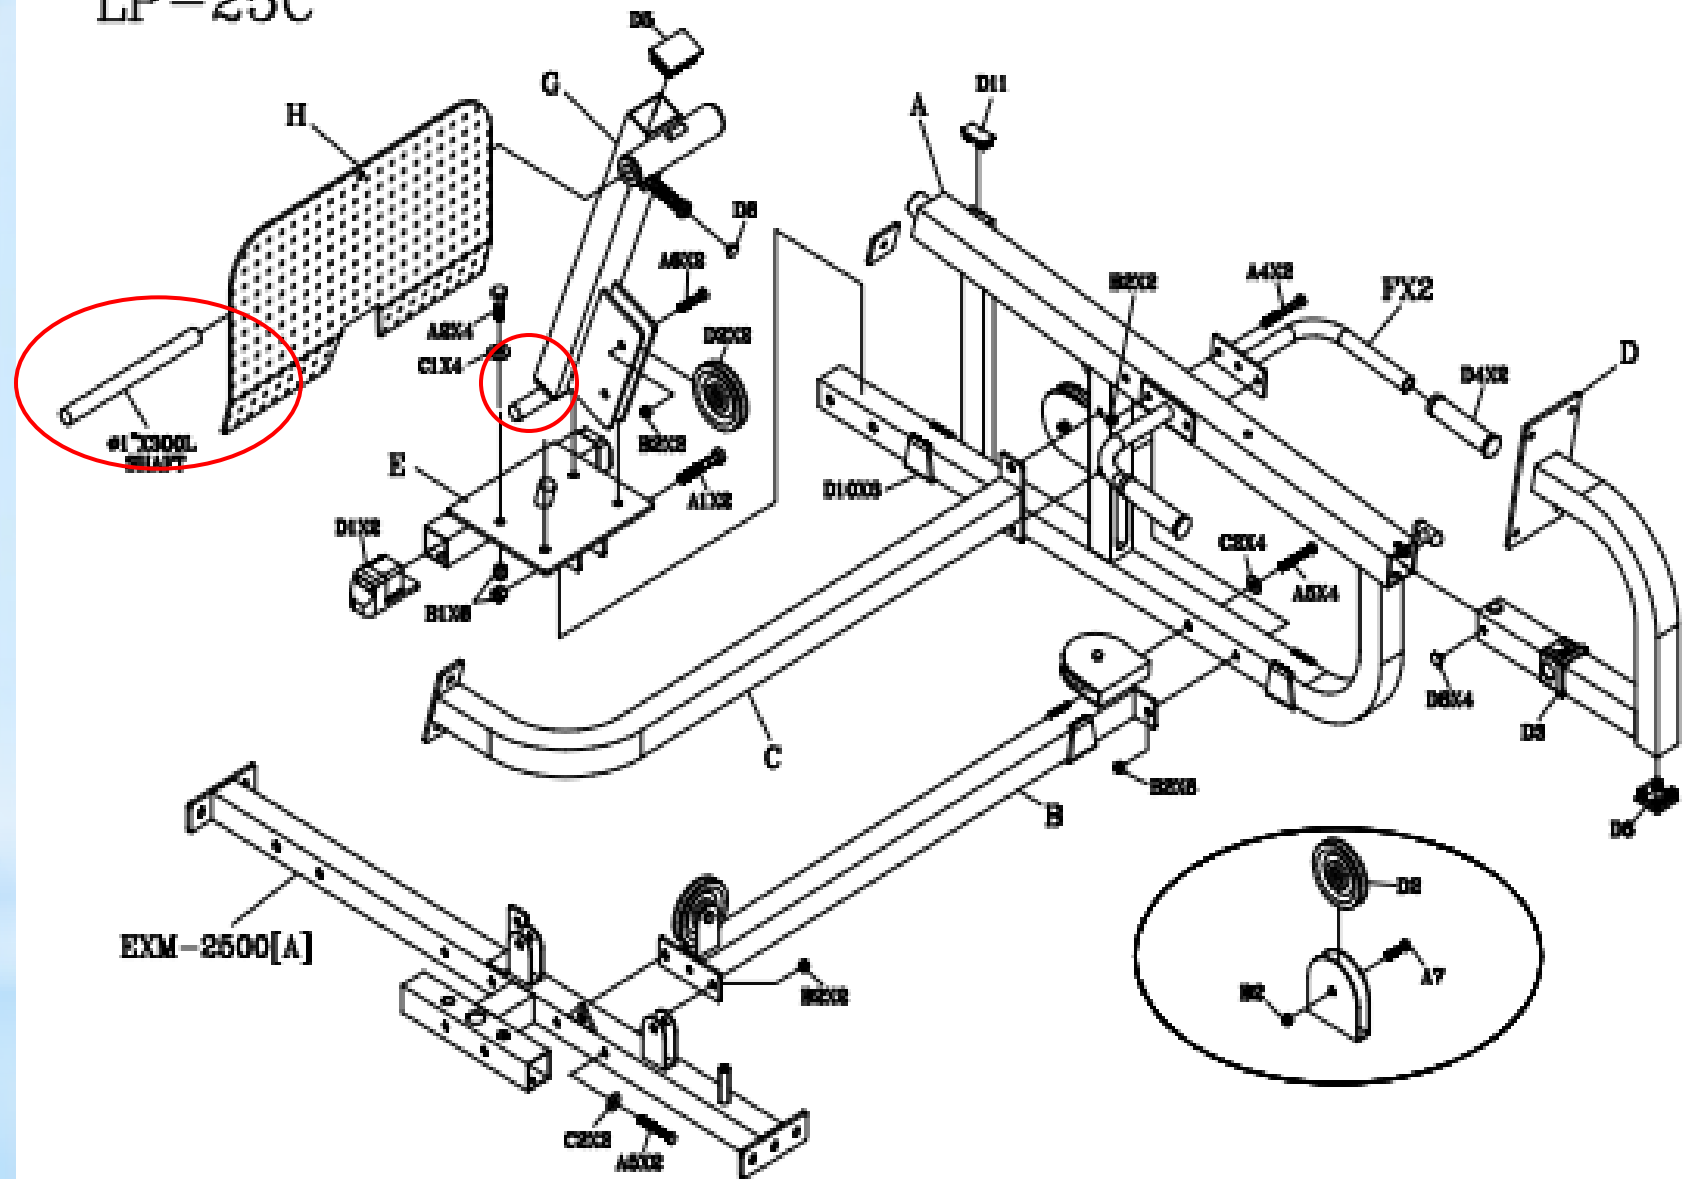

LP-25C

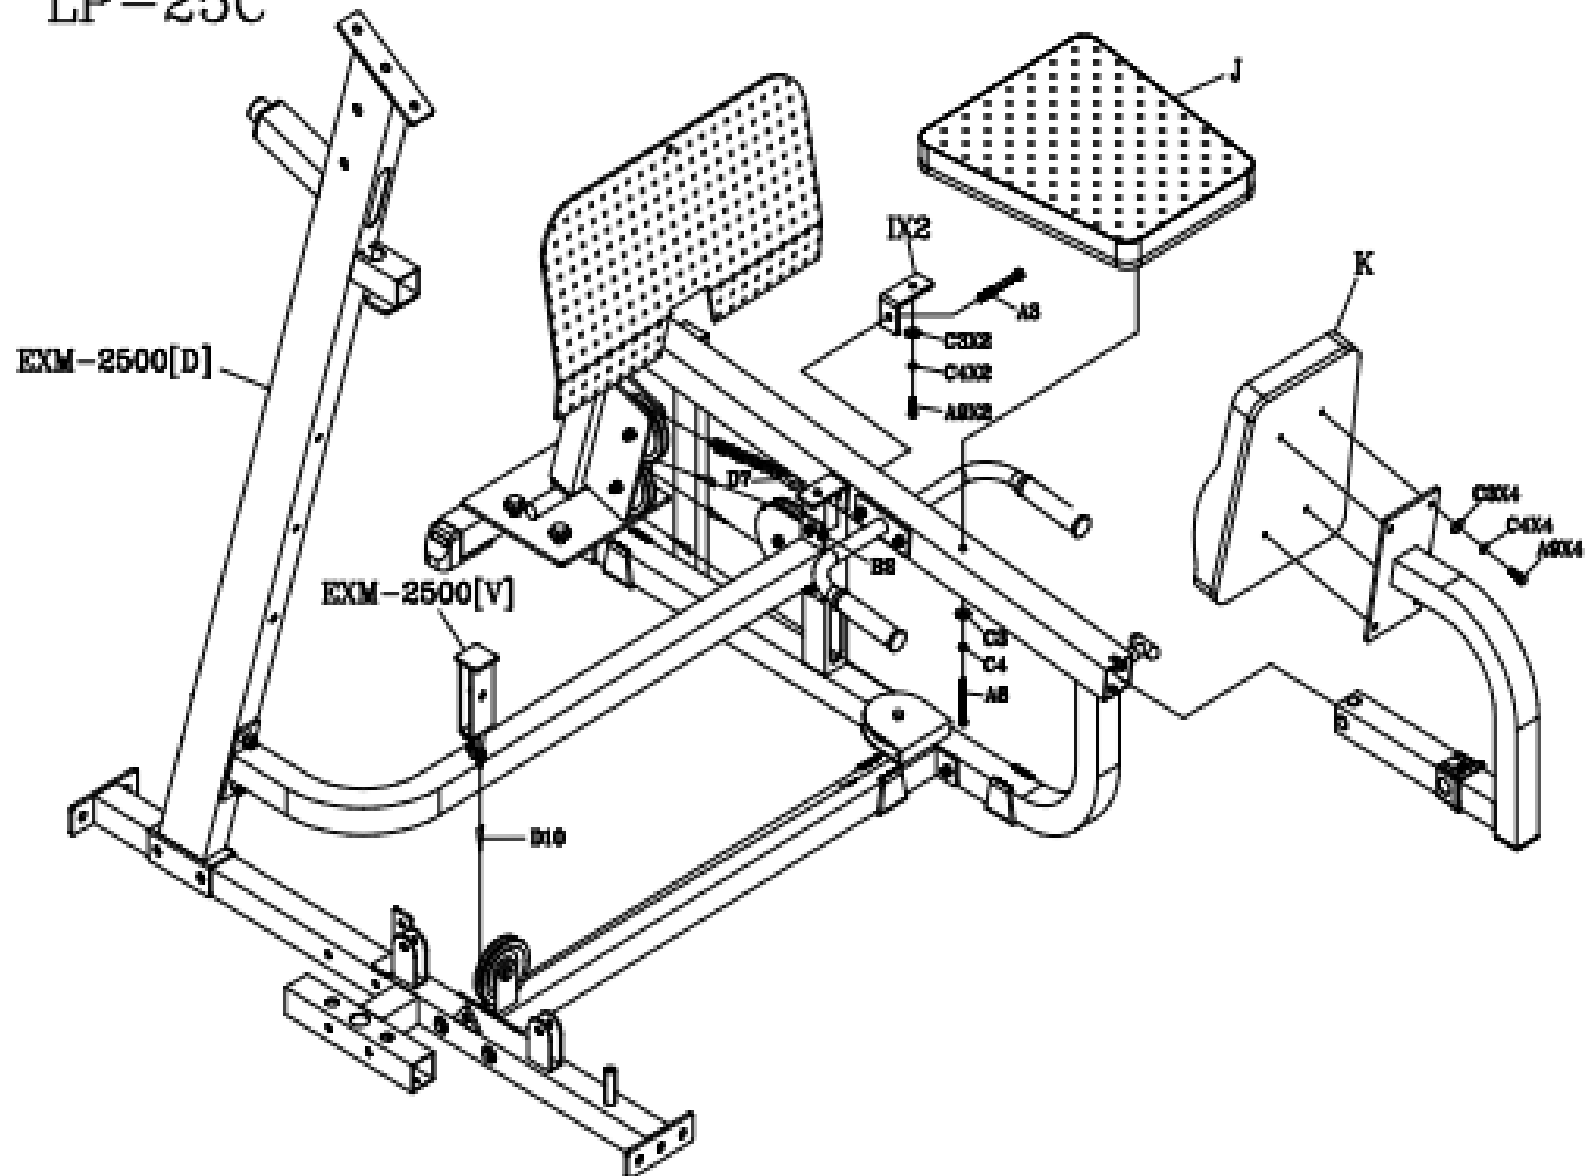

*Well done!

