*EXM2000S Maintenance

* Customers can put some grease on pivot points(red circle place), with brass or gunmetal bushings.

* Let’s maintain your machine!

A-1 [1PCS]

G [1PCS]

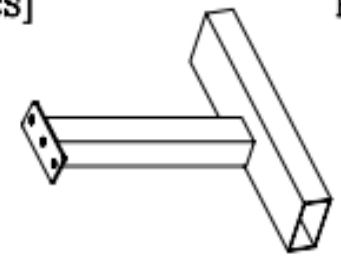

H [1PCS]

B-2 [1PCS]

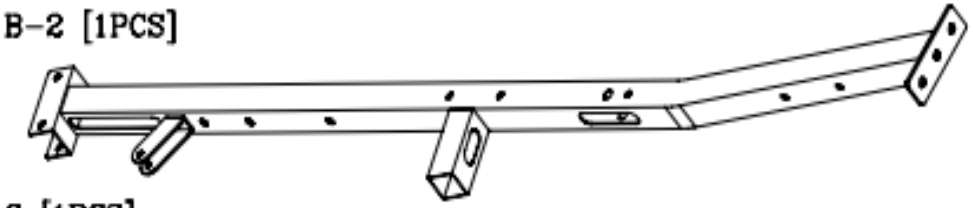

I1 [1PCS]

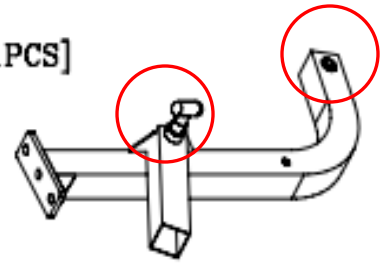

C [1PCS]

D [1PCS]

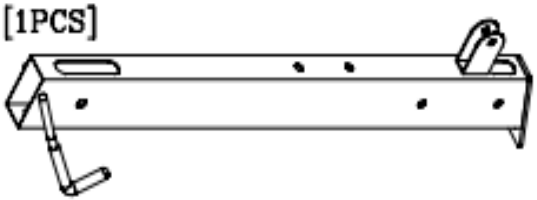

J-1 [1PCS]

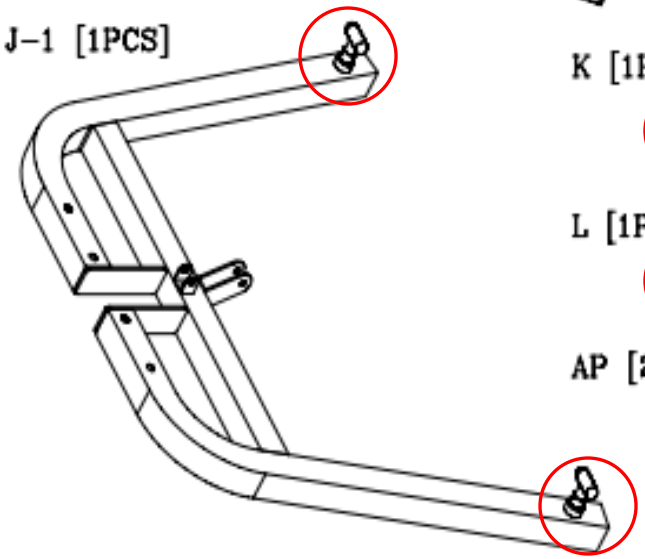

K [1PCS]

L [1PCS]

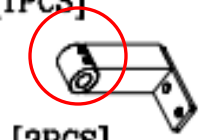

E [1PCS]



AM [1PCS]

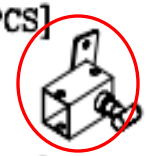

AP [2PCS]

F [1PCS]



AN [1PCS]

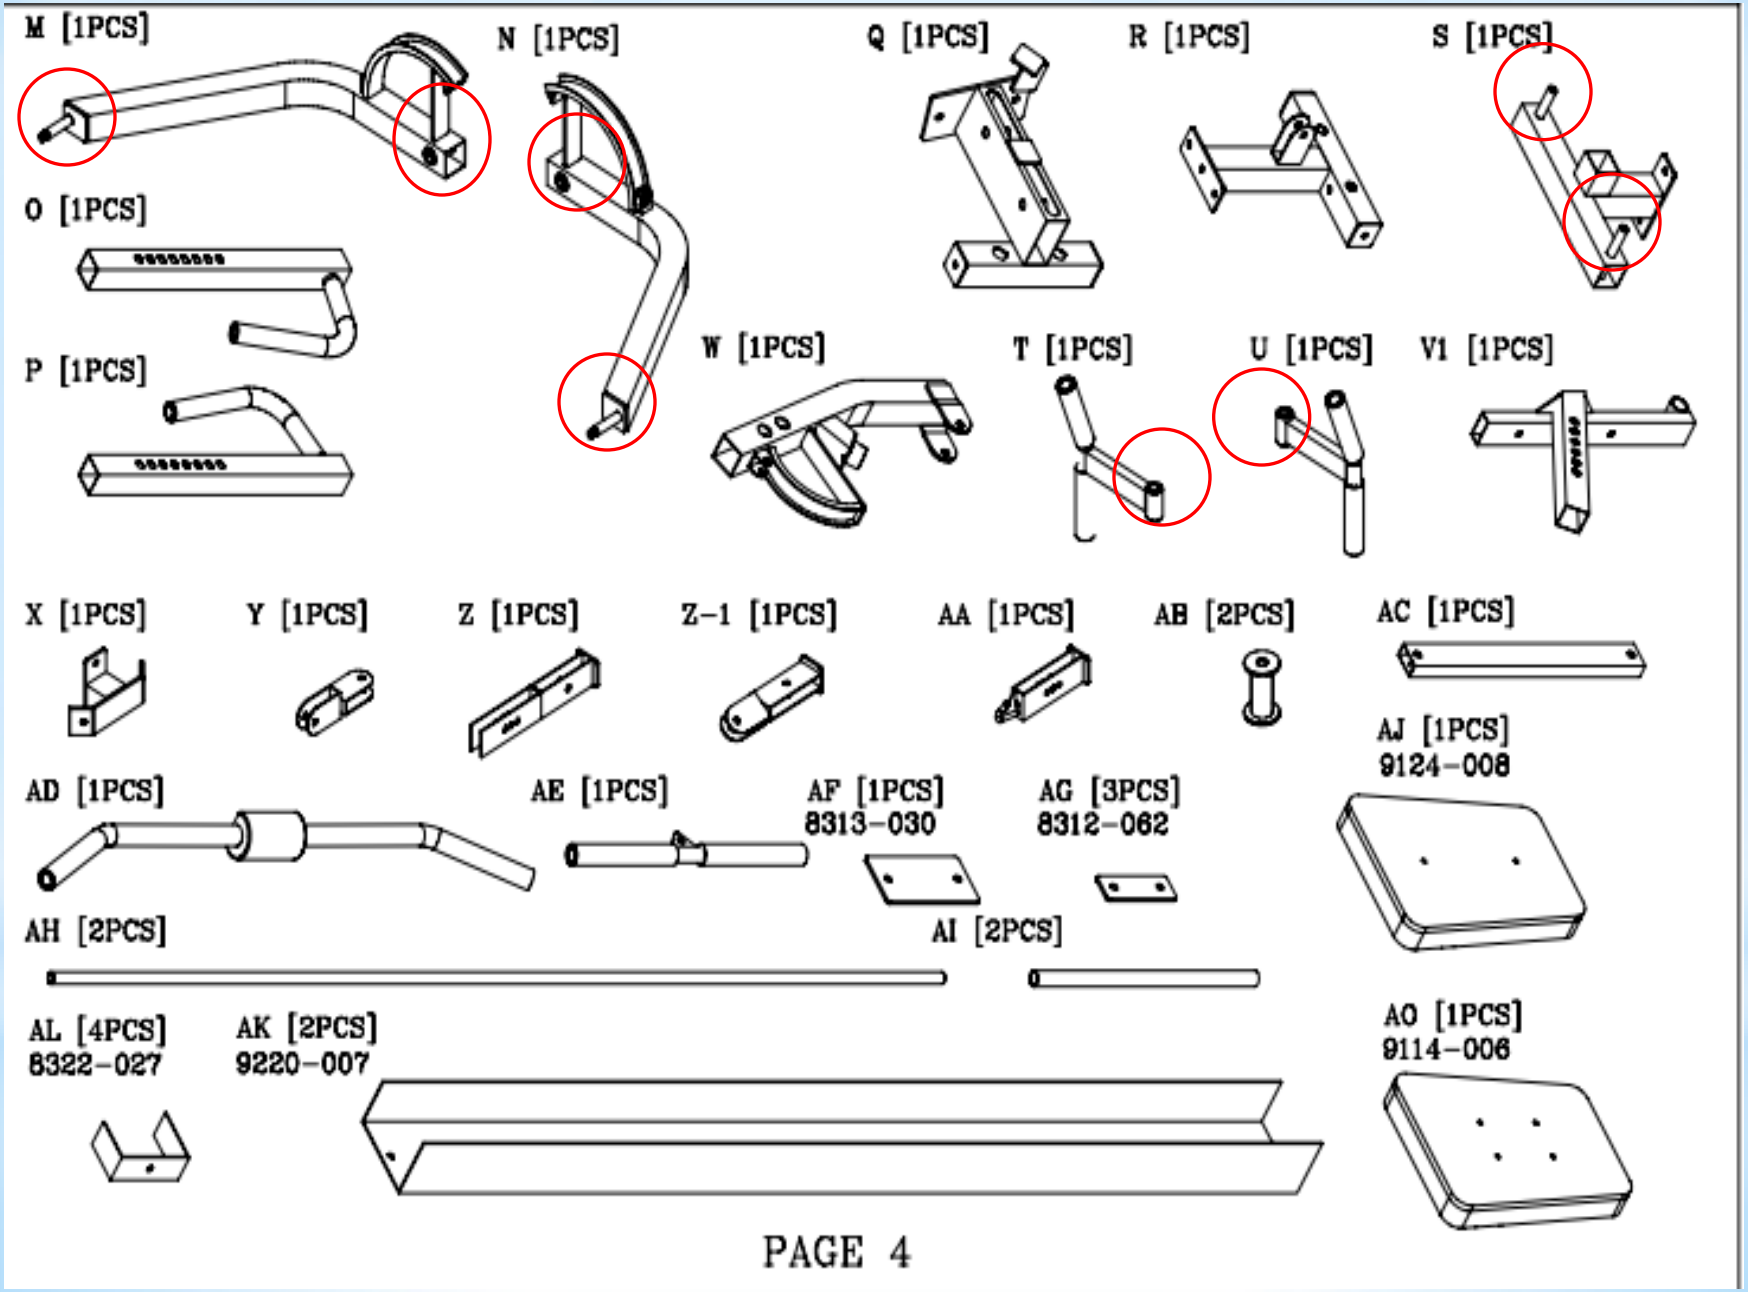
M [1PCS]
N [1PCS]
Q [1PCS]
R [1PCS]
S [1PCS]
O [1PCS]
P [1PCS]
W [1PCS]
T [1PCS]
U [1PCS]
V1 [1PCS]
X [1PCS]
Y [1PCS]
Z [1PCS]
Z-1 [1PCS]
AA [1PCS]
AB [2PCS]
AC [1PCS]
AJ [1PCS]
9124-008
AD [1PCS]
AE [1PCS]
AF [1PCS]
8313-030
AG [3PCS]
8312-062
AH [2PCS]
AI [2PCS]
AL [4PCS]
8322-027
AK [2PCS]
9220-007
AO [1PCS]
9114-006

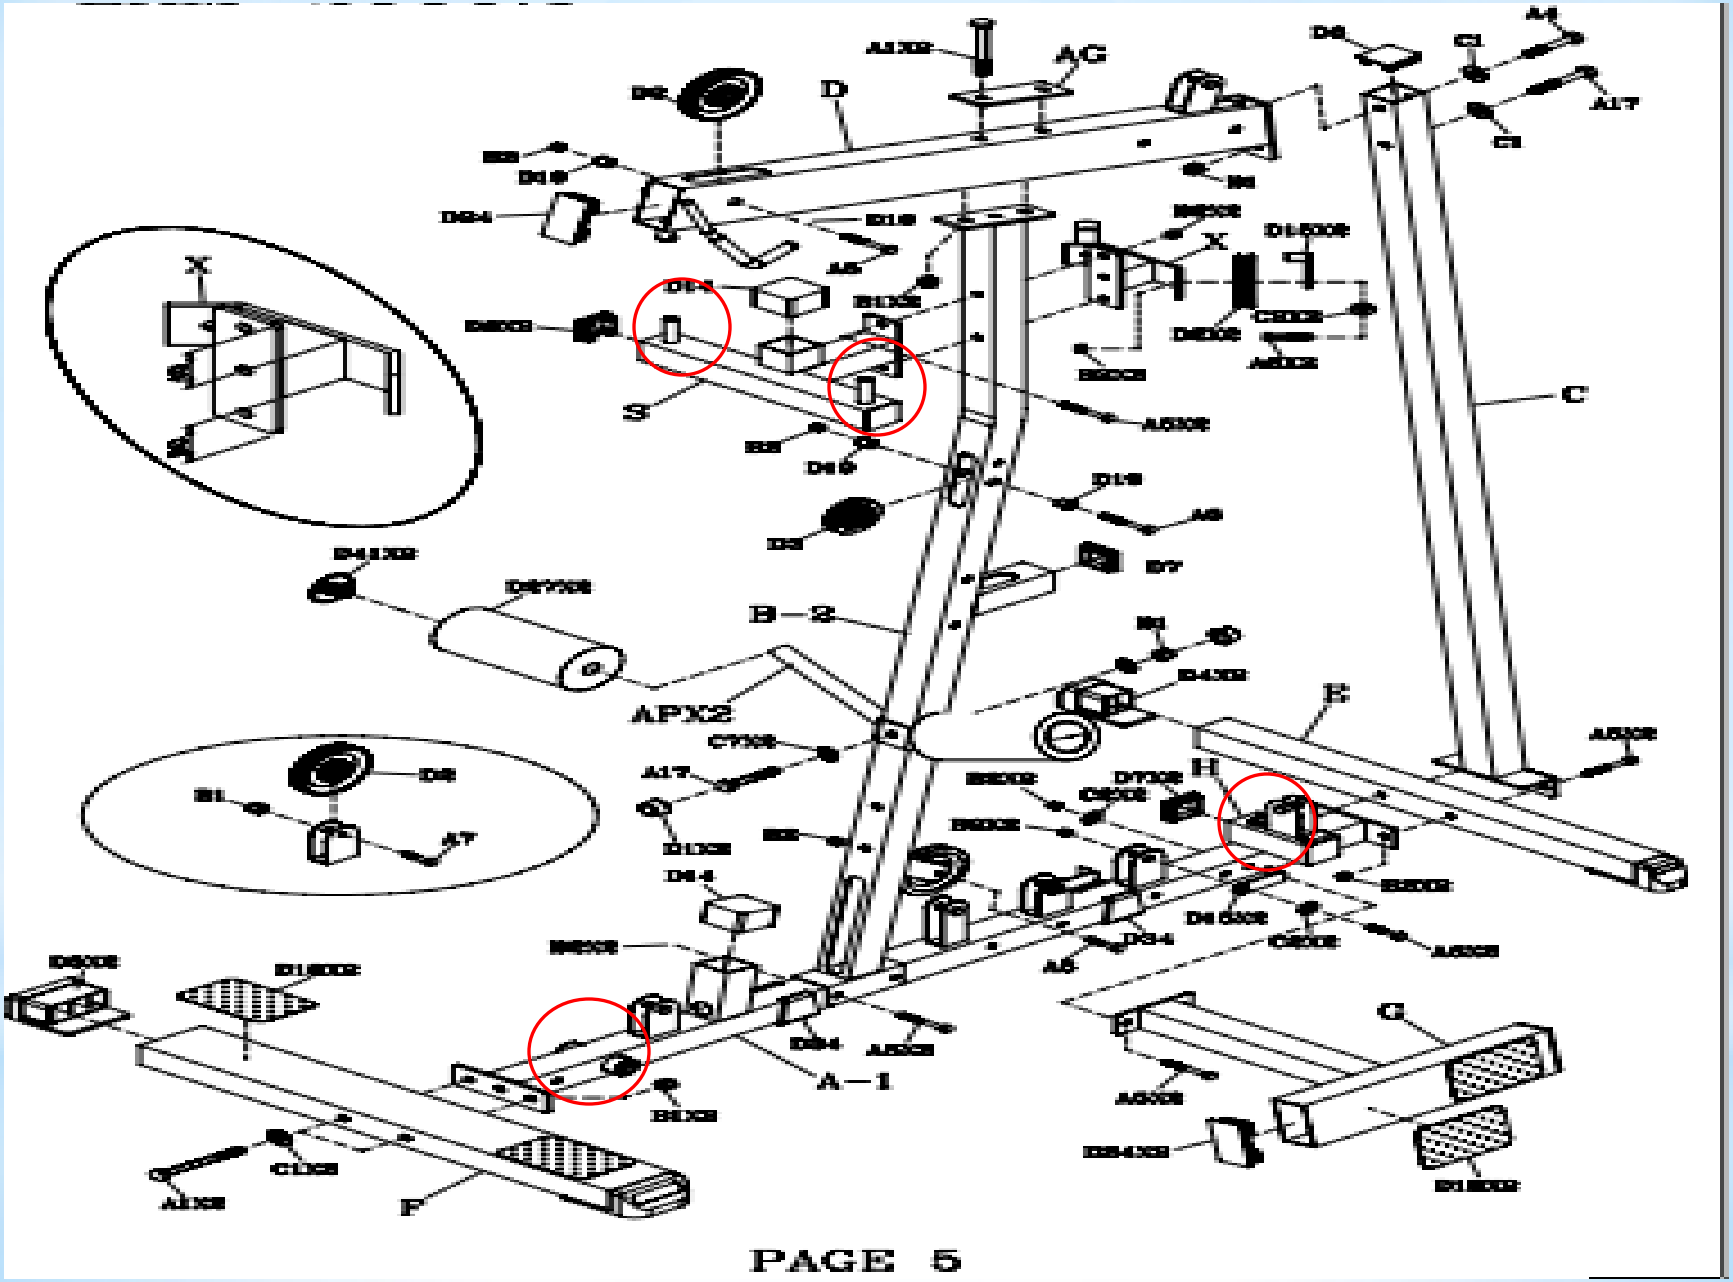
X
AG
D
C
B—2
APX2
H
F
A—1
G
PAGE 5

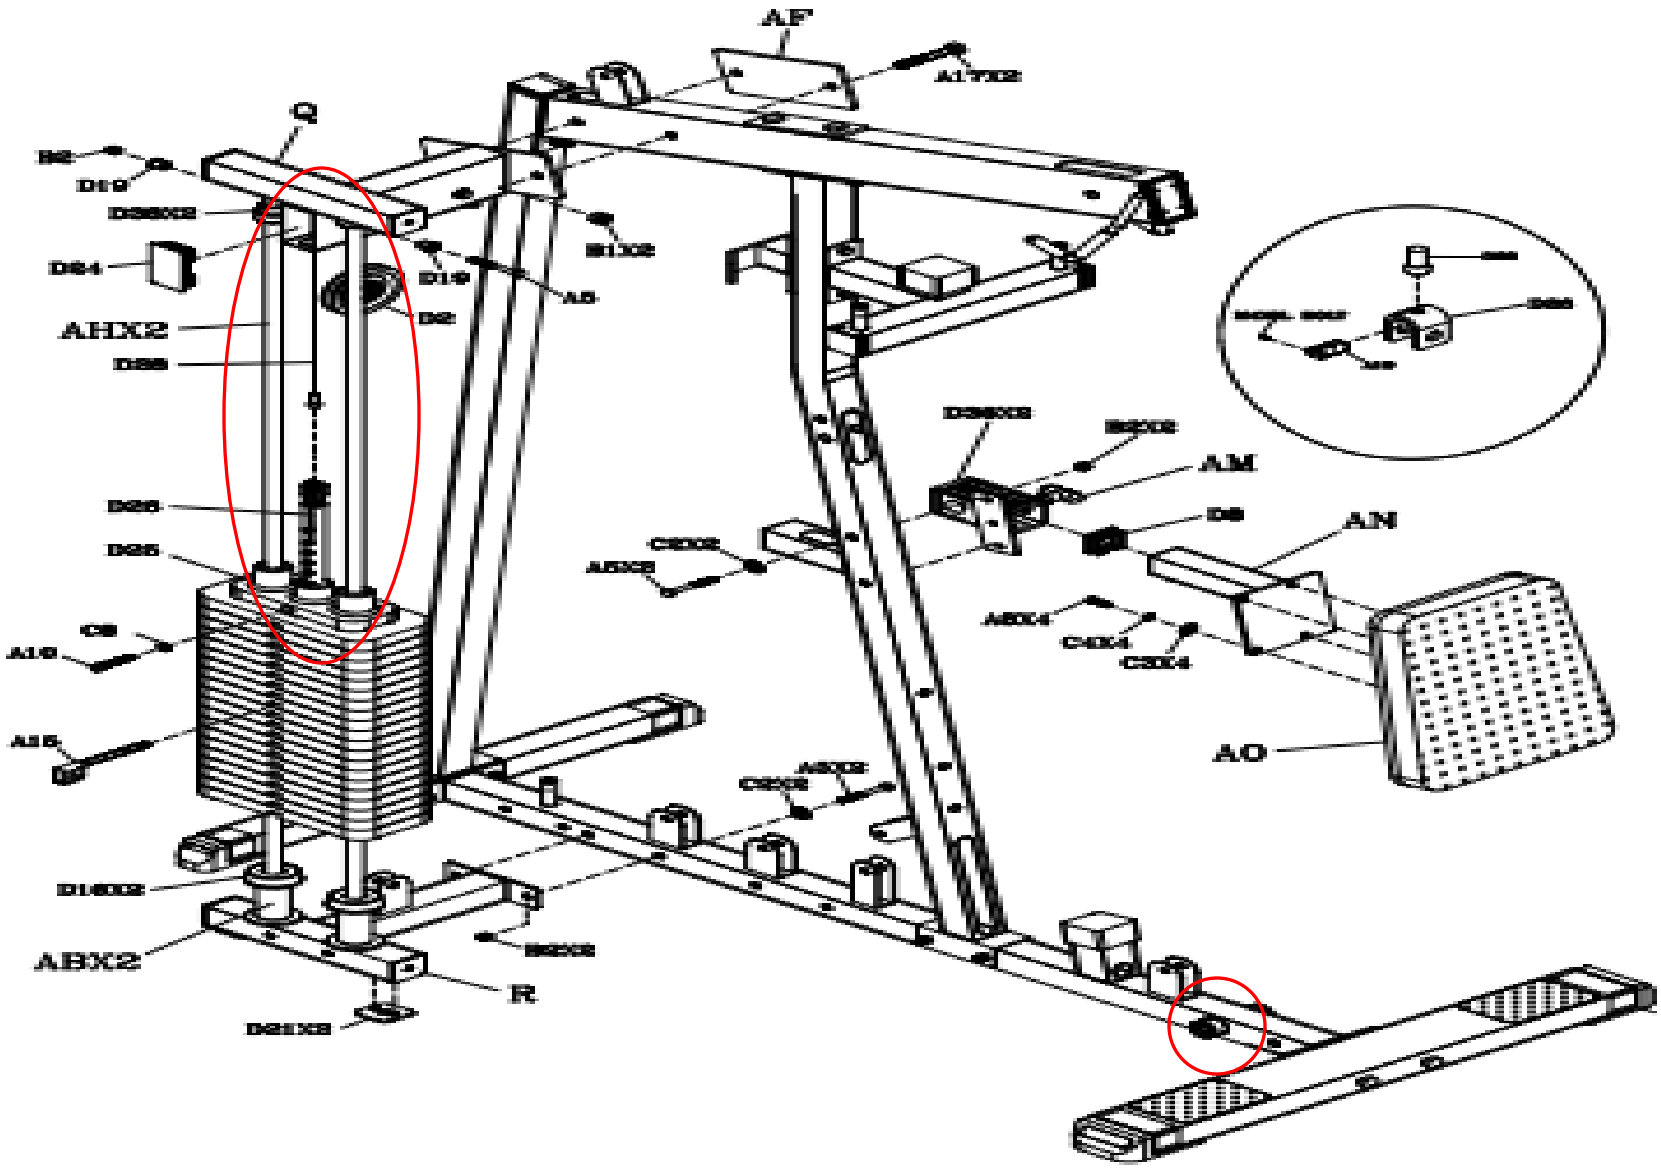
AF
A17X2
Q
B2
D19
D38CC2
D54
B1X2
D19
A5
D2
AHX2
D38
D38CC2
B2CC2
AM
D26
D6
AN
D25
C2CC2
A5CC2
C8
A10
A8CC4
C4CC4
C2CC4
A15
AO
A8CC2
C8CC2
D14CC2
B8CC2
ABX2
R
D21CC2

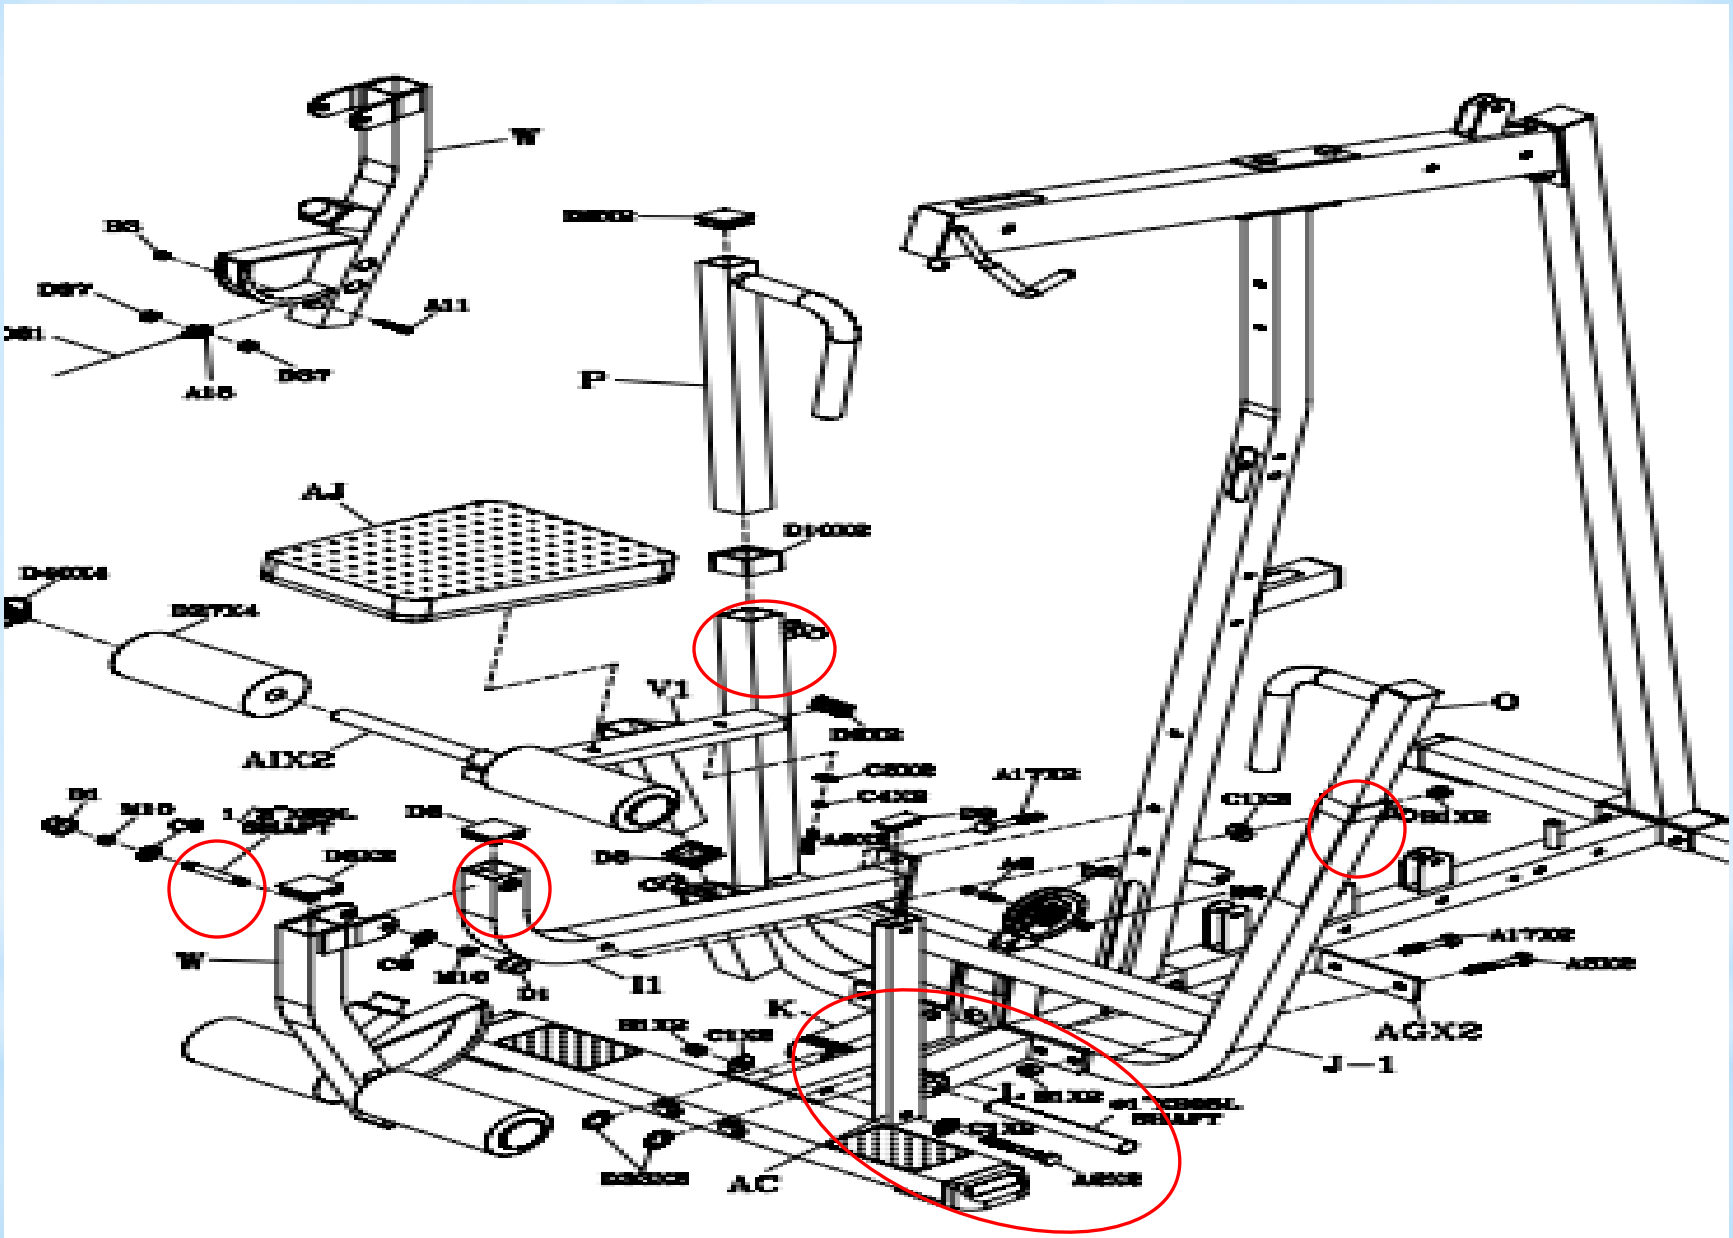
W
P
AJ
V1
AIX2
O
AGX2
J—1
K
AC

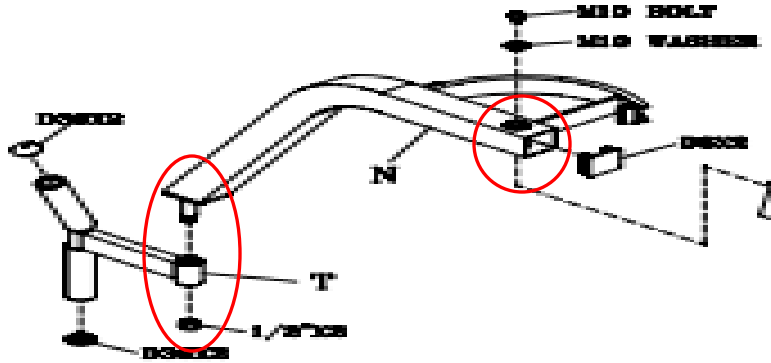
N
T
M
U

EXM—2000.5

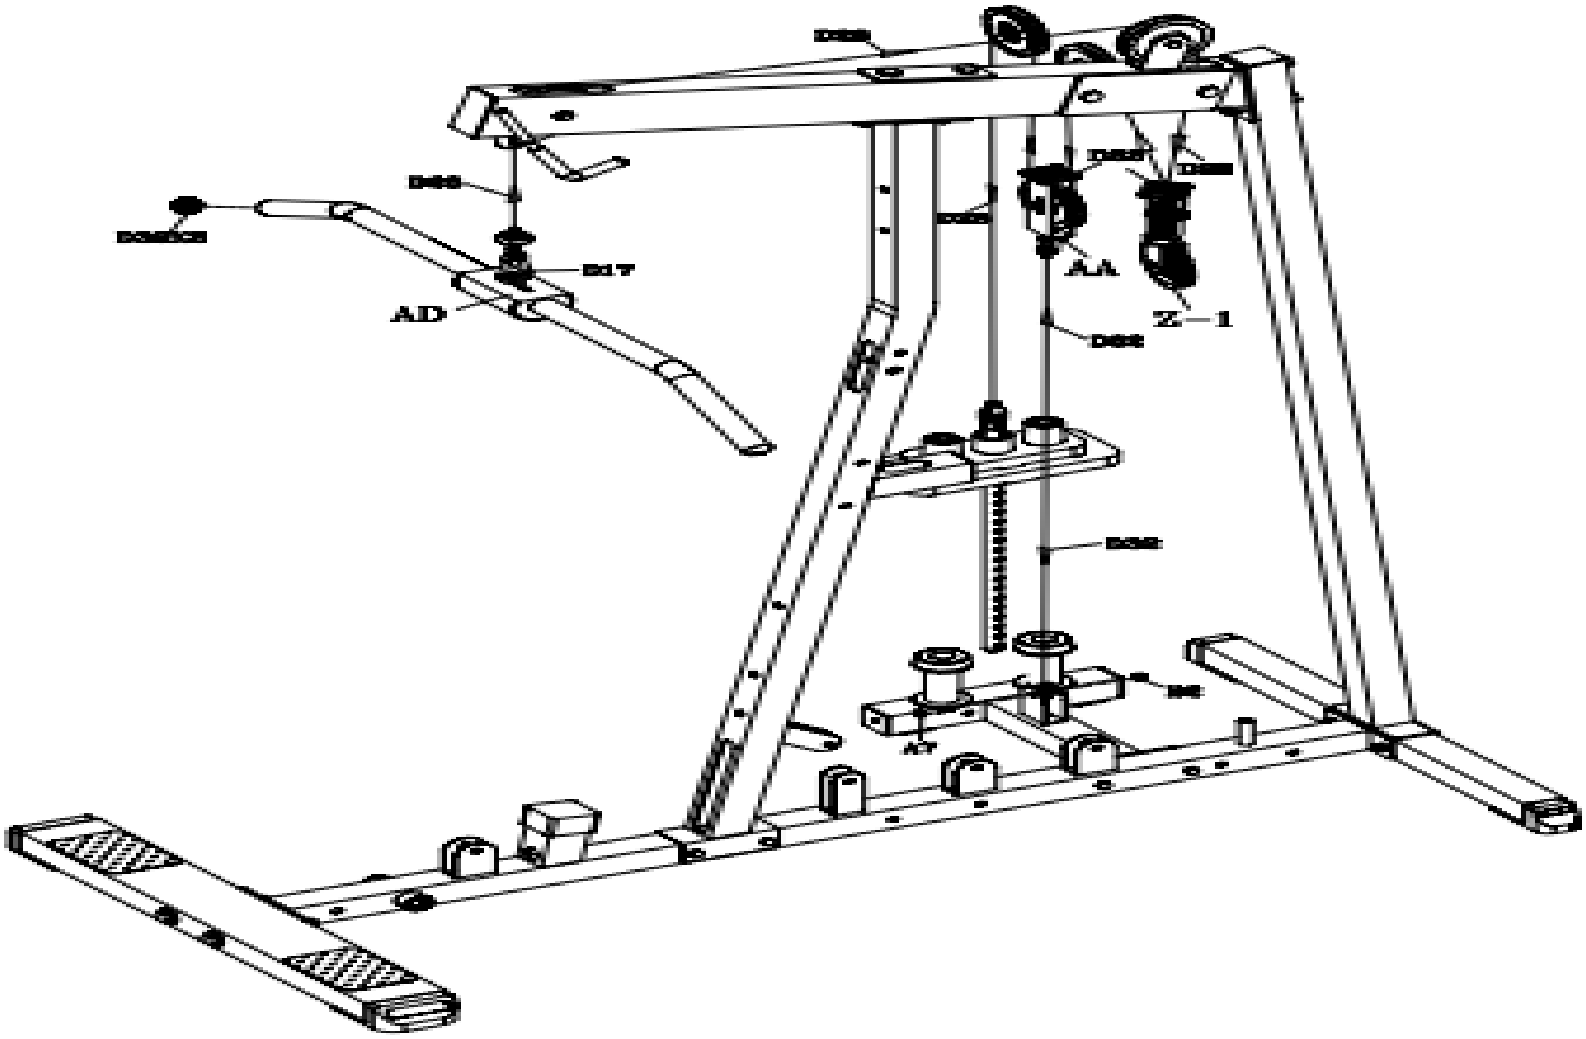

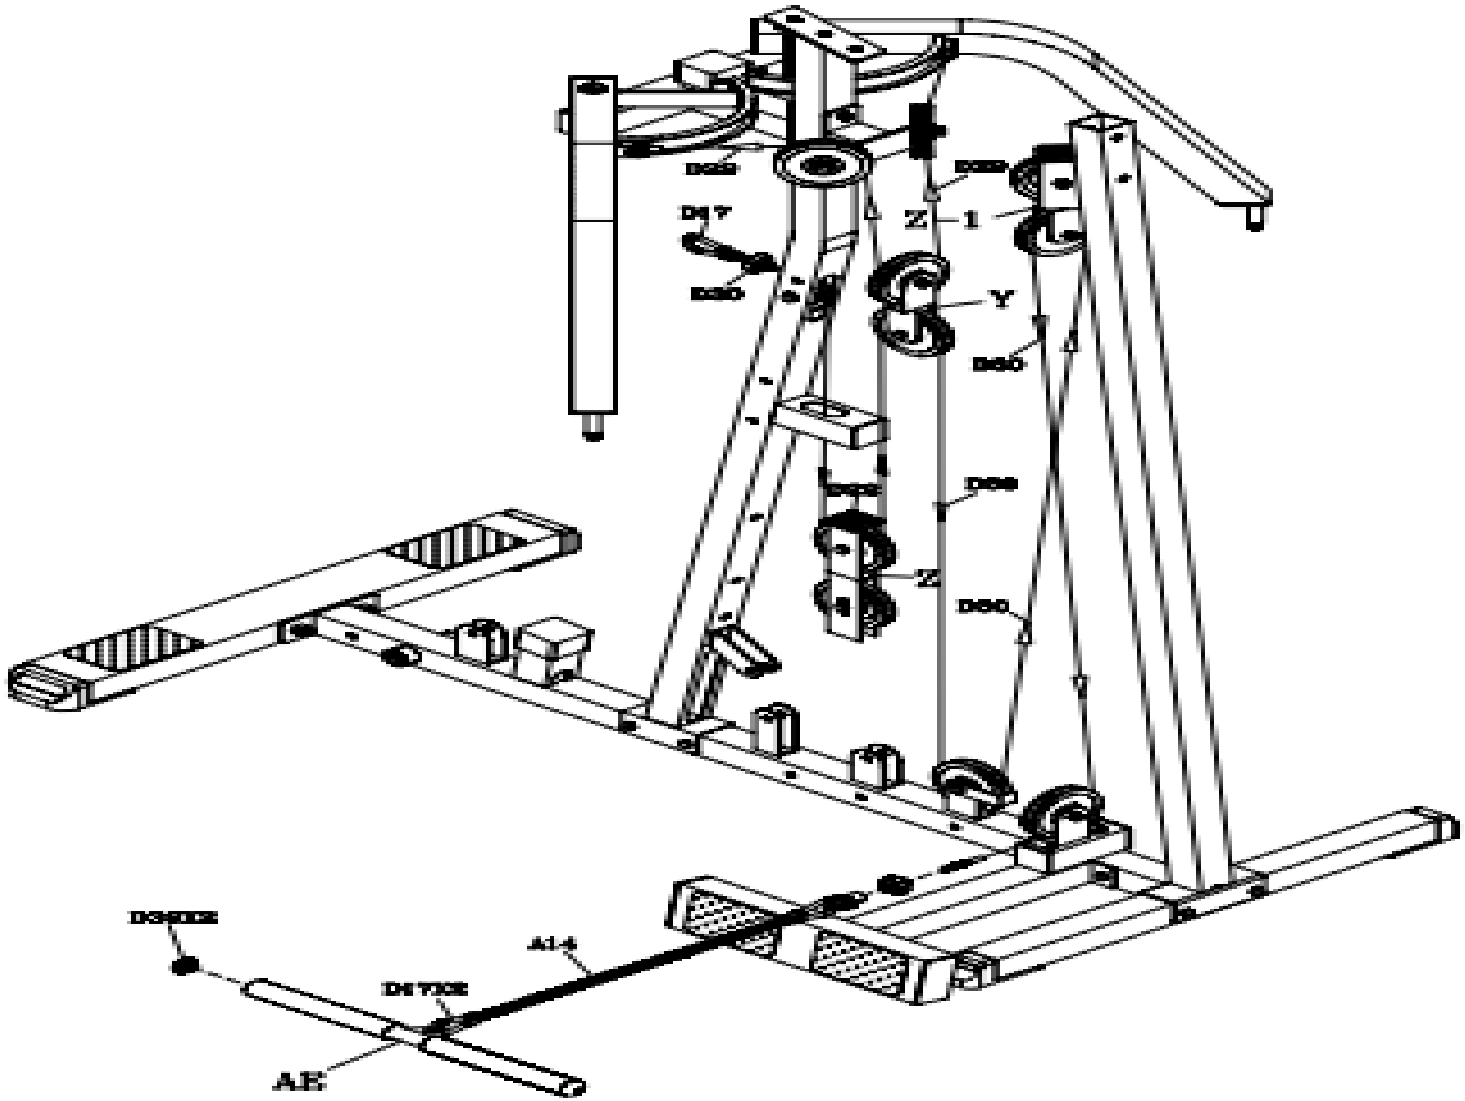
D17
Z
1
Y
Z
A14
AE

EXM—2000.5

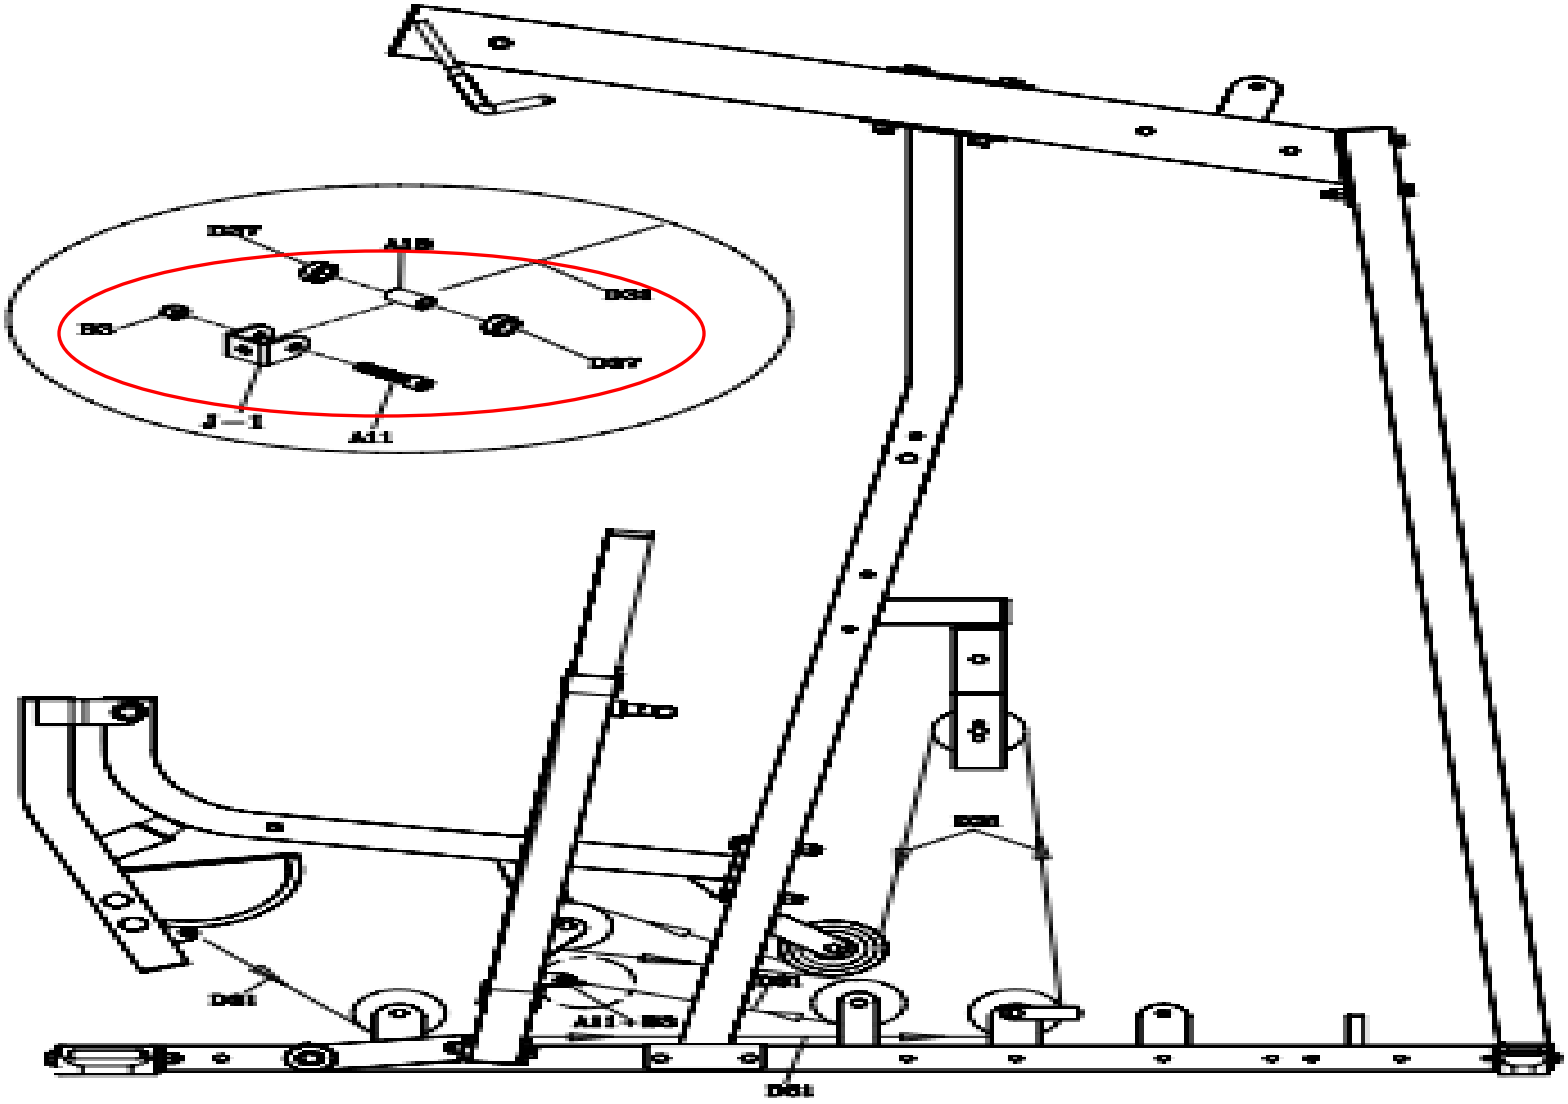

EXM—2000.5

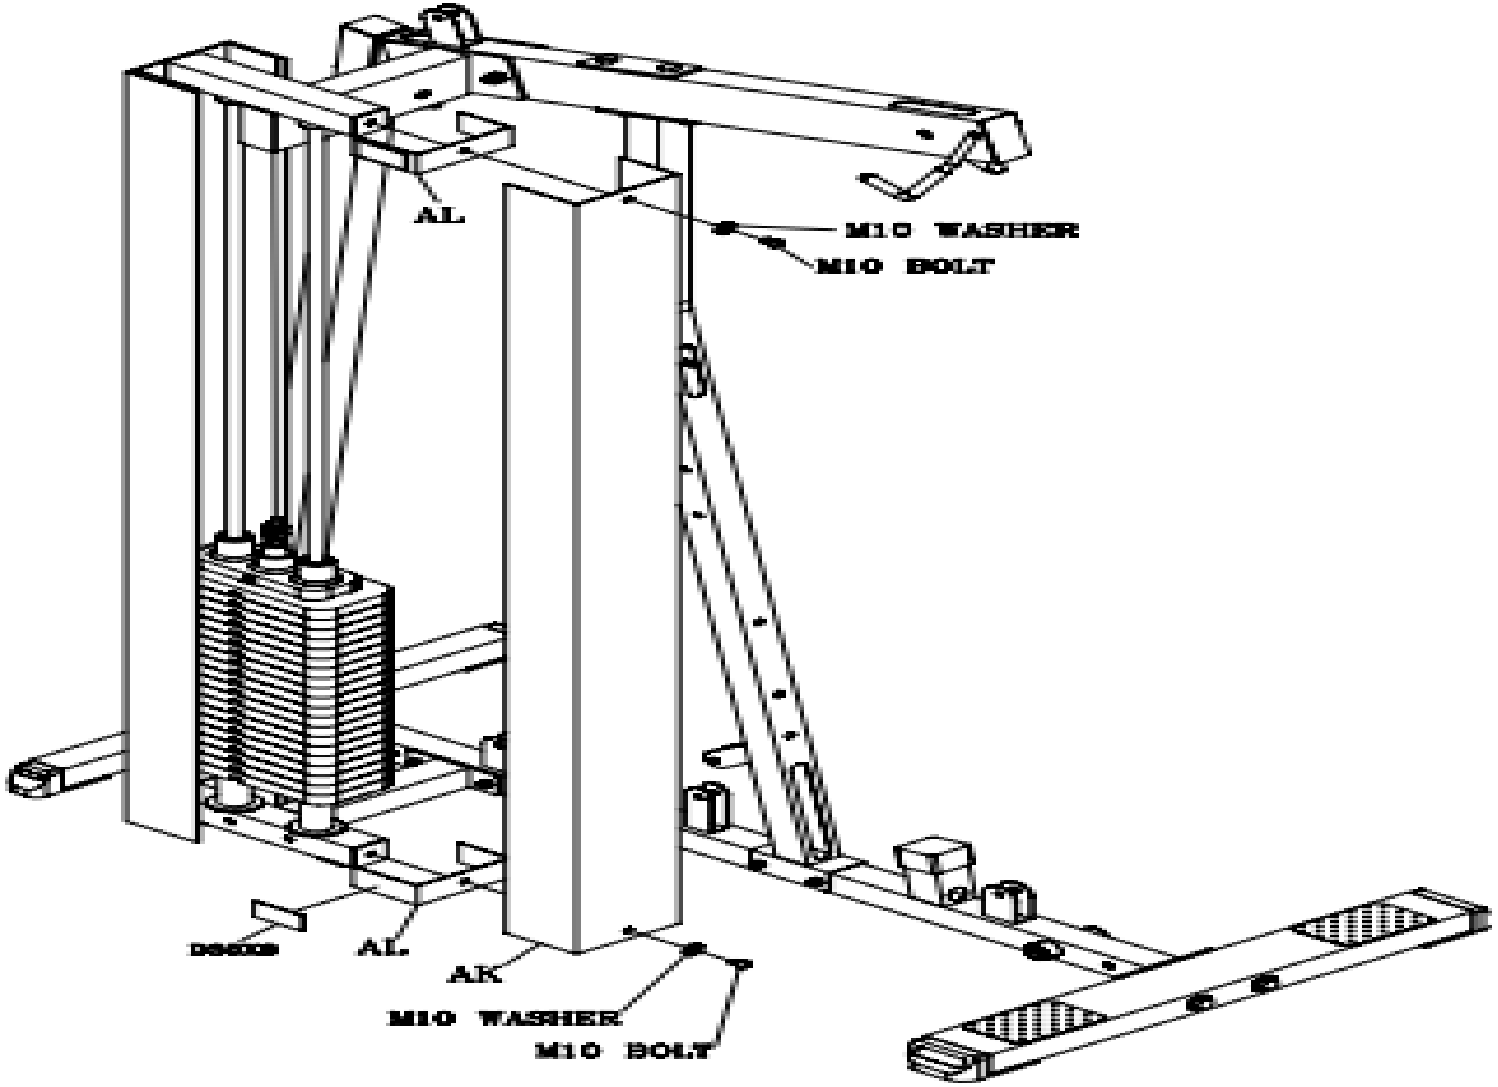

GLP20

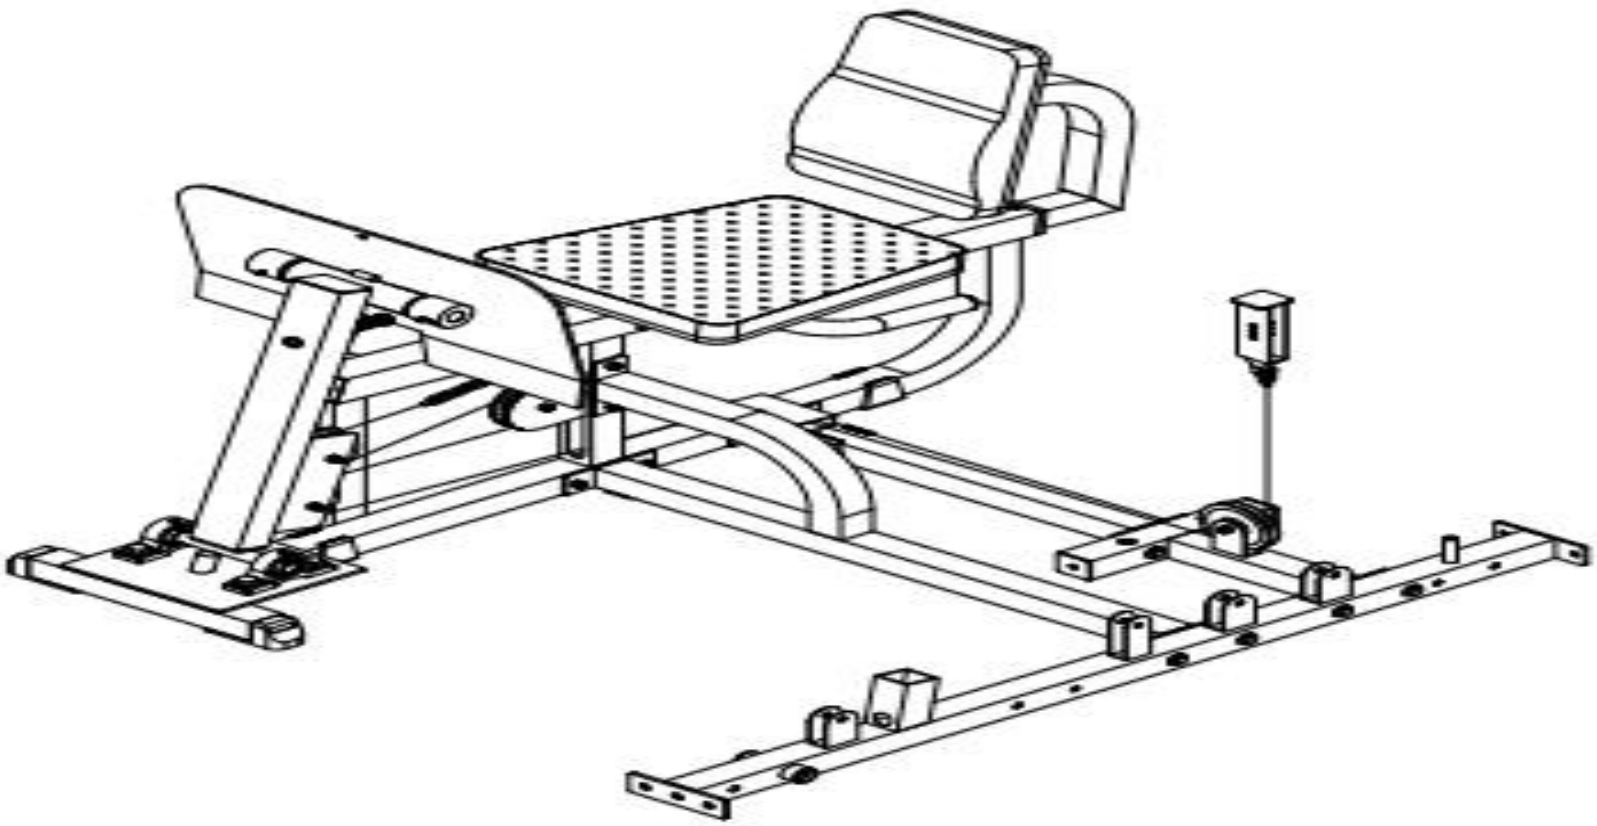

VERSION 1212

GLP20 PARTS ILLUSTRATION SHEET

A [1PCS]

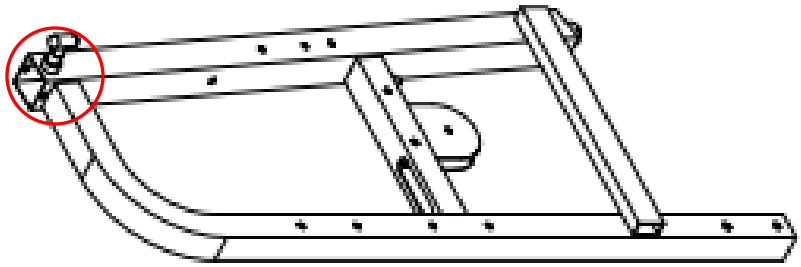

E [1PCS]

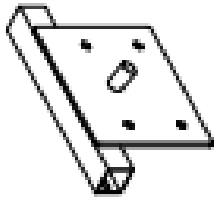

F [2PCS]

B [1PCS]

G [1PCS]

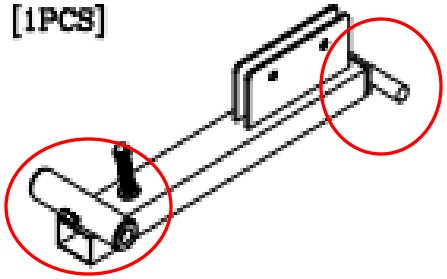

H [1PCS]

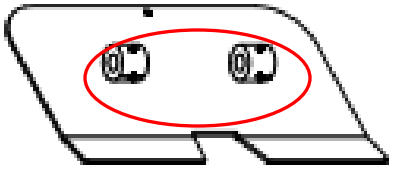

C [1PCS]

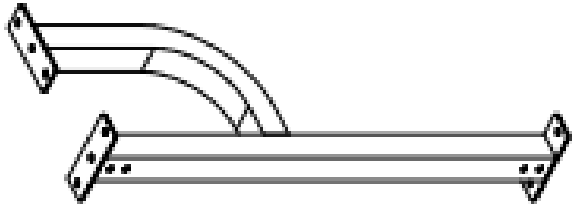

D1 [1PCS]

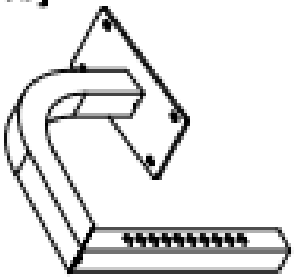

I [2PCS]
8331-018

L [2PCS]
8510-005

J [1PCS]
9124-007

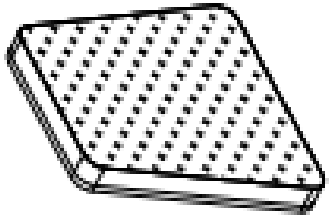

K [1PCS]
9114-005

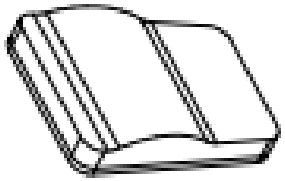

GLP20

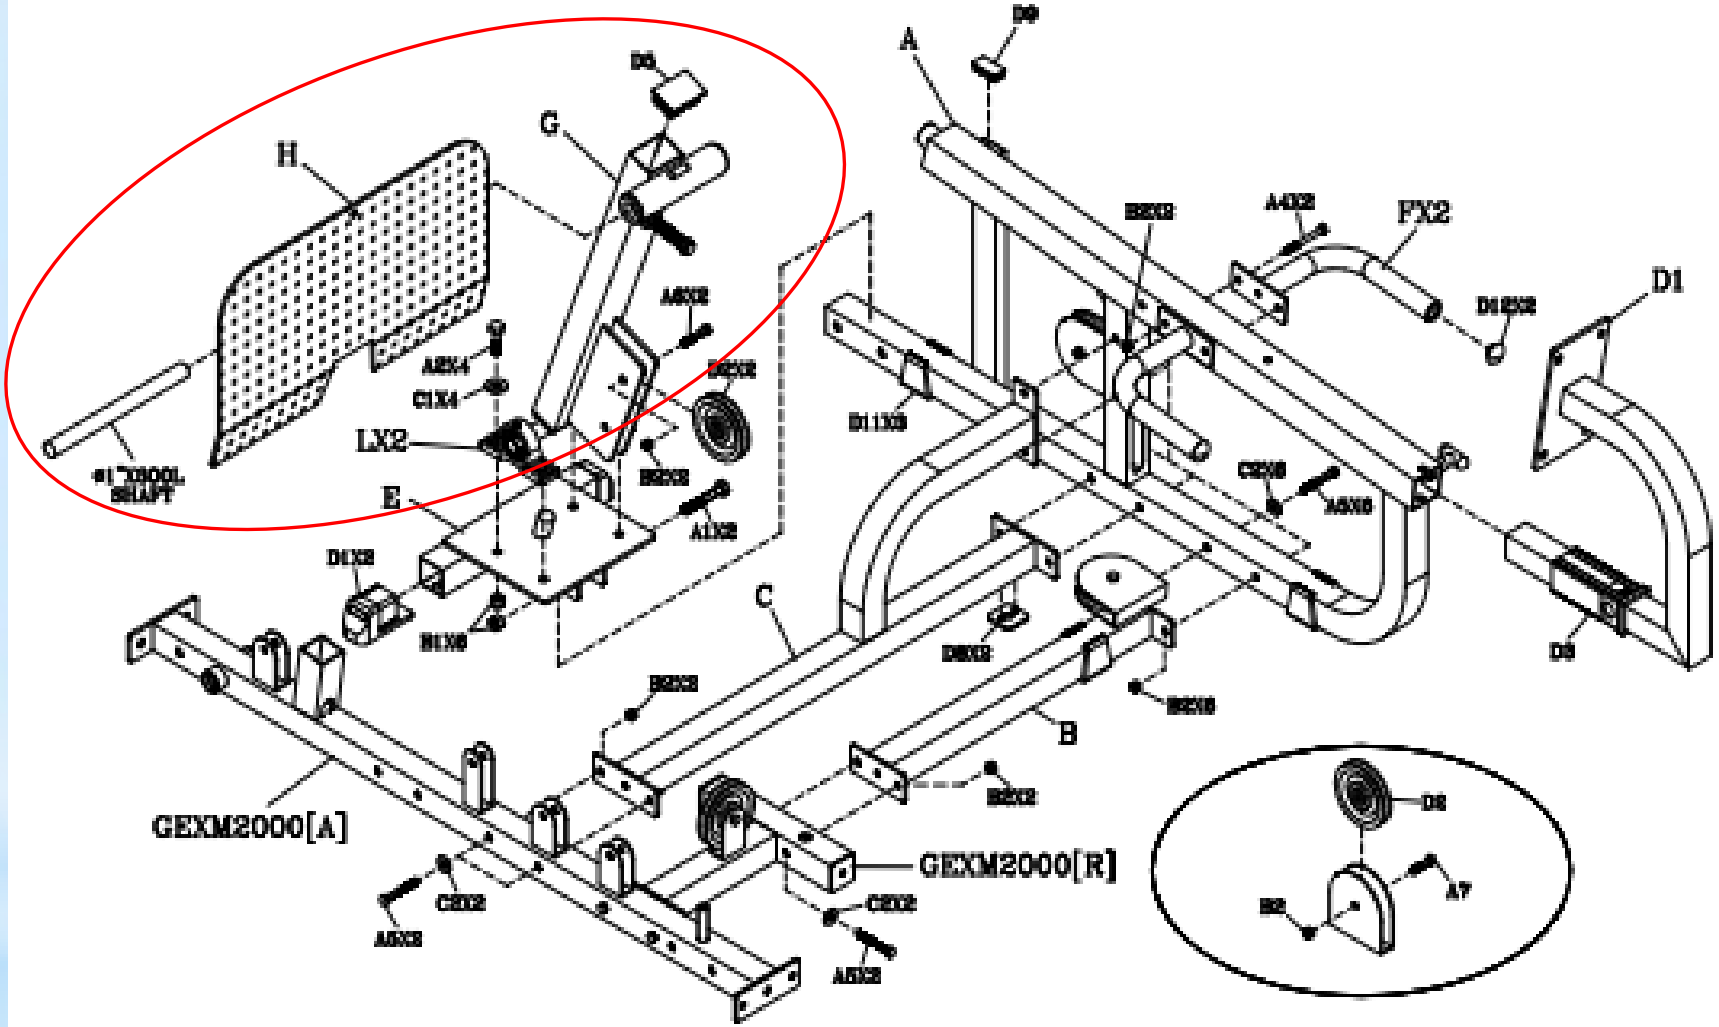
A
D9
H
G
D6
A4X2
FX2
D1
D12X2
A2X4
C1X4
LX2
E
D11X2
C2X8
A6X8
D10X2
B1X8
C
D8X2
D5
B2X2
B
B2X2
GEXM2000[A]
GEXM2000[R]
C6X2
A5X2
C6X2
A5X2
D6
A7
B2

GLP20

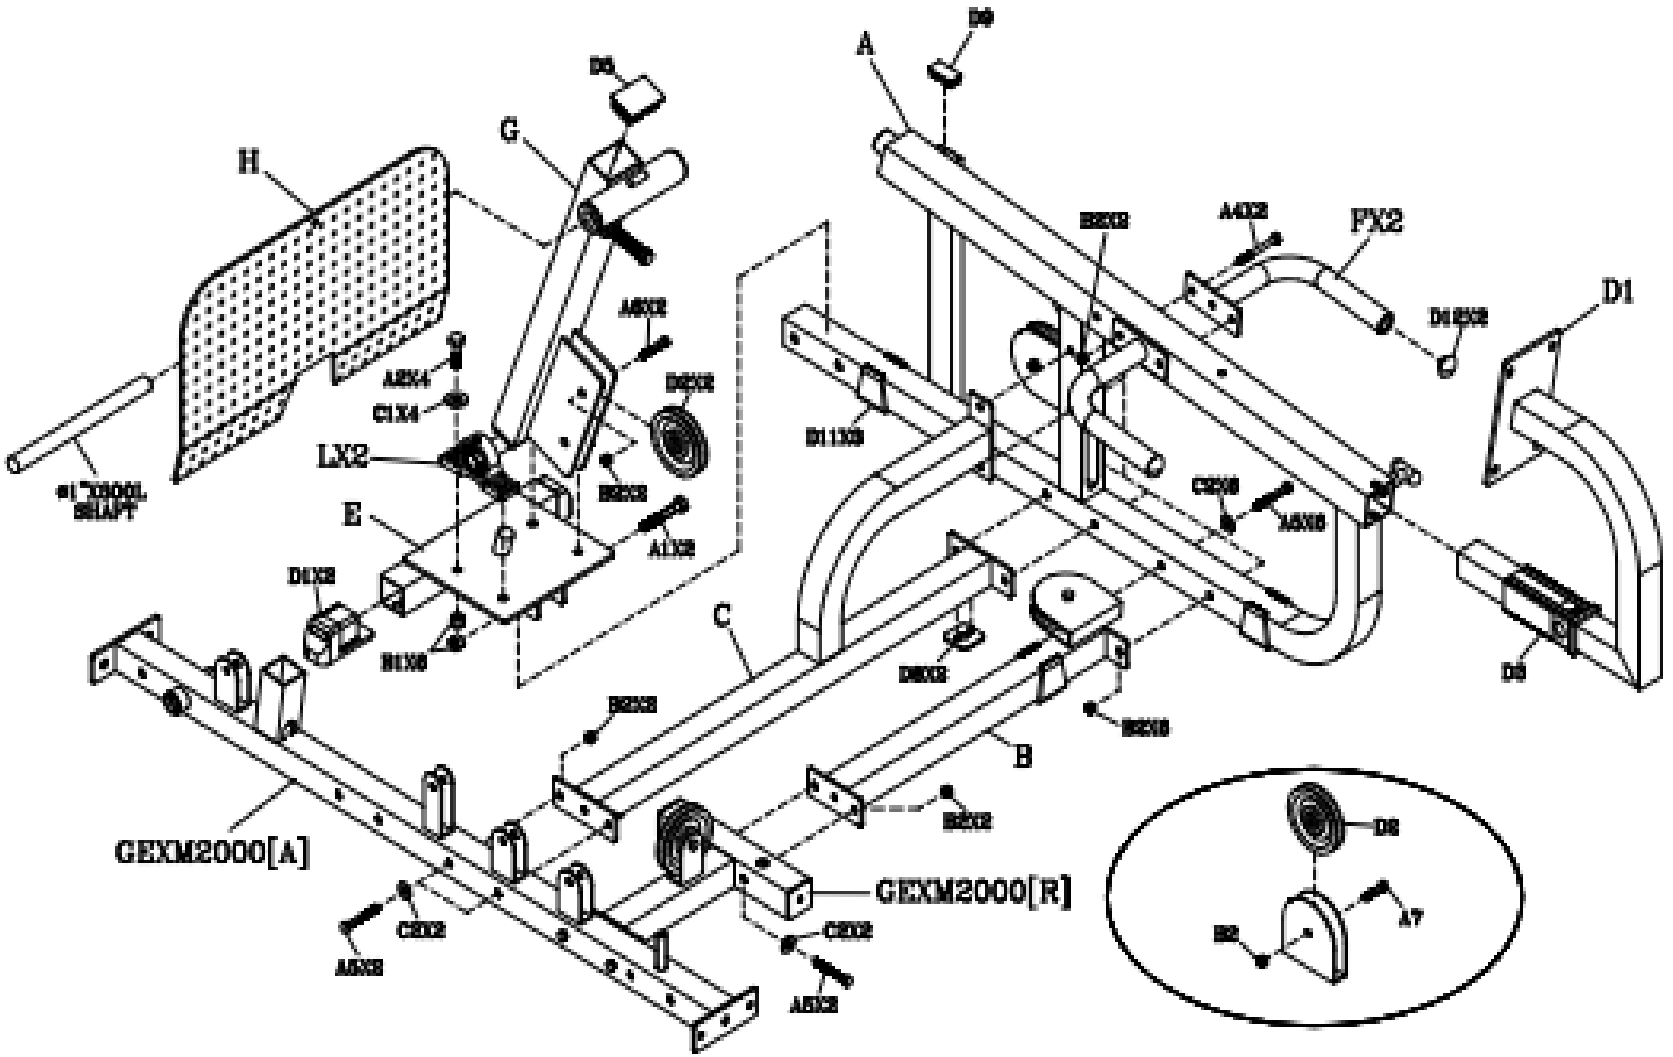

*Well done!