
T70 error code (E7)-Troubleshooting by press process

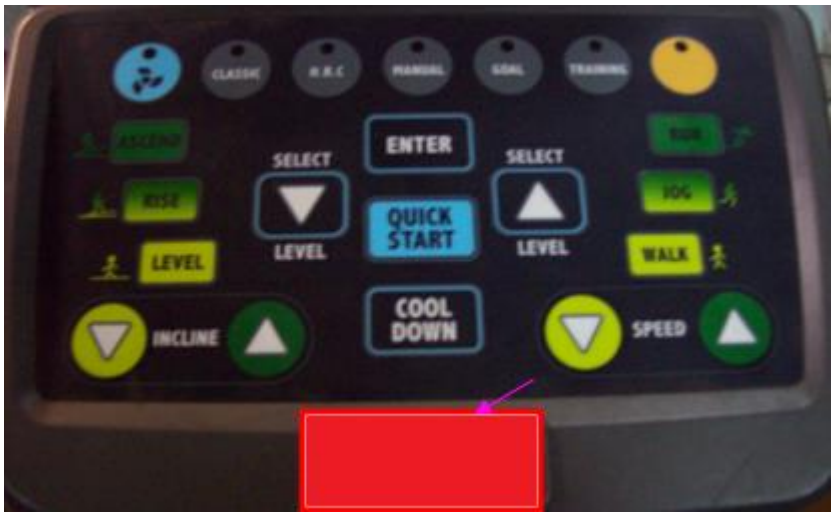

1. Press START + STOP button about 3～5 second.(get into manual mode).

2. Press STOP button four times (console shows IO).



3. *When console shows Error Code E7，it has to depend on lifting motor on highest or lowest point for troubleshooting.
(*The troubleshooting for when console shows Error Code E7 only).

3.1. Status 1:

If lifting motor on lowest point, please do following:

A. Press INCLINE UP (▲) button，lifting motor will start to going up. Wait until middle window shows figure around 1400 and press INCLINE UP (▲) button again.

[*Remark: Lifting motor will stop immediately and figure on window will be remained without changing.]





B. Turn off and turn on again the power of the treadmill，troubleshooting completed.

3.2 Status 2:

If lifting motor on highest point, please do following:

a. Press INCLINE DOWN (▼) button，lifting motor will start to going down. Wait until middle window shows figure around 1400 and press INCLINE DOWN (▼) button again.

[*Remark: Lifting motor will stop immediately and figure on window will be remained without changing.]





b. Turn off and turn on again the power of the treadmill，troubleshooting completed.