*MSP800 Maintenance




* Customers can put some grease on pivot points(red circle place), with brass or gunmetal bushings.















* Let's maintain your machine!






零件代碼	品 名 及 圖 案	用量	備 註
20MSP800-A 20MSP800-D	主架 1SET 座墊架 1SET 國鐙3124S-閃銀 國鐙KL0002透明漆 二塗二烤		1.組立1/2"-1"L 一般外六螺絲=4PCS 2.組立1/2"華司Ø34邊=2PCS 3.組立3/8"X2 1/4" 一般六角頭螺絲=1PCS 4.組立3/8"尼帽=2PCS 5.組立3/8"華司Ø16邊=4PCS 6.組立8520001銅套=2PCS 7.組立M8X60L 半圓頭內六角螺絲=1PCS 8.組立3/8"X2-1/2"L 一般外六螺絲=1PCS 9.組立M8彈簧華司=1PCS 10.組立M8尼帽=1PCS 11.組立M8華司Ø16邊=2PCS 12.組立8830-027氣壓棒=1PCS 13.組立9211-036按扣墊=2PCS 14.組立9211-107雙層套=1PCS 15.組立9211-118按扣墊=2PCS 17.組立M10X25L 錐形平頭內六角螺絲=6PCS 18.貼9440-055貼紙=1PCS 19.貼"工單"貼紙=1PCS 20.貼9440225調整貼紙=1PCS 21.組立435-(4-3)拉釘=4PCS 22.組立1/2"華司Ø25邊=2PCS 23.黏貼9440-305認證貼紙=1PCS
6680-006 280226	扶手組 國邦790-49153F1HT-深灰	1SET	1.組立8250-101調整組=1PCS 設變單號 2013090002

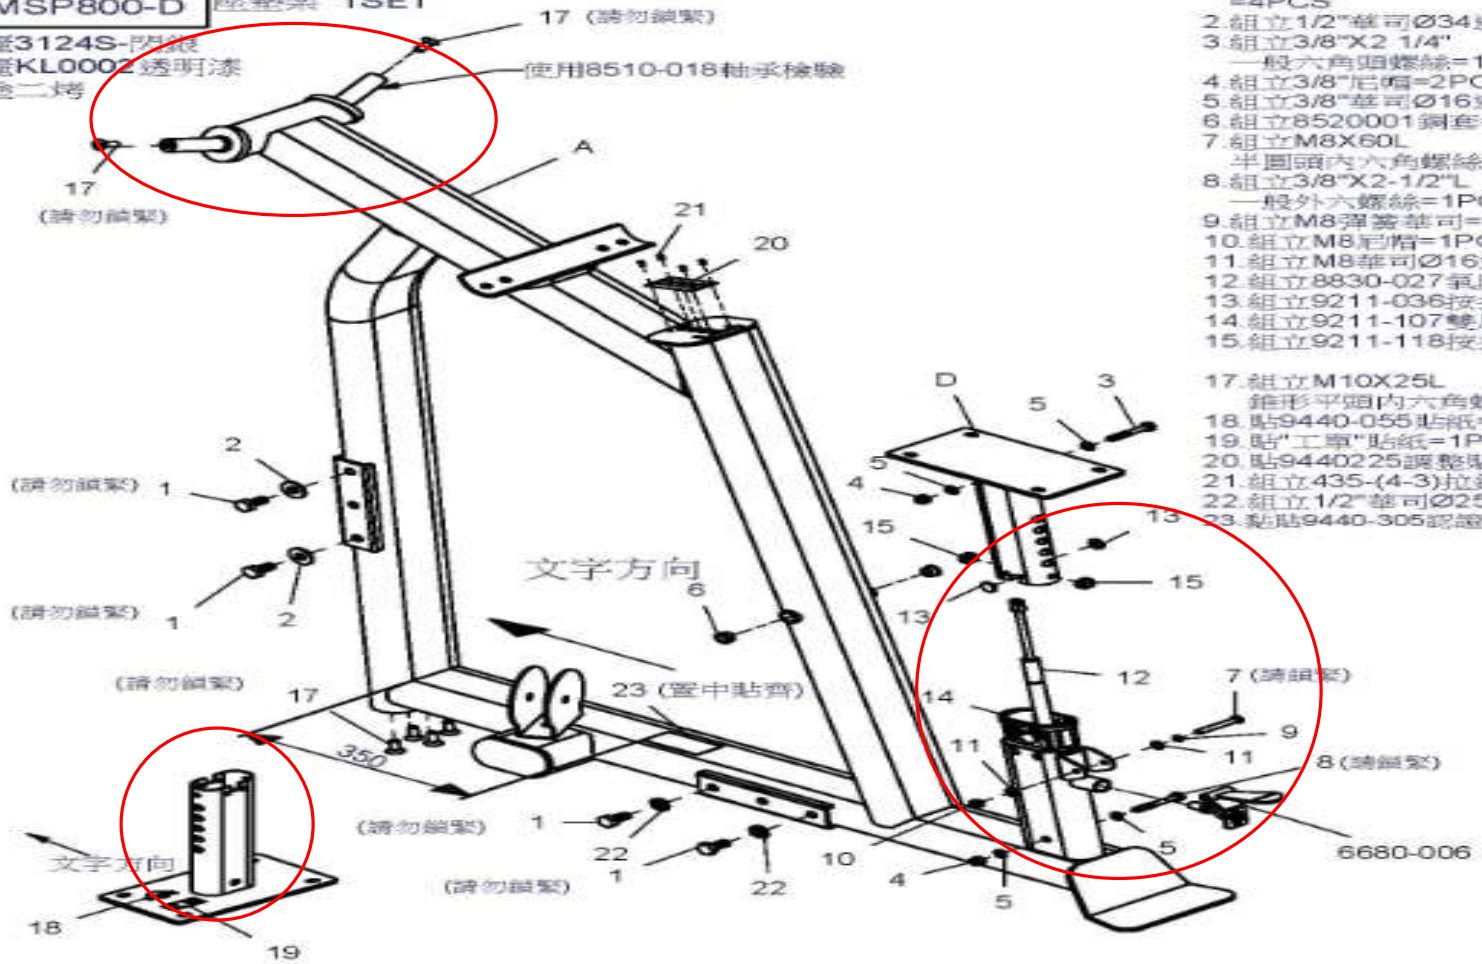

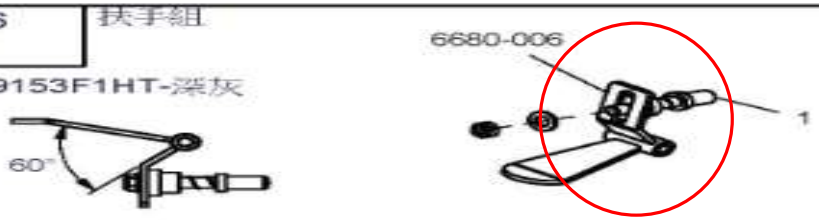

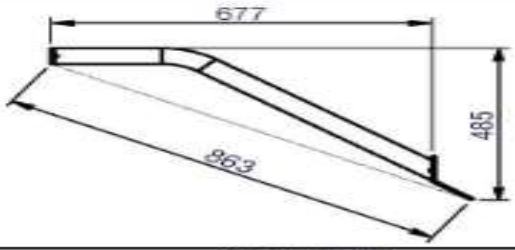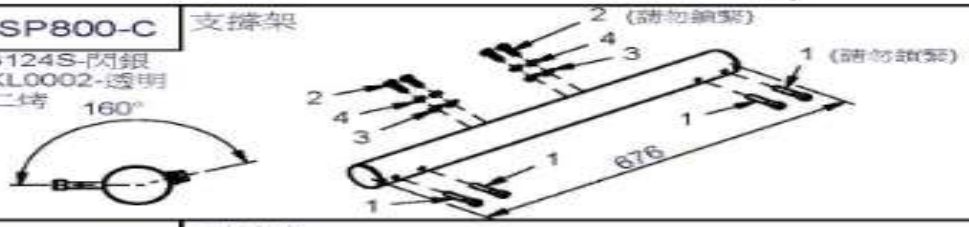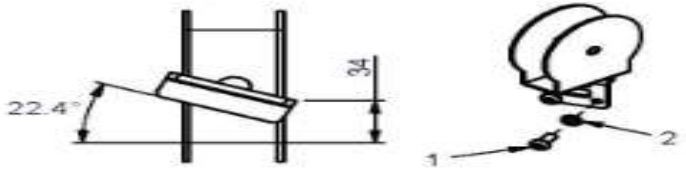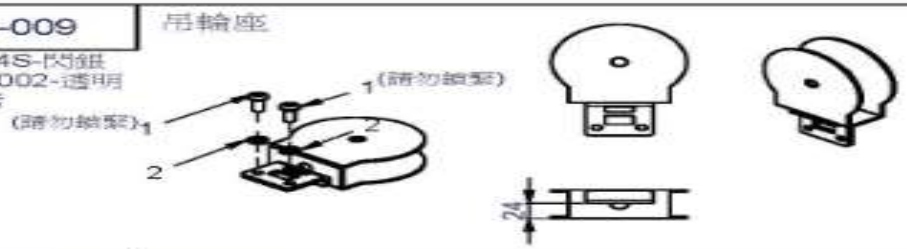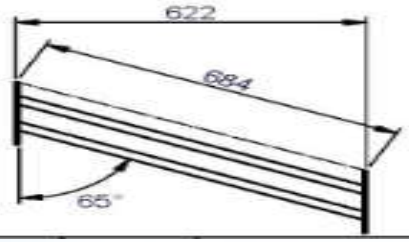零件代碼	品 名 及 圖 案	用量	備 註
20MSP800-B 國麗3124S-閃銀 國麗KL0002-透明 二塗二烤	支架 	1SET	
20MSP800-C 國麗3124S-閃銀 國麗KL0002-透明 二塗二烤	支撐架 	1SET	1.組立3/8"X2" 圓頭內六角螺絲CAP=4PCS 2.組立3/8"X1"L 一般外六角螺絲=4PCS 3.組立M10弧形華司=4PCS 4.組立3/8"彈簧華司=4PCS HLMSP800A內箱
20MRM17000-J 國麗3124S-閃銀 國麗KL0002-透明 二塗二烤	吊輪座 	1SET	1.組立M10X25L 半圓頭內六角螺絲=2PCS 2.組立M10彈簧華司=2PCS HLMSP800A內箱 適用：MSP800 - MIP1400 MRM1700
6640-009 國麗3124S-閃銀 國麗KL0002-透明 二塗二烤	吊輪座 	1SET	1.組立M10X25L 半圓頭內六角螺絲=2PCS 2.組立M10彈簧華司=2PCS HLMSP800A內箱
20MIP1400-G 國麗3124S-閃銀 國麗KL0002-透明 二塗二烤	連接桿 	1SET	工作連絡單 100045 HLMSP800A內箱

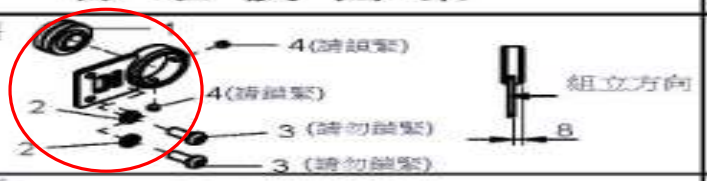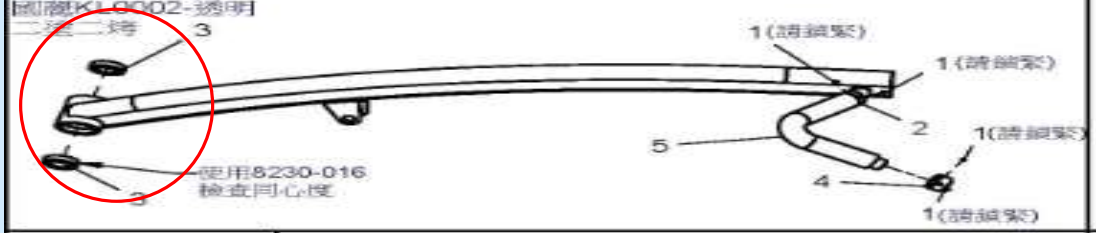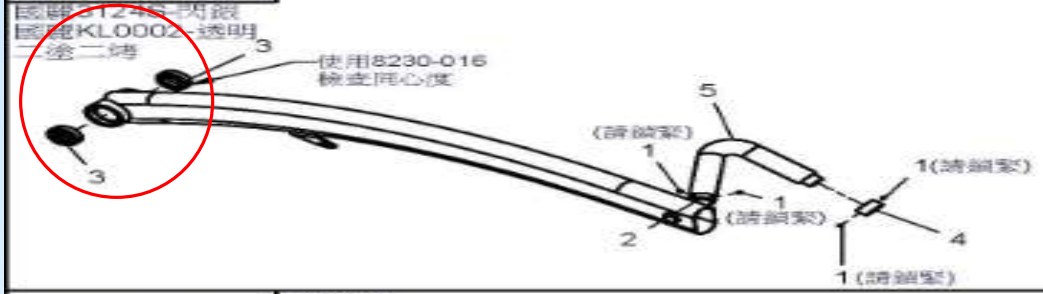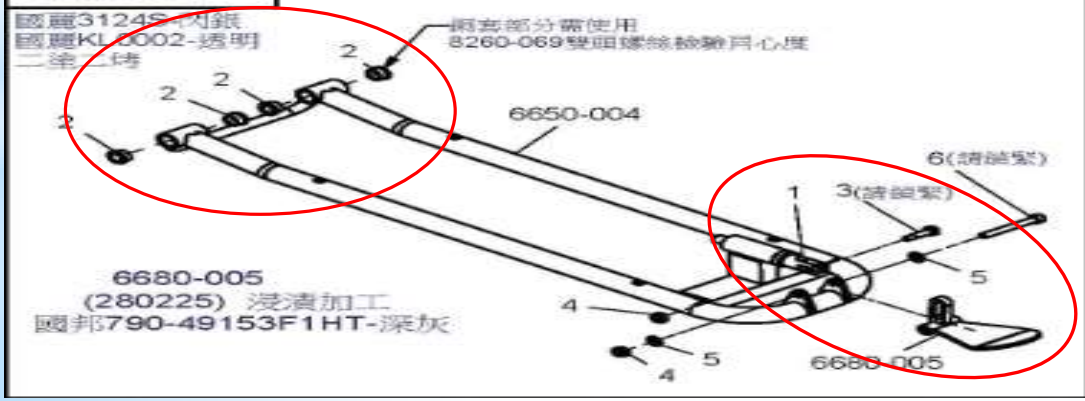
零件代碼	品 名 及 圖 案	用量	備 註
6640-010 國產3124S-閃銀 國產KL0002-透明 二塗二烤	擺動片 	2SET	1.組立8510047魚眼軸承=2PCS 2.組立M10彈簧華司=4PCS 3.組立M10X25L半圓頭內六角螺絲=4PCS 4.組立M8X8L鉚型沈頭螺絲=4PCS HLMSP800A內箱
6690-003 國產3124S-閃銀 國產KL0002-透明 二塗二烤	右扶手 	1SET	1.組立3/16"X3/16"沈頭螺絲=4PCS 2.組立8130-250束子=1PCS 3.組立8510-018軸承=2PCS 4.組立8890-006護套=1PCS 5.組立9162-108 =1PCS PVC浸漬把手Ø24X5tX310L
6690-004 國產3124S-閃銀 國產KL0002-透明 二塗二烤	左扶手 	1SET	1.組立3/16"X3/16"沈頭螺絲=4PCS 2.組立8130-250束子=1PCS 3.組立8510-018軸承=2PCS 4.組立8890-006護套=1PCS 5.組立9162-108 =1PCS PVC浸漬把手Ø24X5tX310L 設變單號 2013090002
6650-004 國產3124S-閃銀 國產KL0002-透明 二塗二烤	背墊架 	1SET	1.組立8250-120調整組=1PCS 2.組立8520-001調套=4PCS 3.組立8260-057(M8)螺絲=1PCS 4.組立M8尼帽=2PCS 5.組立M8華可Ø16邊=2PCS 6.組立M8X65L 圓頭內六角螺絲=1PCS

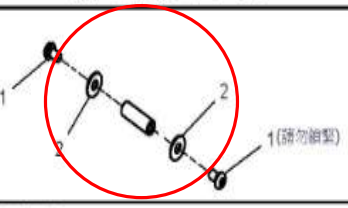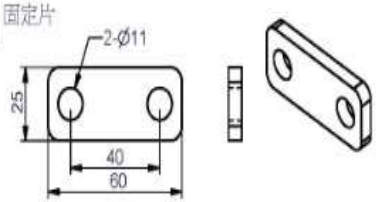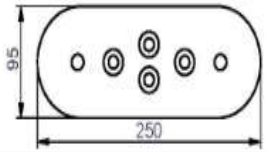
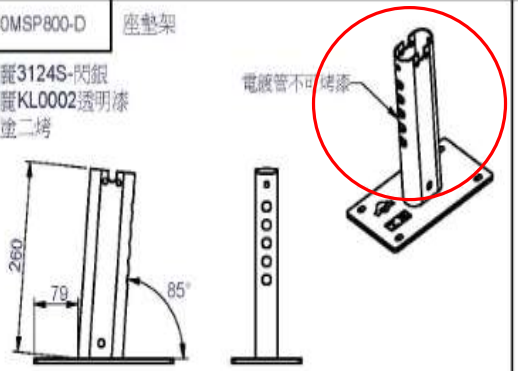
零件代碼	品名及圖案	用量	備註
8210-155 染黑		2PCS	1.組立M10X16L 半圓頭內六角螺絲=4PCS 2.組立M10華司Ø27邊=4PCS HLMSP800A內箱 Ø5/8"X49L
8260-069 電著	雙頭螺絲 	1PCS	HLMSP800A內箱 Ø12.7X255L
8311-117 國麗3124S-閃銀 國麗KL0002-透明 二塗二烤	固定片 	4PCS	HLMSP800A內箱
8313-144 國麗3124S-閃銀 國麗KL0002-透明 二塗二烤	固定片 	1PCS	HLMSP800A內箱
20MSP800-D 國麗3124S-閃銀 國麗KL0002透明漆 二塗二烤	座墊架 	1SET	工作連絡單 100045



零件代碼	品名及圖案	用量	備註
23MSP800A	附件包	1SET	HLMSP800A內箱
25MSP800A	皮帶輪包	1PCS	HLMSP800A內箱
9420-104	MSP800動作圖銘板	1SET	9630-126氣泡袋X1 160X460XB-平口
FMSP800A FMSP800B	2450mm平面皮帶 1950mm平面皮帶 	各1PCS	HLMSP800A內箱
GMSP800A	螺絲包	1SET	HLMSP800A內箱
KMSP800	說明書	1SET	
			2.9630-176蜂巢紙=10PCS 45HX70X30 3.9630-177蜂巢紙=1PCS 128HX35X35

零件代碼	品 名 及 圖 案	用量	備 註
6610-007	門框=1SET 國麗3124S-閃銀 國麗KL0002透明漆 二塗二烤		1. 2.組立M6X12L 半圓頭內六角螺絲=1PCS 3.組立M6華可Ø13=1PCS 4.組立M10X12L 圓頭內六角-CAP螺絲=4PCS 5.組立M10X25L 錐形內六角螺絲=5PCS 6.組立M6拉帽 (身體有花)=16PCS 7. 8. 9. 10. 11. 12.組立1/2"X1"L 一般外六角螺絲=2PCS 13.組1/2"X1-1/4"L 一般外六角螺絲=2PCS 14.組立1/2"華可Ø25=4PCS 15.組立M10X25L 半圓頭內六角螺絲=2PCS 16.組立M10彈簧華可=2PCS 17.組立8130-231端蓋=1PCS 18.組立8520-008鋼華可=2PCS 19.
6640-011	單吊輪座 國麗3124S-閃銀 國麗KL0002透明漆 二塗二烤 配合底軸心不可烤漆 層鉸孔Ø25.4	1SET	
9220-052	護網 壓克力護網 透明黑 文字方向	1PCS	1.貼9440-117防夾手貼紙=1PCS 設變單號 2019030002
9220-016	護網 壓克力護網 透明黑	1PCS	

零件代碼	品 名 及 圖 案	用量	備 註
9220-023	護網 壓克力護網 透明黑	1PCS	
9211-148	上蓋 文字向上	1SET	1. 貼9441-370=2PCS 鋁標(Steelflex) H9211148內箱
8400-033	擺擇上片	1SET	HLMSP800B內箱
8210-216C	20孔選擇桿組 電鍍	1SET	1.組立8260-076固定桿=1PCS 2.組立8210-216 20孔選擇桿=1PCS 3.組立1/2"螺帽=1PCS 4.組立1/2"彈簧華可=1PCS
	設變單號 2016010001		
8331-057	L型片 國麗3124S-閃銀	4SET	1.組立M6X12L 半圓頭內六角螺絲=4PCS 2.組立M6華可Ø13=4PCS HLMSP800B內箱
8313-169	固定片 電鍍	1PCS	1.組立M10X25L 半圓頭內六角螺絲=2PCS 2.組立M10彈簧華可=2PCS HLMSP800B內箱

零件代碼	品 名 及 圖 案	用量	備 註
8331-058 國麗3124S-閃銀	L型片 	3SET	1.組立M6X12L 半圓頭內六角螺絲=3PCS 2.組立M6華司-Ø13=3PCS HLMSP800B內箱
8313-144 國麗3124S-閃銀 國麗KL0002透明漆 二塗二烤	固定片 	2PCS	HLMSP800B內箱
8280-042		2PCS	設變單號 2019030002
23MSP800B	附件包	1SET	HLMSP800B內箱
23MDCUP	附件包-CUP	1SET	HLMSP800B內箱
25MSP800B	皮帶輪包	1SET	HLMSP800B內箱
GMSP800B	螺絲包	1SET	HLMSP800B內箱
8331-056 國麗3124S-閃銀	L型片 	1SET	1.組立M6X12L 半圓頭內六角螺絲=1PCS 2.組立M6華司-Ø13=1PCS HLMSP800B內箱
			1. 9180-025特固龍=4PCS Ø48X28X75L 2.9180-028特固龍=2PCS Ø48X31X75L 3.9630-009束帶=5PCS 7.5X2TX540L 4.9630-031氣泡袋=1PCS 200X300X3A 5.9630-064氣泡布=1PCS 1400mmX1400mm 6.9630-080氣泡布=1PCS 1900mmX2000mm 7.9630-151氣泡袋=1PCS 205X900XB-平口 8.9630-176蜂巢紙=8PCS 45HX70X30

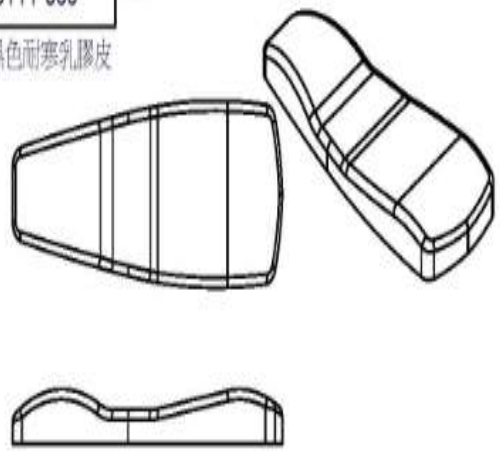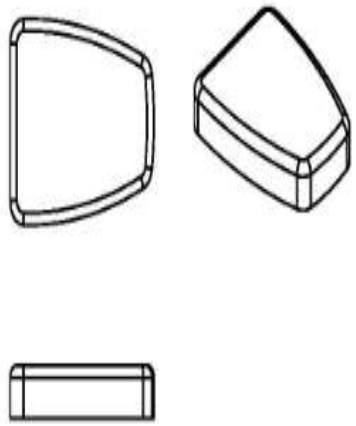零件代碼	品名及圖案	用量	備註
9111-069 黑色耐寒乳膠皮	背墊 	1PCS	
9121-070 黑色耐寒乳膠皮	座墊 	1PCS	設變單號 2010010001

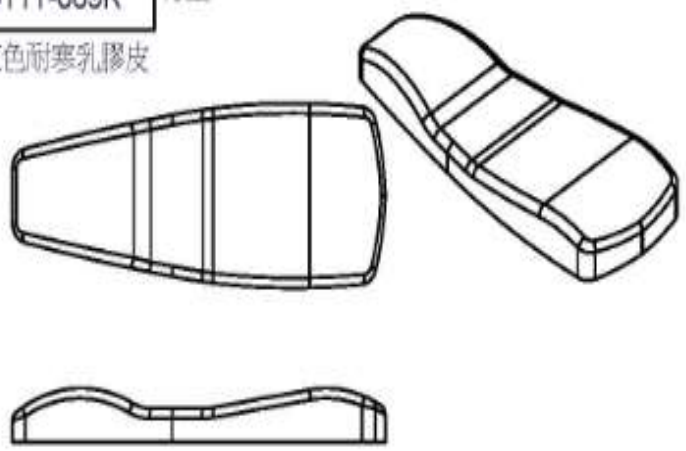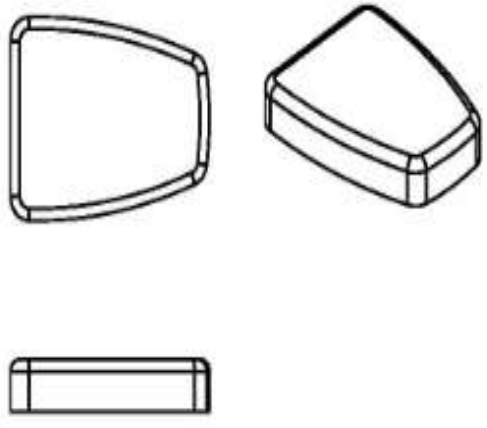零件代碼	品名及圖案	用量
9111-069R 紅色耐寒乳膠皮	背墊 	1PCS
9121-070R 紅色耐寒乳膠皮	座墊 	1PCS

MSP-800 ASSEMBLY INSTRUCTIONS

HARDWARE ILLUSTRATION

D1. Ø60 CAP COVER(8130-231)---------- [2PCS]
D2. 40X80X2t END CAP(9211-113)---------- [2PCS]
D3. Ø25 NYLON BUSHING (9211-151)---------- [4PCS]
D4. 50X100X56 RUBBER PAD(9214-038)---------- [2PCS]
D5. 108X15tX263L RUBBER PAD(9310-075)---------- [1PCS]
D6. Ø115X50L PULLEY(9213-042B)---------- [3PCS]
D7. 2270mm BELT (FMSP800A)---------- [1PCS]
D8. 1950mm BELT (FMSP800B)---------- [1PCS]

D1



D2



D3



D4



D5



D6



D7



D8



MSP-800 ASSEMBLY INSTRUCTIONS

FRAME HARDWARE ILLUSTRATION FOR DOOR

DD1. 3/4" SHAFT COLLAR (9211-147) ---------- [2PCS]
DD2. Ø4" RUBBER PAD (9310-017) ---------- [2PCS]
DD3. 108X263 RUBBER PAD (9310-075) ---------- [2PCS]

DD5. Ø115 PULLEY (9213-042B) ---------- [3PCS]
DD6. 2270mm BELT (FMSP800C1) ---------- [1PCS]
DD7. BOTTLE BRACKET BOARD (8388-025) ---------- [1PCS]
DD8. BOTTLE RACK (9260-320) ---------- [1PCS]
DD9. BOTTLE (9260-123) ---------- [1PCS]
DD12. TOP PLATE(8400-033)---------- [1PCS]
DD13. 3/4" SHAFT COLLAR (9211-167) ---------- [2PCS]
DD14. SELECTOR ROD (8210-216C)---------- [1PCS]

DD1



DD2



DD3



DD5



DD6



DD7



DD8



DD9



DD12



DD13




DD14



MSP-800 ASSEMBLY INSTRUCTIONS

PARTS ILLUSTRATION SHEET


A [1SET]

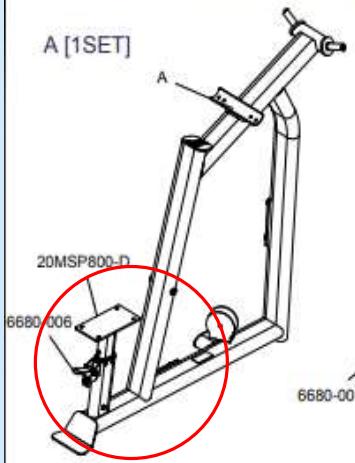


B [1SET]




C [1PCS]

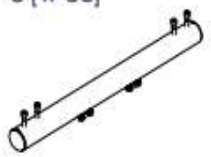


D [1SET]

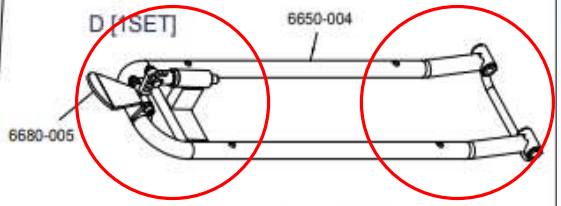

E [1SET]
20MRM1700-J

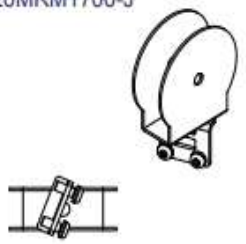


F [1SET]
6640-009

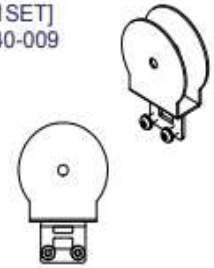


G [1PCS]



H [1PCS]
6690-003

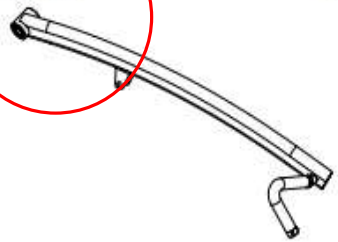


I [1PCS]
6690-004

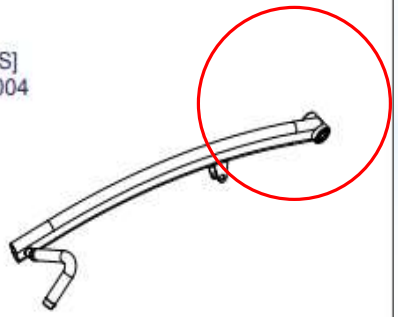

MSP-800 ASSEMBLY INSTRUCTIONS

PARTS ILLUSTRATION SHEET

J [2PCS]
6640-010

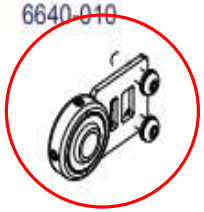


K [1SET]
8313-169



L [2PCS]
8210-155
Ø5/8"X49L




M [1PCS]
8260-069
Ø1/2"X255L

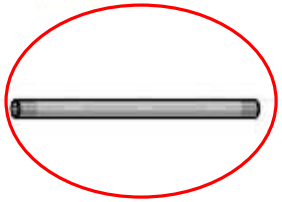


N [4PCS]
8311-117
60X25X6T




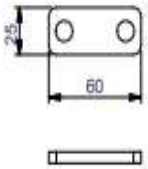

O [1PCS]
8313-144
95X6TX250L

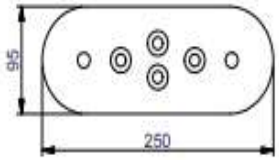

P [1PCS]
9111-069

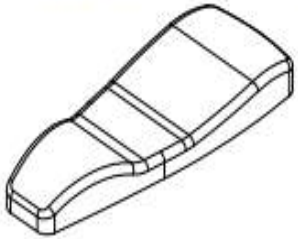

Q [1PCS]
9121-070




R [1PCS]
9420-104



MSP-800 ASSEMBLY INSTRUCTIONS

FRAME PARTS ILLUSTRATION SHEET FOR DOOR

AA2 [1SET]

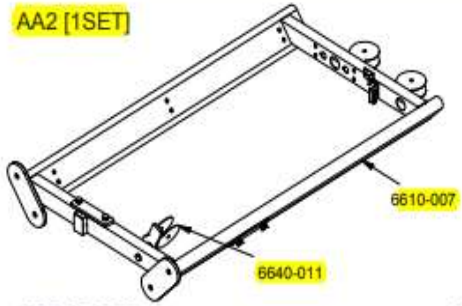


AC2 [1PCS]
9220-052



AD1 [1PCS]
9220-016




AE [1PCS]
9220-023

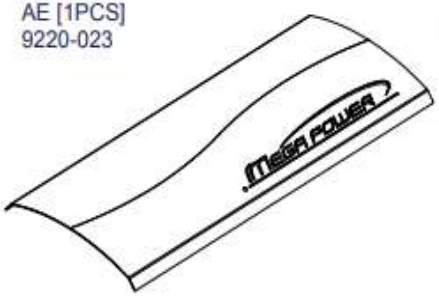

AF [1SET]
9211-148



AH [4SET]
8331-057

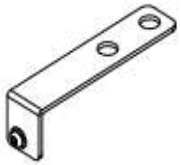

MSP-800 ASSEMBLY INSTRUCTIONS

FRAME PARTS ILLUSTRATION SHEET FOR DOOR

AI [3SET]
8331-058




AJ [2PCS]
8313-144




AK [1SET]
8331-056




AL2 [2PCS]
8280-042
Ø3/4"X1433L

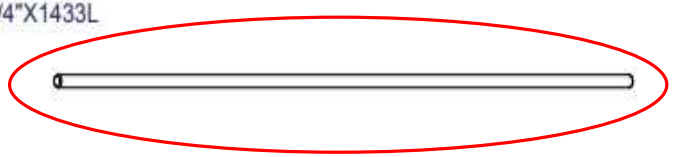


AO [2PCS]
8311-117



AQ [1SET]
8311-194

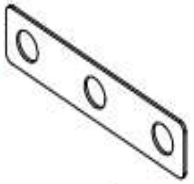


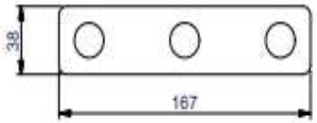


MSP-800 ASSEMBLY INSTRUCTIONS




Above shows STEP 1
assembled and completed

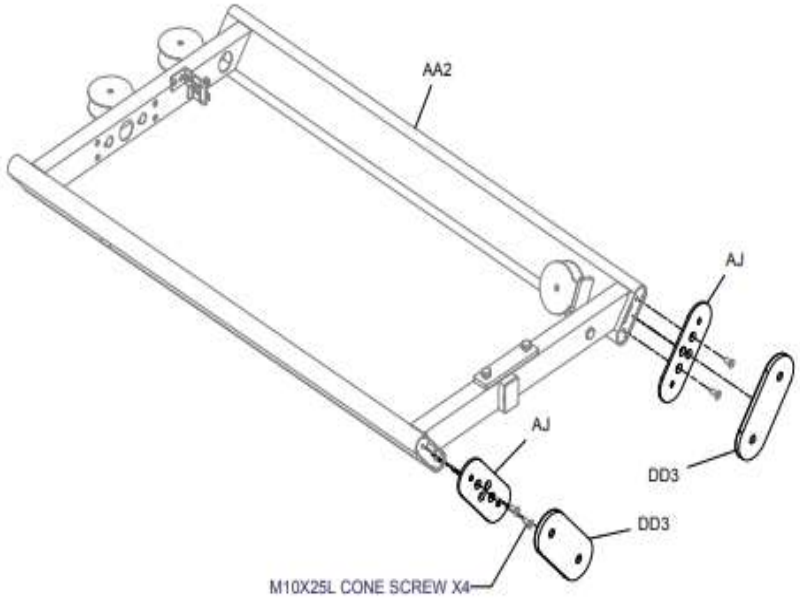


MSP-800 ASSEMBLY INSTRUCTIONS

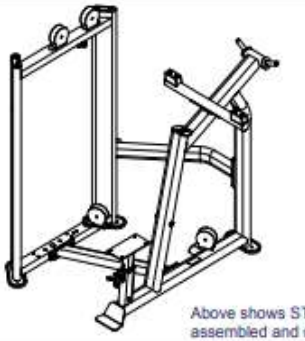


Above shows STEP 2
assembled and completed

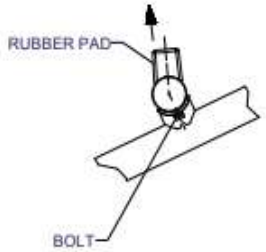


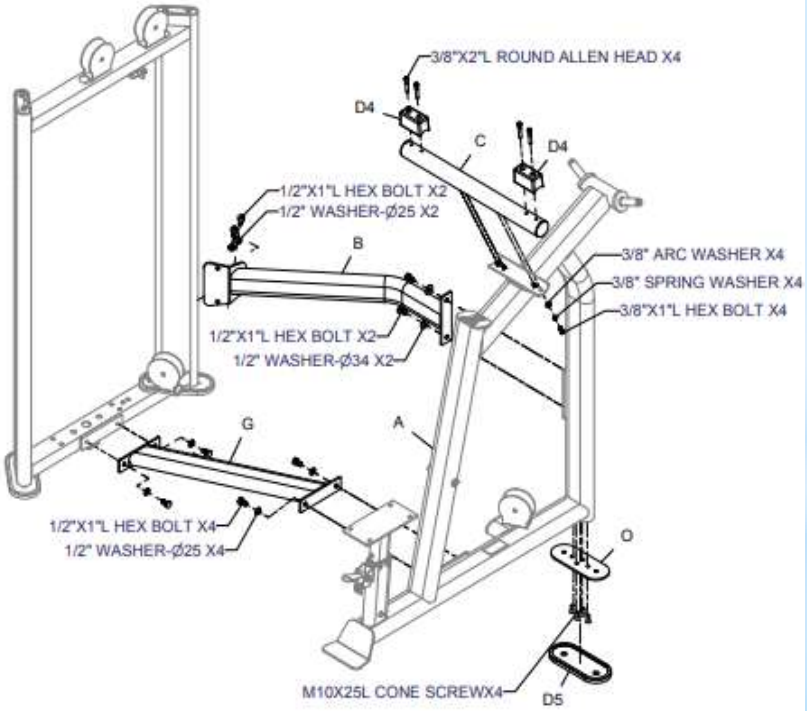


MSP-800 ASSEMBLY INSTRUCTIONS

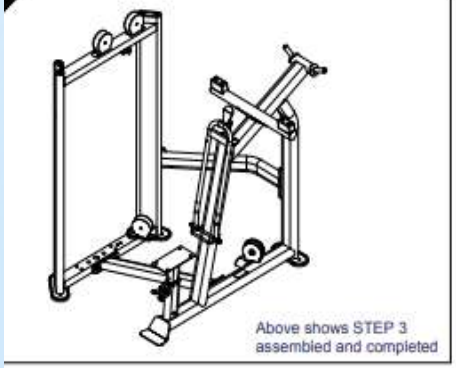


Above shows STEP 3
assembled and completed

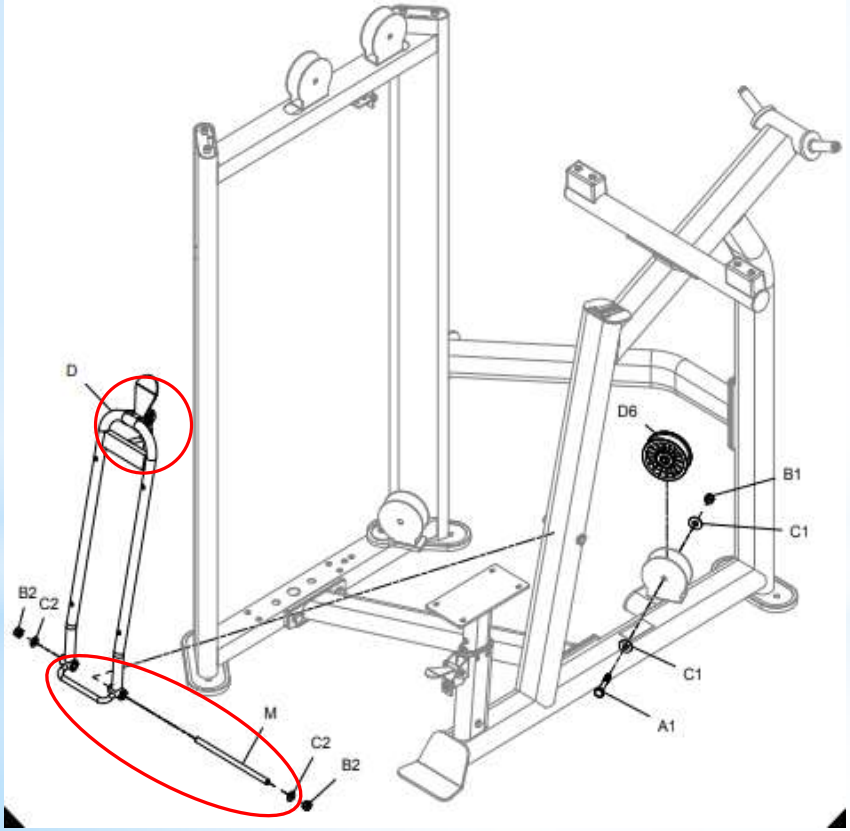

MSP-800 ASSEMBLY INSTRUCTIONS

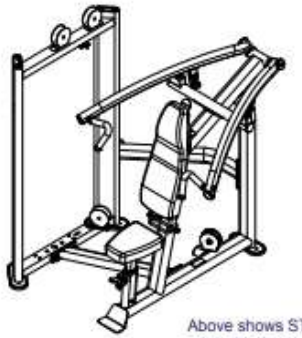


Above shows STEP 4
assembled and completed

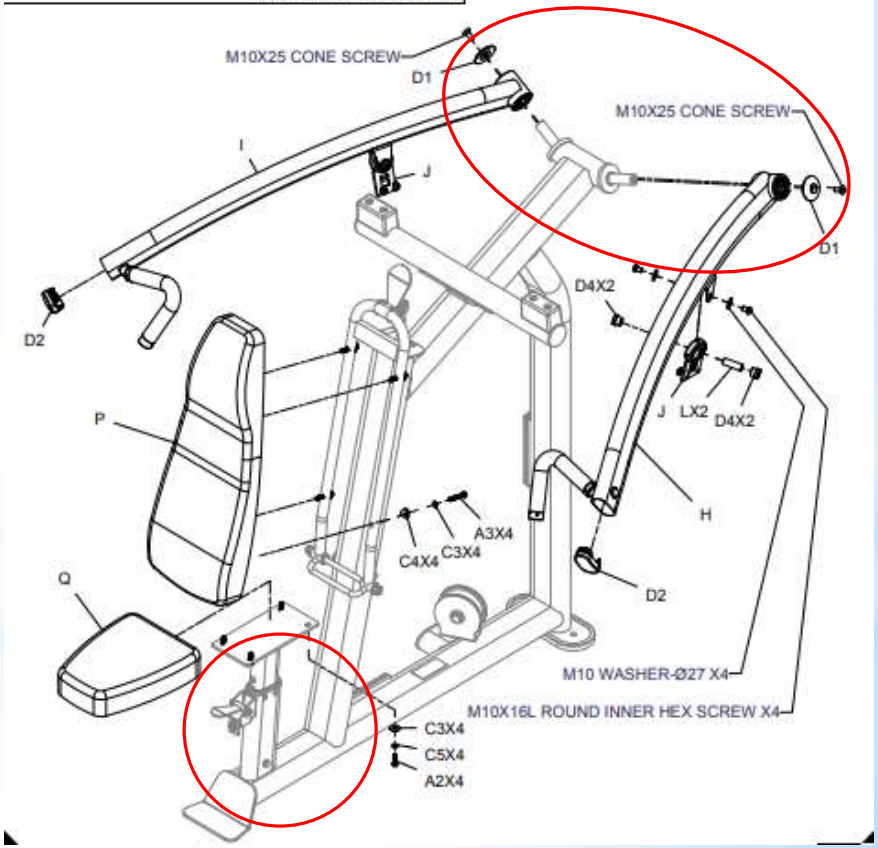


MSP-800 ASSEMBLY INSTRUCTIONS




Above shows STEP 5
assembled and completed

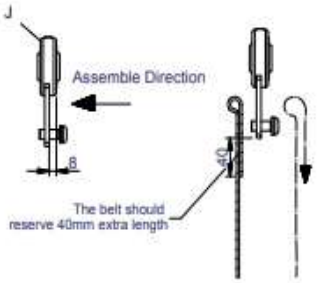

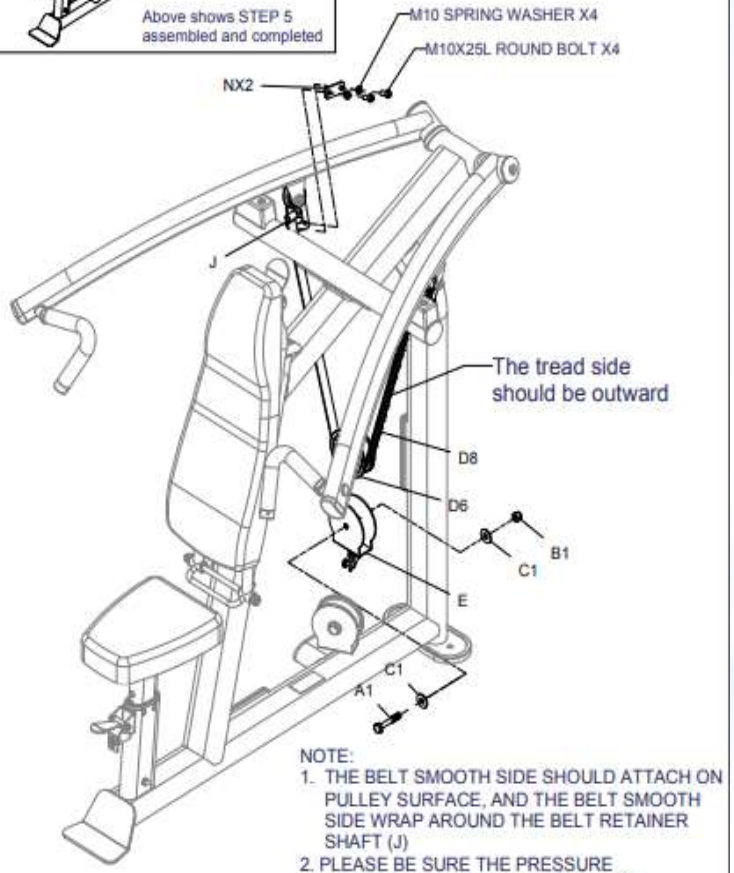


NOTE:
1. THE BELT SMOOTH SIDE SHOULD ATTACH ON PULLEY SURFACE, AND THE BELT SMOOTH SIDE WRAP AROUND THE BELT RETAINER SHAFT (J)
2. PLEASE BE SURE THE PRESSURE BETWEEN THE BELT CLAMPS (N) DO NOT EXCEED 70 PSI

MSP800 ASSEMBLY INSTRUCTIONS

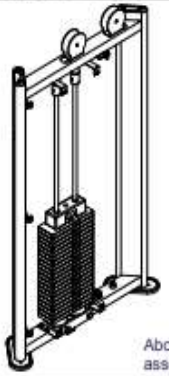


Above shows STEP 6
assembled and completed

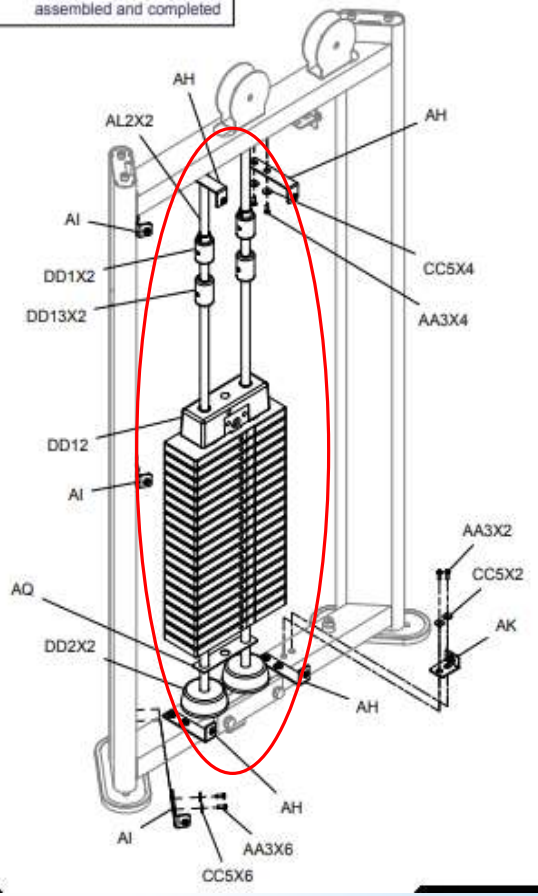


MSP800 ASSEMBLY INSTRUCTIONS




Above shows STEP 7 assembled and completed

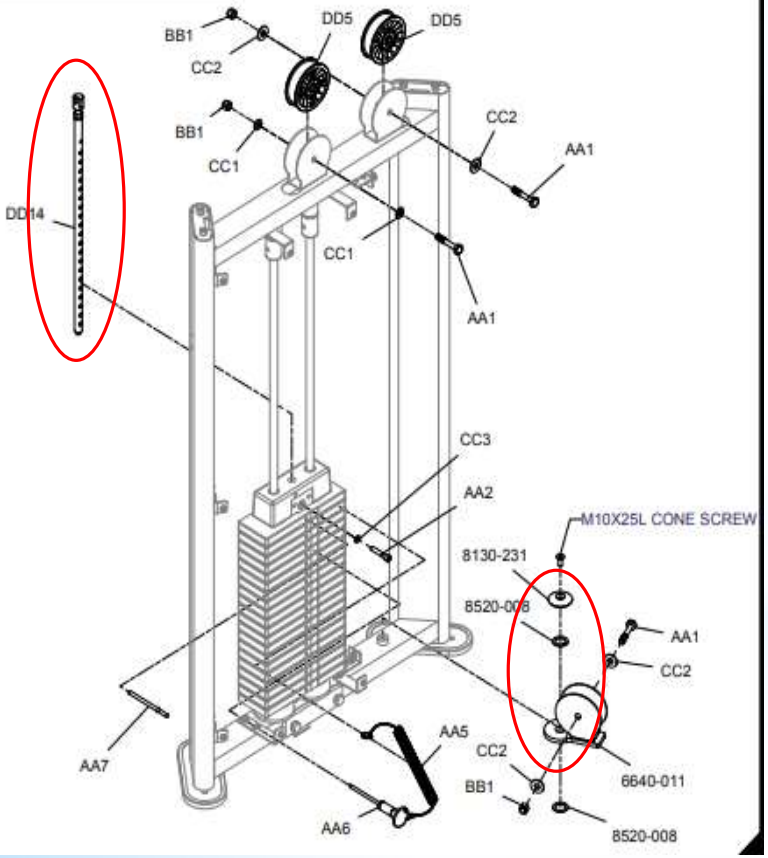


MSP800 ASSEMBLY INSTRUCTIONS

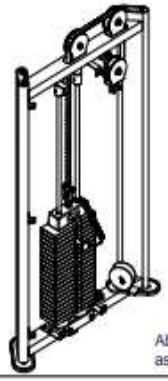


Above shows STEP 8 assembled and completed

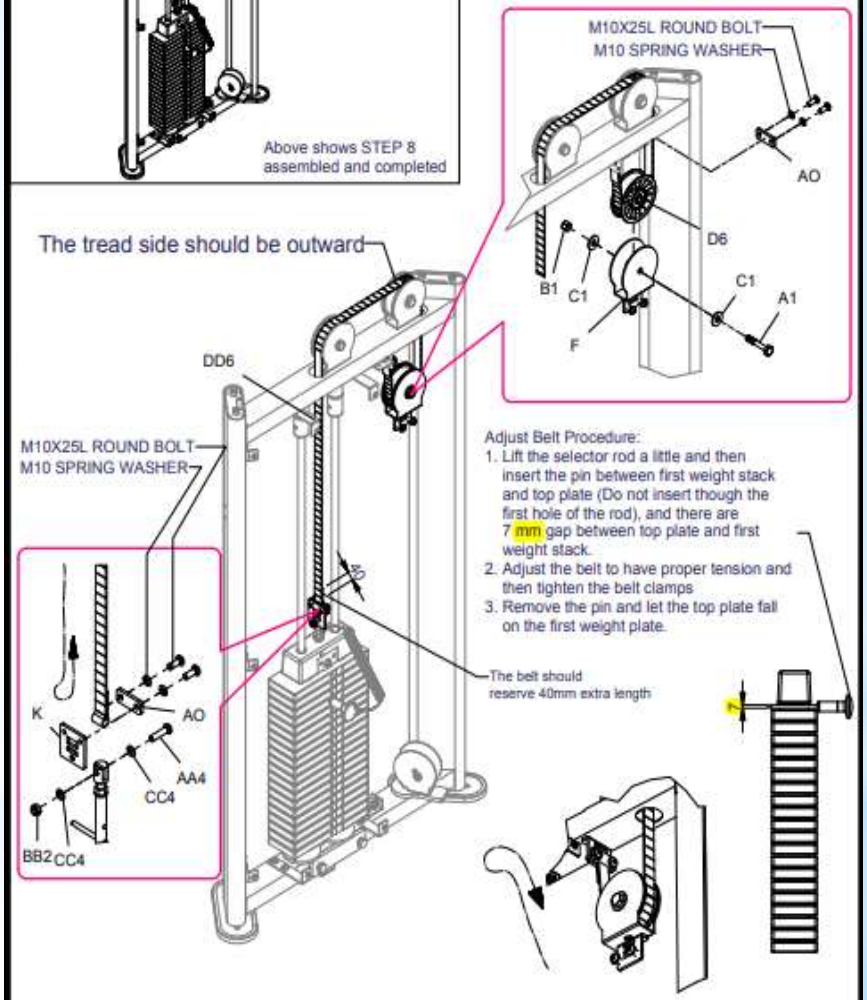



MSP800 ASSEMBLY INSTRUCTIONS

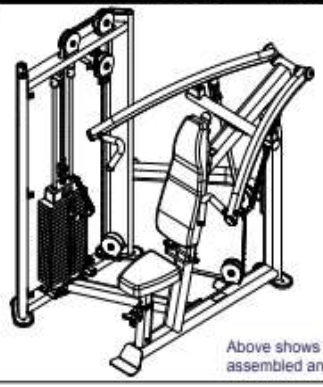

Above shows STEP 9 assembled and completed

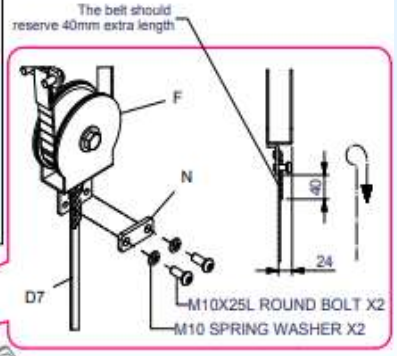


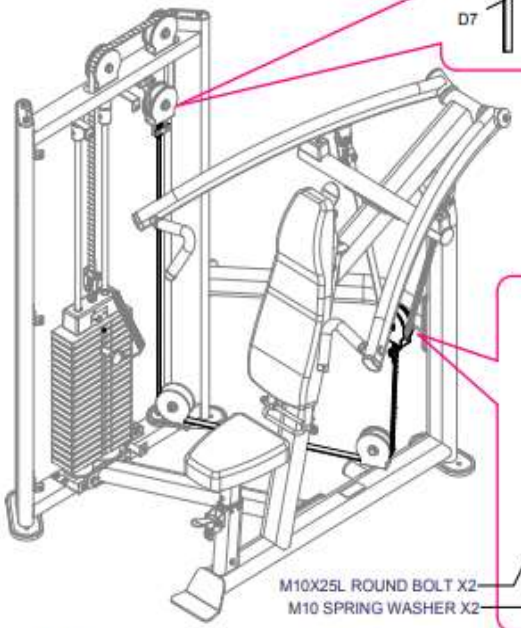

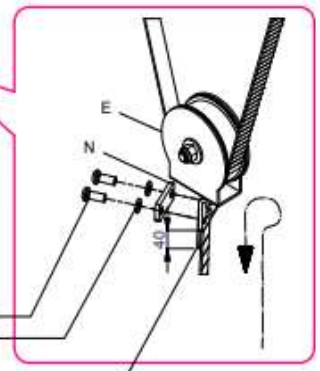


NOTE:
1. THE BELT SMOOTH SIDE SHOULD ATTACH ON PULLEY SURFACE, AND THE BELT SMOOTH SIDE WRAP AROUND THE BELT RETAINER SHAFT (E)
2. PLEASE BE SURE THE PRESSURE BETWEEN THE BELT CLAMPS (N) DO NOT EXCEED 70 PSI

MSP800 ASSEMBLY INSTRUCTIONS

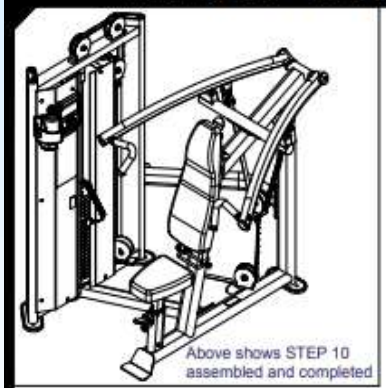



Above shows STEP 10 assembled and completed

STEP 1

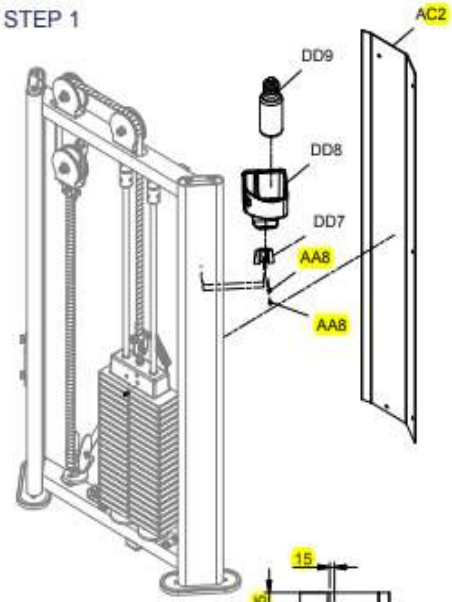


STEP 2

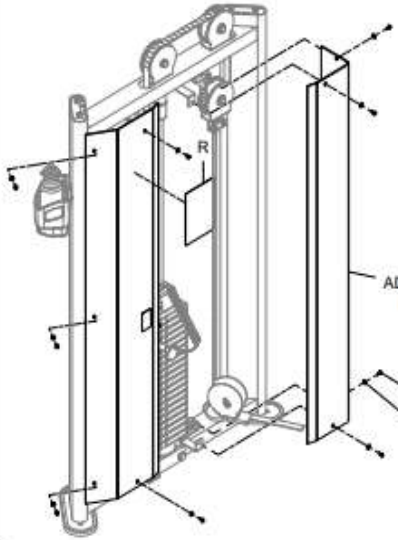


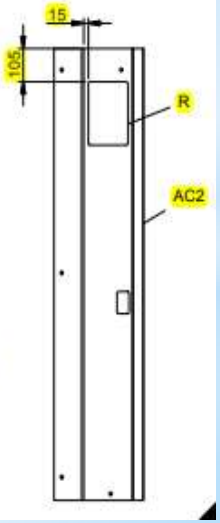

MSP800 ASSEMBLY INSTRUCTIONS

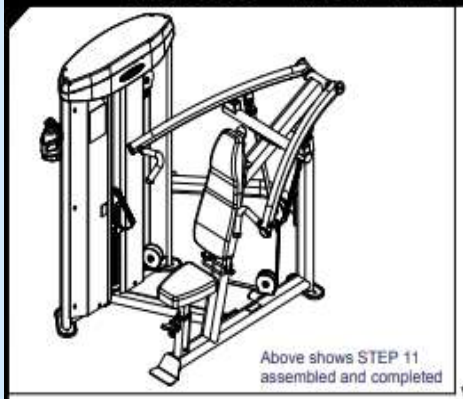



Above shows STEP 11 assembled and completed

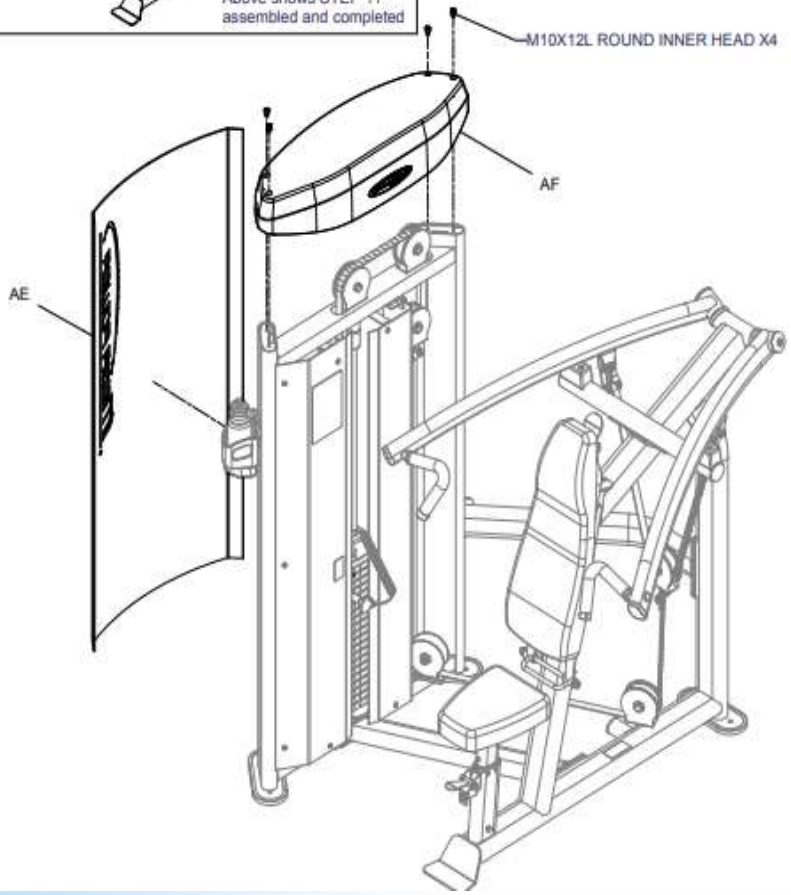

ASSEMBLY INSTRUCTIONS


Adjust Flat Belt Steps

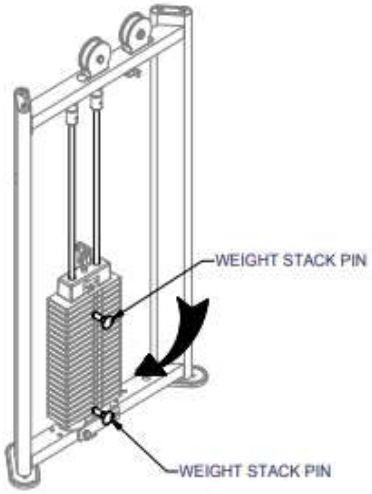

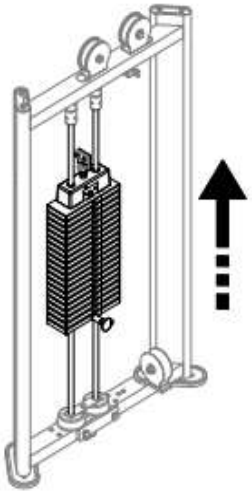

1. When installing flat belt, please put the weight stack pin into 4th weight stack. After installing flat belt, please put the weight stack pin into 20th weight stack.


2. When weight stack pin put into 20th weight stack, please do workout with the machine around 1 minute or 5-10 sets in order to extend the flat belt,flat belt will be loosed a little bit.

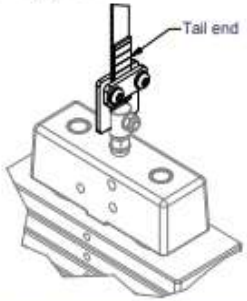

3. Pull end of flat belt as drawing showed to make the flat belt be tightened. (After using the machine 3 months to 6 months, please check flat belt.If the flat belt is loosed, please follow this step to tighten the belt again.)


Guide on Selector Rod Adjustment

STEP 1

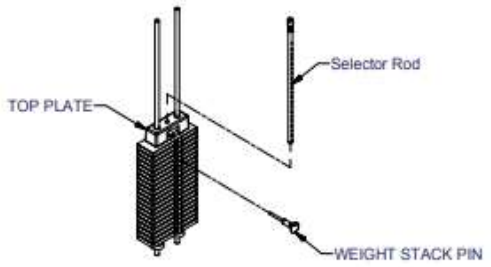


Step 1
Place Selector Rod into Top Plate.
Then put selector pin into the weight plate to fix the rod.

STEP 2

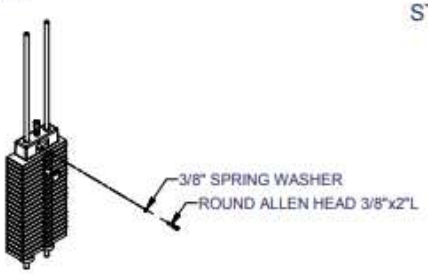


Step 2
Screw the 3/8"x2"L Round Allen Head into Top Plate but not tighten it up.

STEP 3

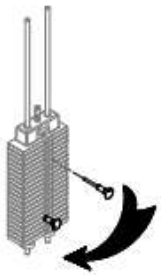


Step 3
Place the selector pin to each weight plate (5,10,15,20....) to check the smoothness.

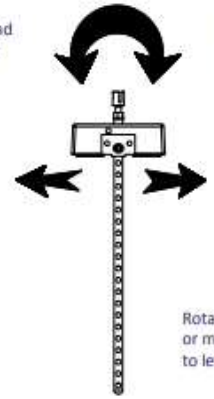

Rotate the Selector Rod slightly
or move the 3/8"x2"L Round Allen Head
to left and right and repeat Step 3.

MEGA POWER series
JUNGLE GYM series

project	Part number	Name	Specification	Quantity	Remark
1	38-220 CAP	round allen head	3/8"X2"L round allen head-CAP	1	
2	38-SPWAS 87322003	3/8" spring washer		1	
3	8210-216C	20 hole Selector Rod		1	
4	8250-166	pin	Ø7.9X137L	1	
5	8250-162	weight stack pin	Ø7X110L	1	
6	8400-010	10LB weight stack plate	102x22hx280L 10LB	28	
7	8400-033	top plate		1	

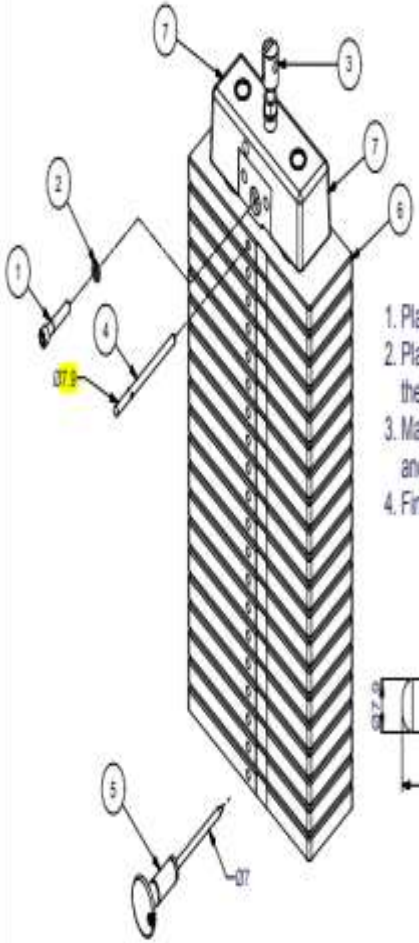

1. Place #4 - 8250-166 (pin) into the first weight plate.
2. Place #5 - 8250-162 (weight stack pin) into the the hole 20th of the weight stack.
3. Make sure #7 (top plate) cling to #6 (first weight plate) and fix in #1 - 3/8"X2"L screw and #2 - 3/8" spring washer.
4. Finally remove #5 - 8250-162 (weight stack pin) and use as usual.



(8250-166)PIN

V2-112017

*Well done!

