*PLLA Maintenance



* Customers can put some grease on pivot points(red circle place), with brass or gunmetal bushings.






* Let's maintain your machine!

PLLA5 PARTS


A[1PCS]

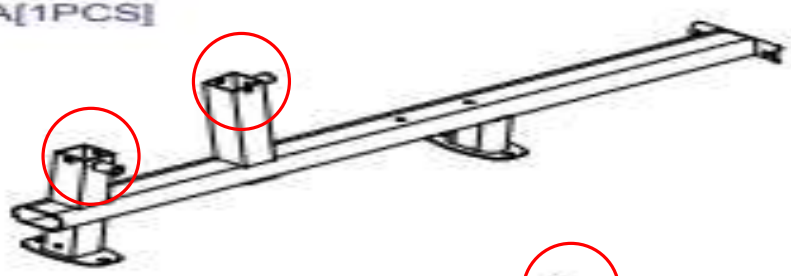

B[1PCS]



C[1PCS]

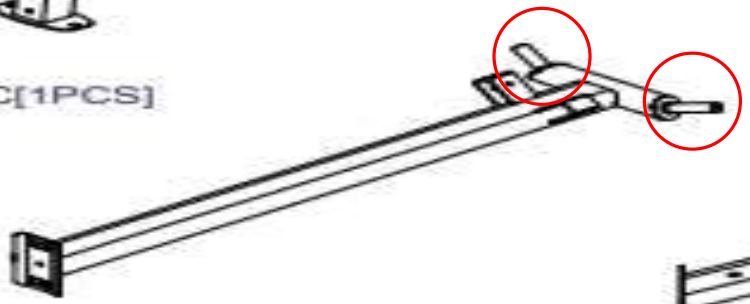

D[2PCS]




E[1PCS]



F[1PCS]




G[1PCS]

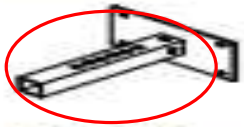

P[4PCS]
6730001



H[1PCS]

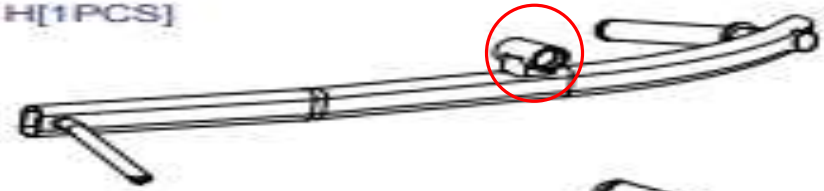


M[1PCS]
9121078



Q[1PCS] 8830-023
Pre-installed



I[1PCS]

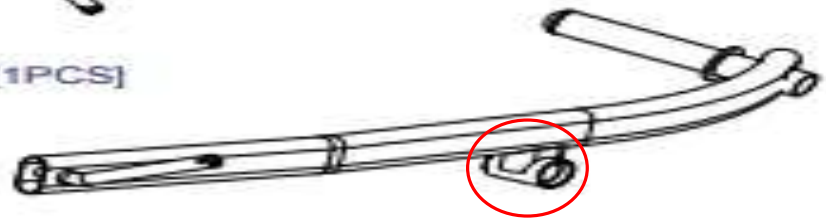

J[4PCS]
8323188





K[1PCS]
8343163





PLLA.5 PARTS


D1.50X100 END CAP (9211-193)	1PCS
D2.RUBBER INSERT(9310-076)	4PCS
D3.NYLON BUSHING(9211-047)	2PCS
D6.CAP SLEEVE (9212-026)	26PCS
D7.PULLEY SPACER(8530-009)	2PCS
D8.FOAM ROLLER(9161-076)	2PCS
D9.NYLON WASHER(9214-008)	2PCS
D10.END COVER (9211-157)	2PCS
D11.END CAP(9211-091)	1PCS
D12.RUBBER INSERT(9310-077)	2PCS
D13.END CLOSURE(8130-248)	2PCS
D15.RUBBER INSERT(9310-016)	6PCS
D16.PINCH COCK(OC-06)	2PCS
D17.END CLOSURE(8130-424)	2PCS (Pre-installed)
D19.40X80 END CAP(9211-192)	4PCS
D20.END CLOSURE (8130-253)	2PCS(Pre-installed)
D21.PONTIL (8230-025)	2PCS(Pre-installed)
D22.CHRONE COLLAR (8890-061)	2PCS(Pre-installed)
D23.BEARING(8510-037)	4PCS(Pre-installed)
D24.IMPREGNATED WITH HANDLE (9162-163)	2PCS(Pre-installed)
D25.60X60 END CAP(9211-092)	1PCS

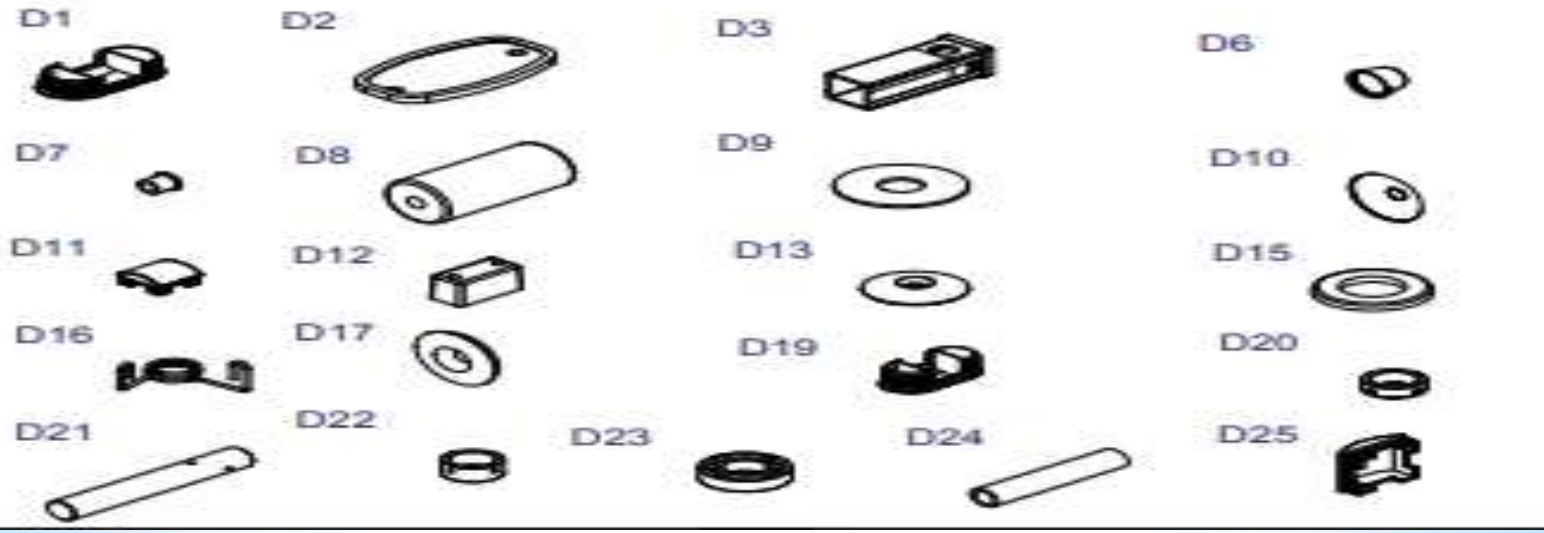

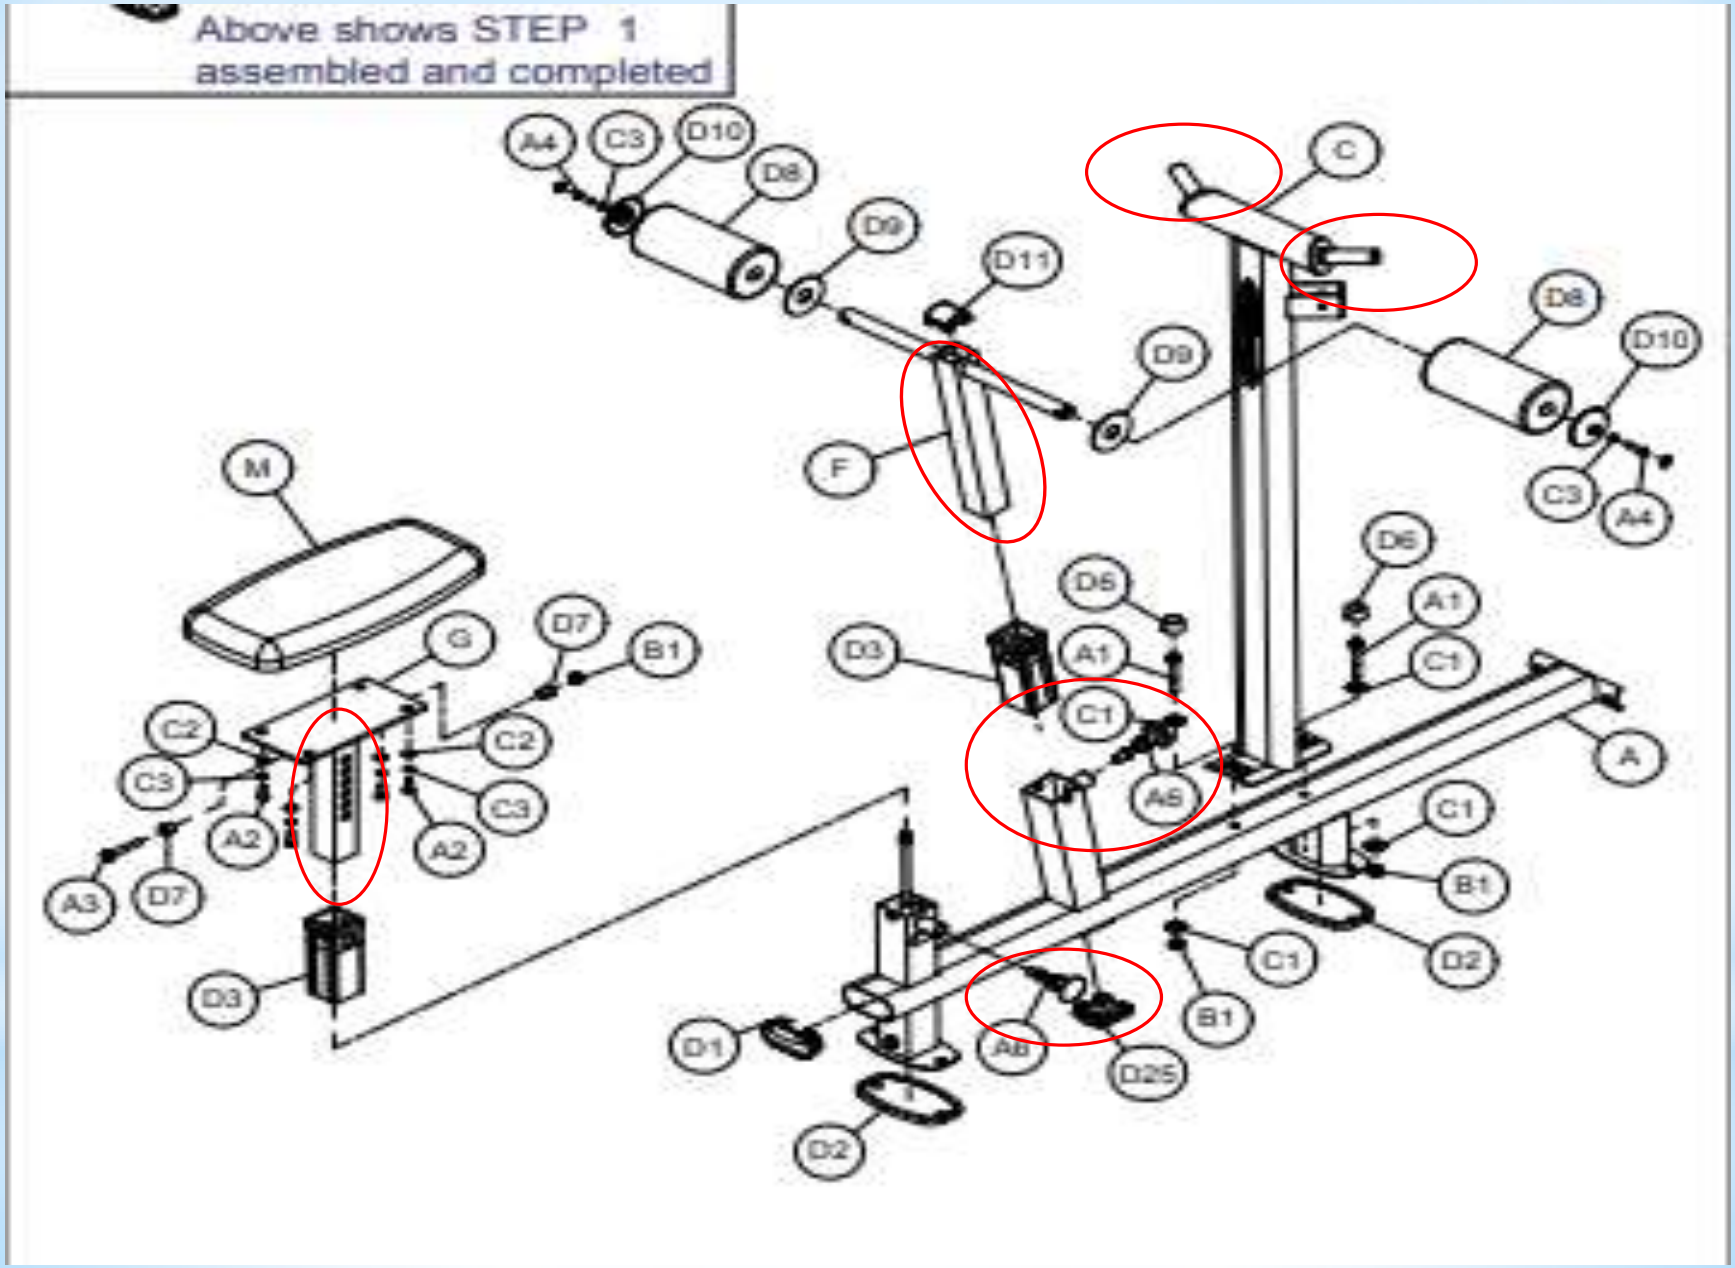
Above shows STEP 1
assembled and completed
A4
C3
D10
D8
D9
D11
C
D8
D10
D9
F
C3
A4
M
D6
D5
A1
G
D7
B1
D3
A1
C1
C2
C1
A
C2
C3
C3
A5
C1
A2
A2
B1
A3
D7
C1
D2
D3
B1
A6
D1
D25
D2

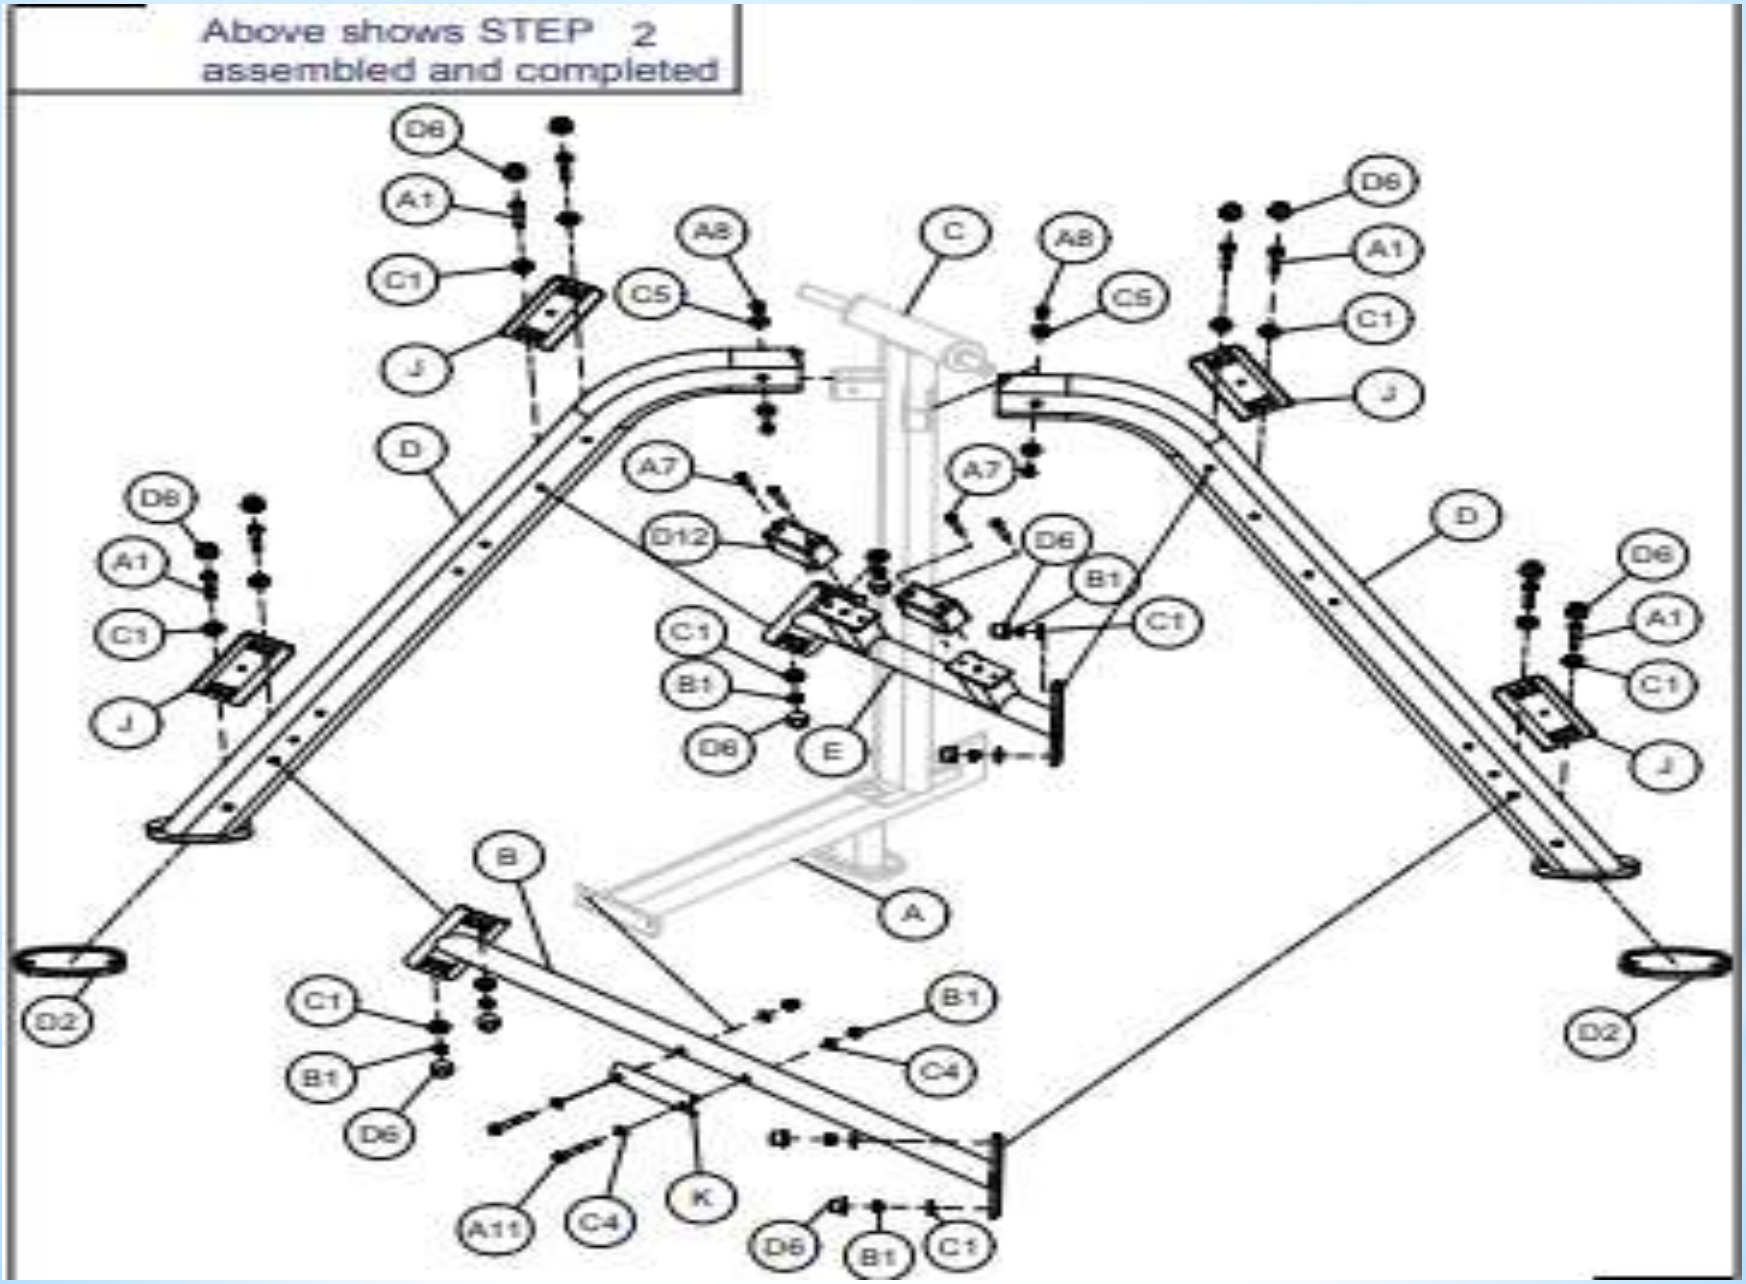
Above shows STEP 2
assembled and completed
D6
A1
C1
J
A8
C5
C
D
A7
D12
B1
E
B
A
K
A11
C4
D2

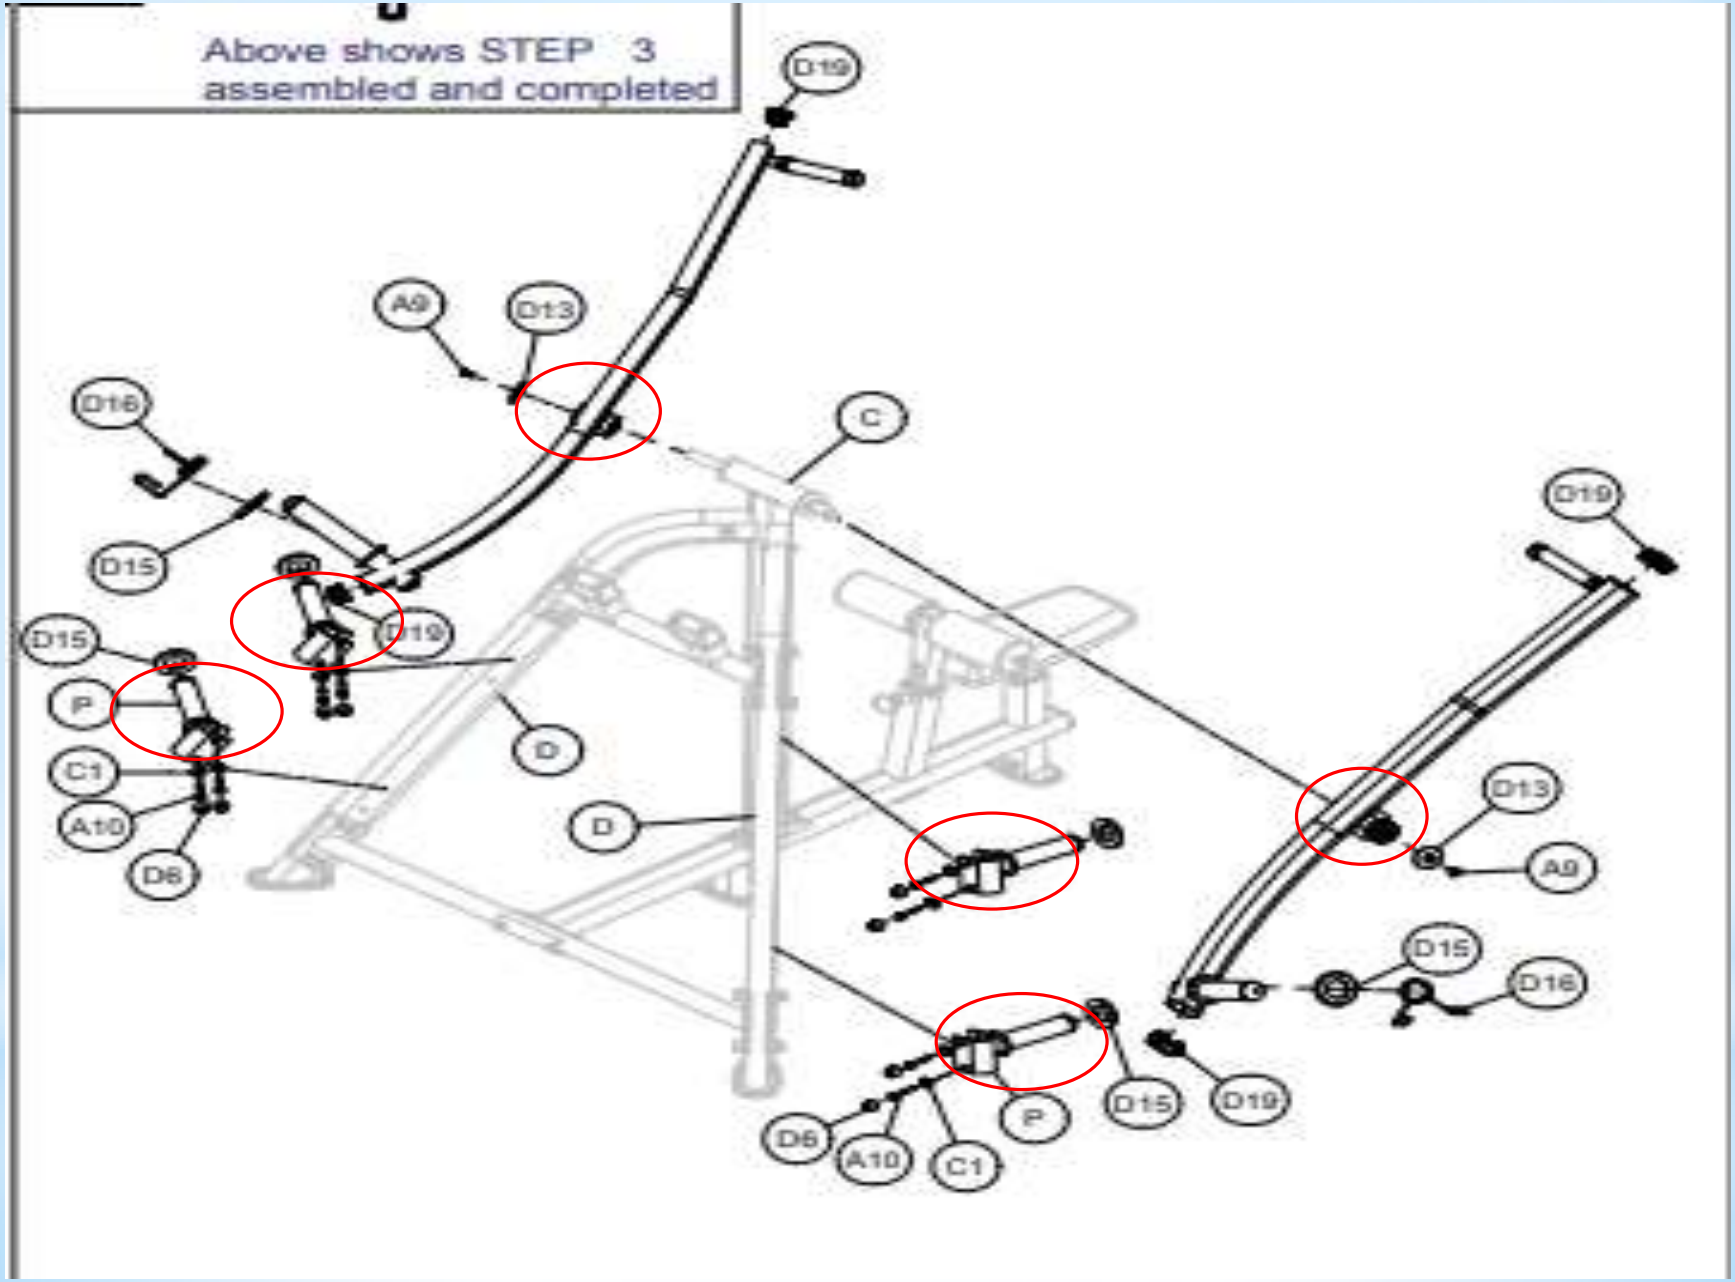
Above shows STEP 3
assembled and completed
D19
A9
D13
D16
C
D15
D19
D15
P
C1
A10
D6
D
D
D19
D13
A9
D15
D16
P
D15
D19
D6
A10
C1

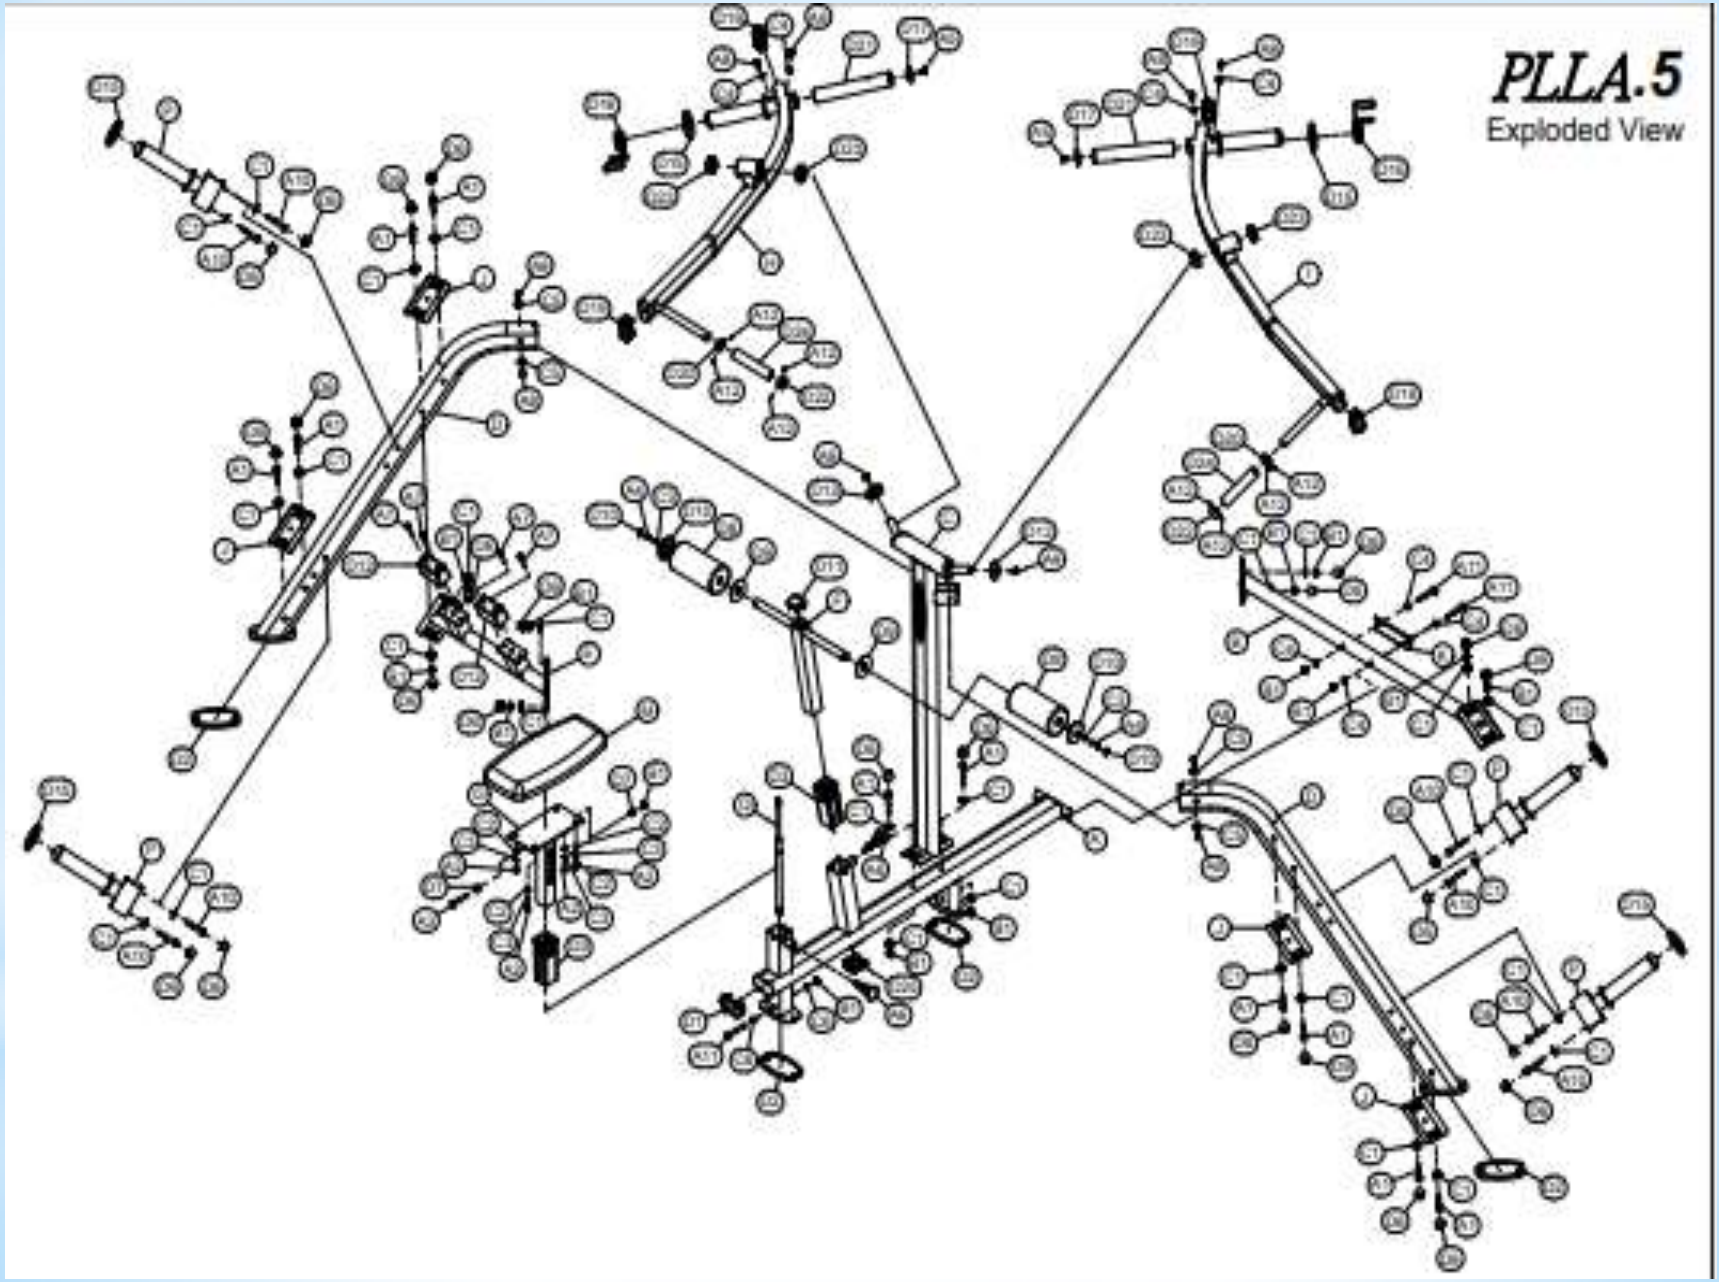
PLLA.5
Exploded View

*Well done!

