*PLSR Maintenance



* Customers can put some grease on pivot points(red circle place), with brass or gunmetal bushings.







* Let's maintain your machine!

PLSR.5 PARTS

A [1PCS]

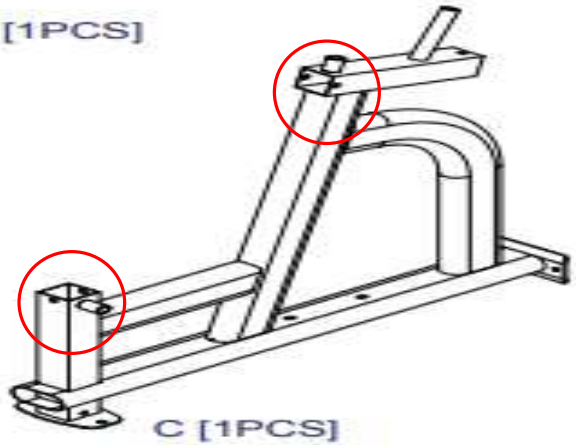


B [1PCS]

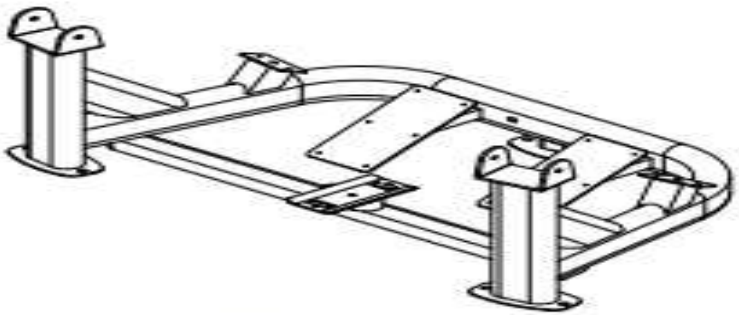


C [1PCS]




D [1PCS]

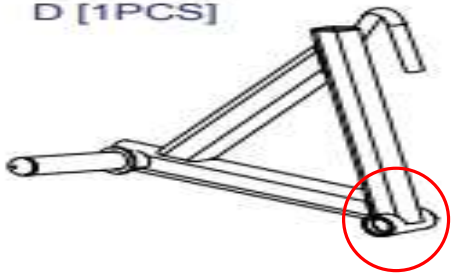

F [1PCS]



G [1PCS]

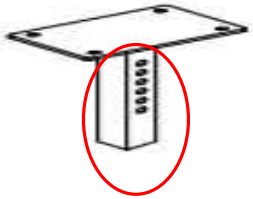

H [1PCS]



J [2PCS]
8323-234




L [1PCS]
8830-022
(Pre-installed)



K [1PCS]
8830-024
(Pre-installed)




N [1PCS]
9111-073



M [1PCS]
9121-078




Q [2PCS]
8360-178

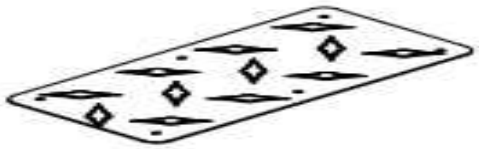


PLSR.5 PARTS


D1. Nylon Bushing (9211-047)	[2PCS]
D2. Chrome collar (8890-061) pre-installed	[3PCS]
D3. CONVEX END DAP (9211-092)	[1PCS]
D4. 40x80 End Cap (9211-192)	[4PCS]
D5. 50x100 END CAP (9211-193)	[1PCS]
D6. Rubber Dount (9310-016)	[2PCS]
D7. Rubber Insert (9310-076)	[4PCS]
D8. Block Rubber (9310-077)	[2PCS]
D9. Pinch Cock (OC-06)	[2PCS]
D10.Pulley Spacer (8120-082) pre-installed	[4PCS]
D11. Bearing (8510-020) pre-installed	[4PCS]
D12. Impregnated With Handle (9162-101) pre-installed	[2PCS]
D13. Chrome collar (8130-254) pre-installed	[2PCS]
D14. 1/2"X38L POP PIN (8250-065G) pre-installed	[2PCS]
D15. Shaft (8260-048) pre-installed	[1PCS]
D16. Oilite Bushing (8520-001) pre-installed	[2PCS]
D17. Impregnated With Handle (9162-120) pre-installed	[1PCS]
D19. Ø50 End Cap (9211-020)	[2PCS]
D20.Pulley Spacer 5/8OD X3/8" X5/8"L(8530-009)	[4PCS]
D21.Pulley Spacer(8110-079) pre-installed	[2PCS]
D22.Chrome collar (8130-253) pre-installed	[1PCS]

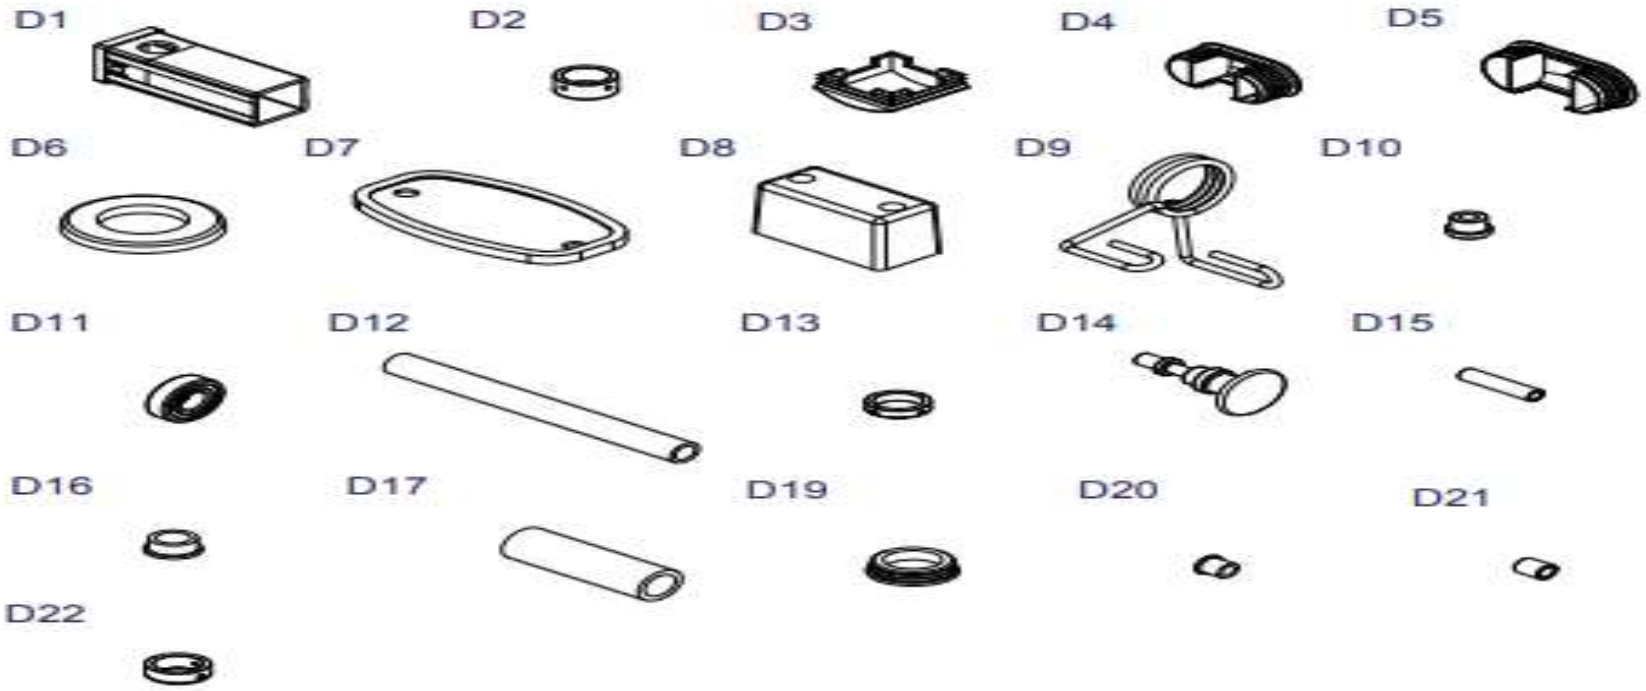


Above shows STEP 1
assembled and completed

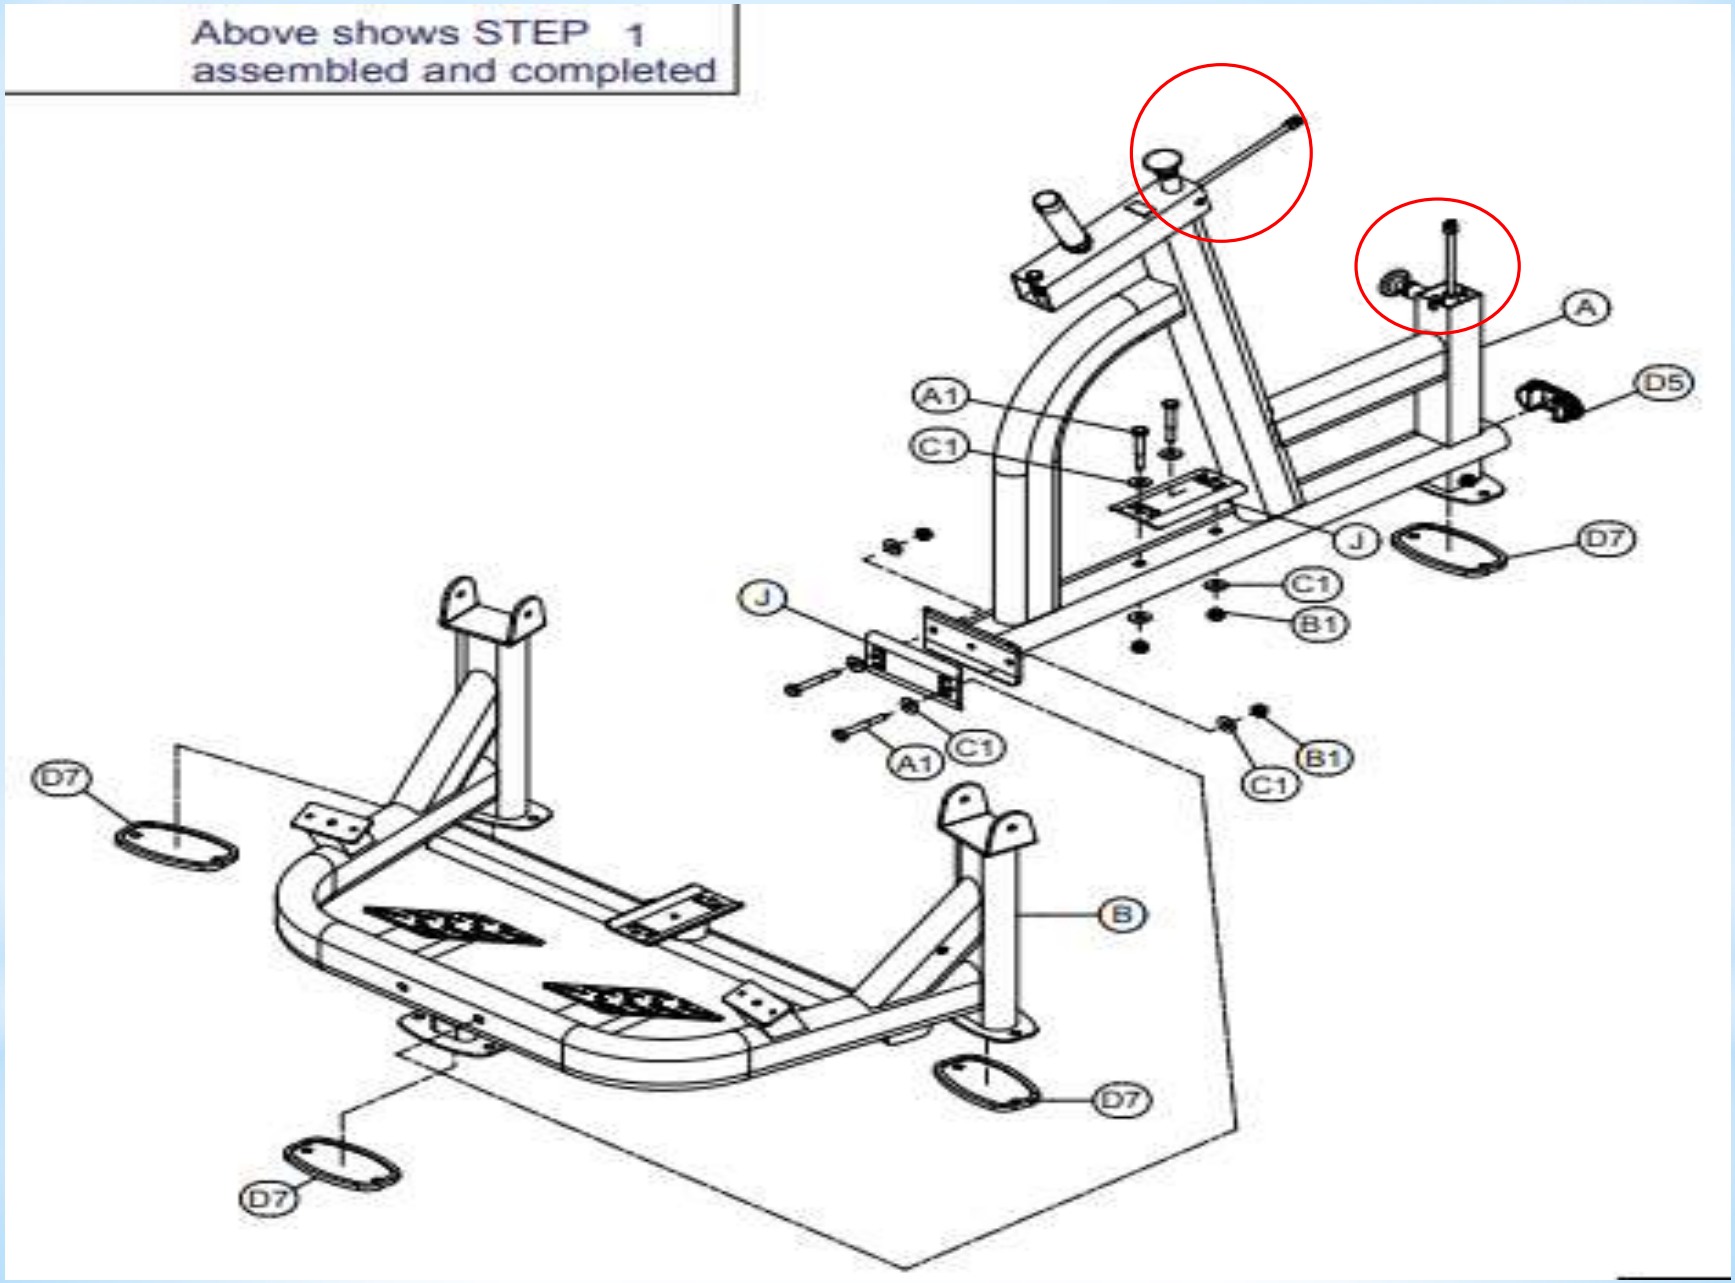


Above shows STEP 2
assembled and completed

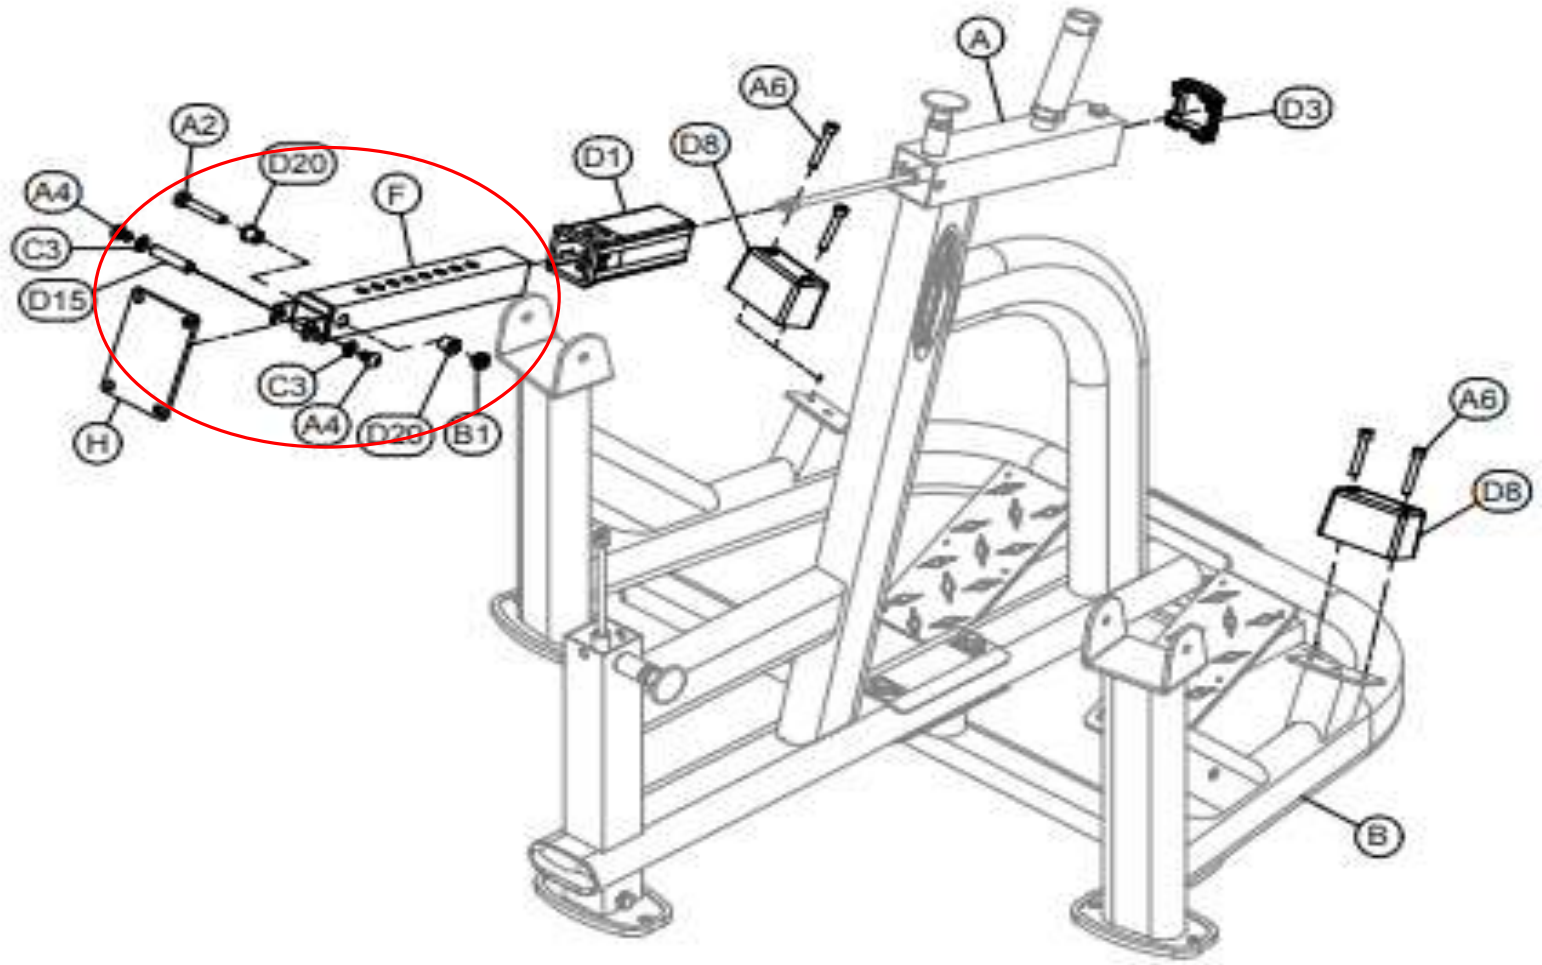

Above shows STEP 3
assembled and completed

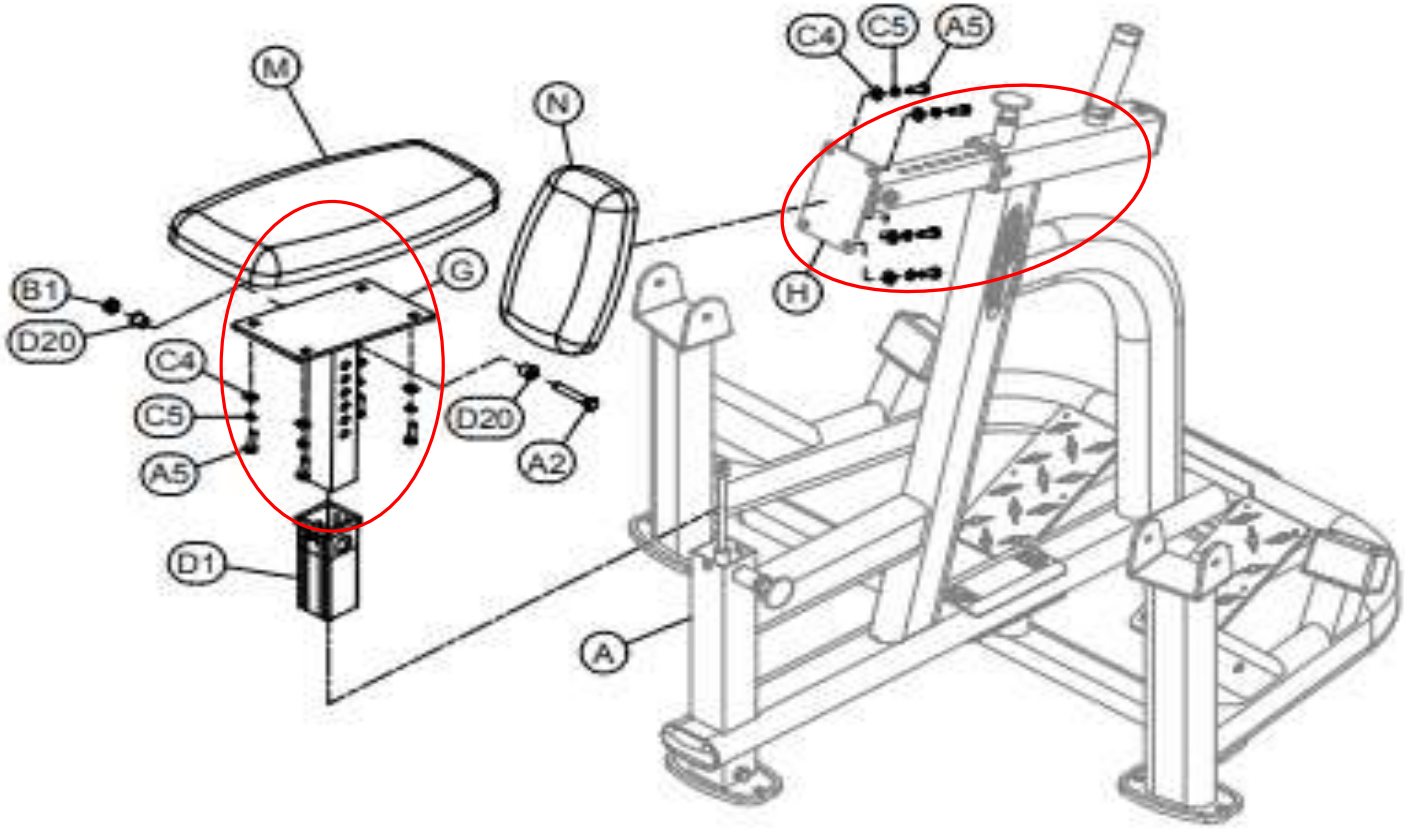


Above shows STEP 4
assembled and completed

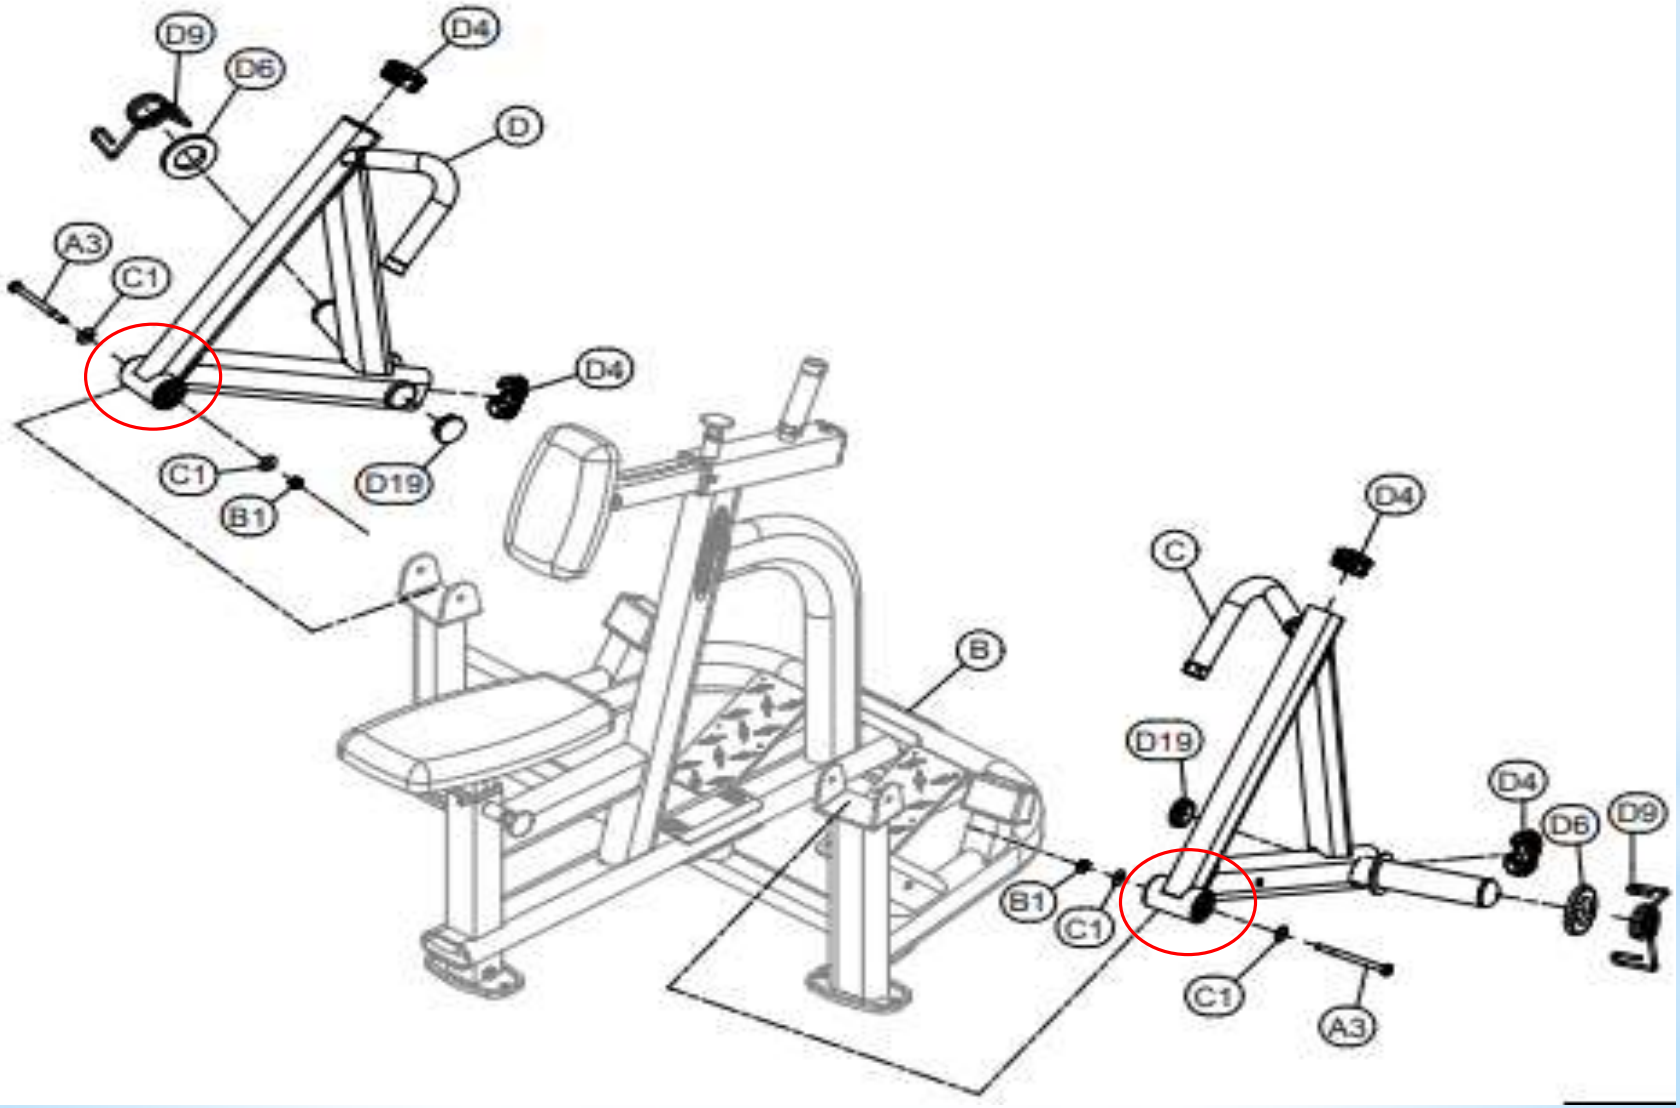

PLSR.5

Exploded View

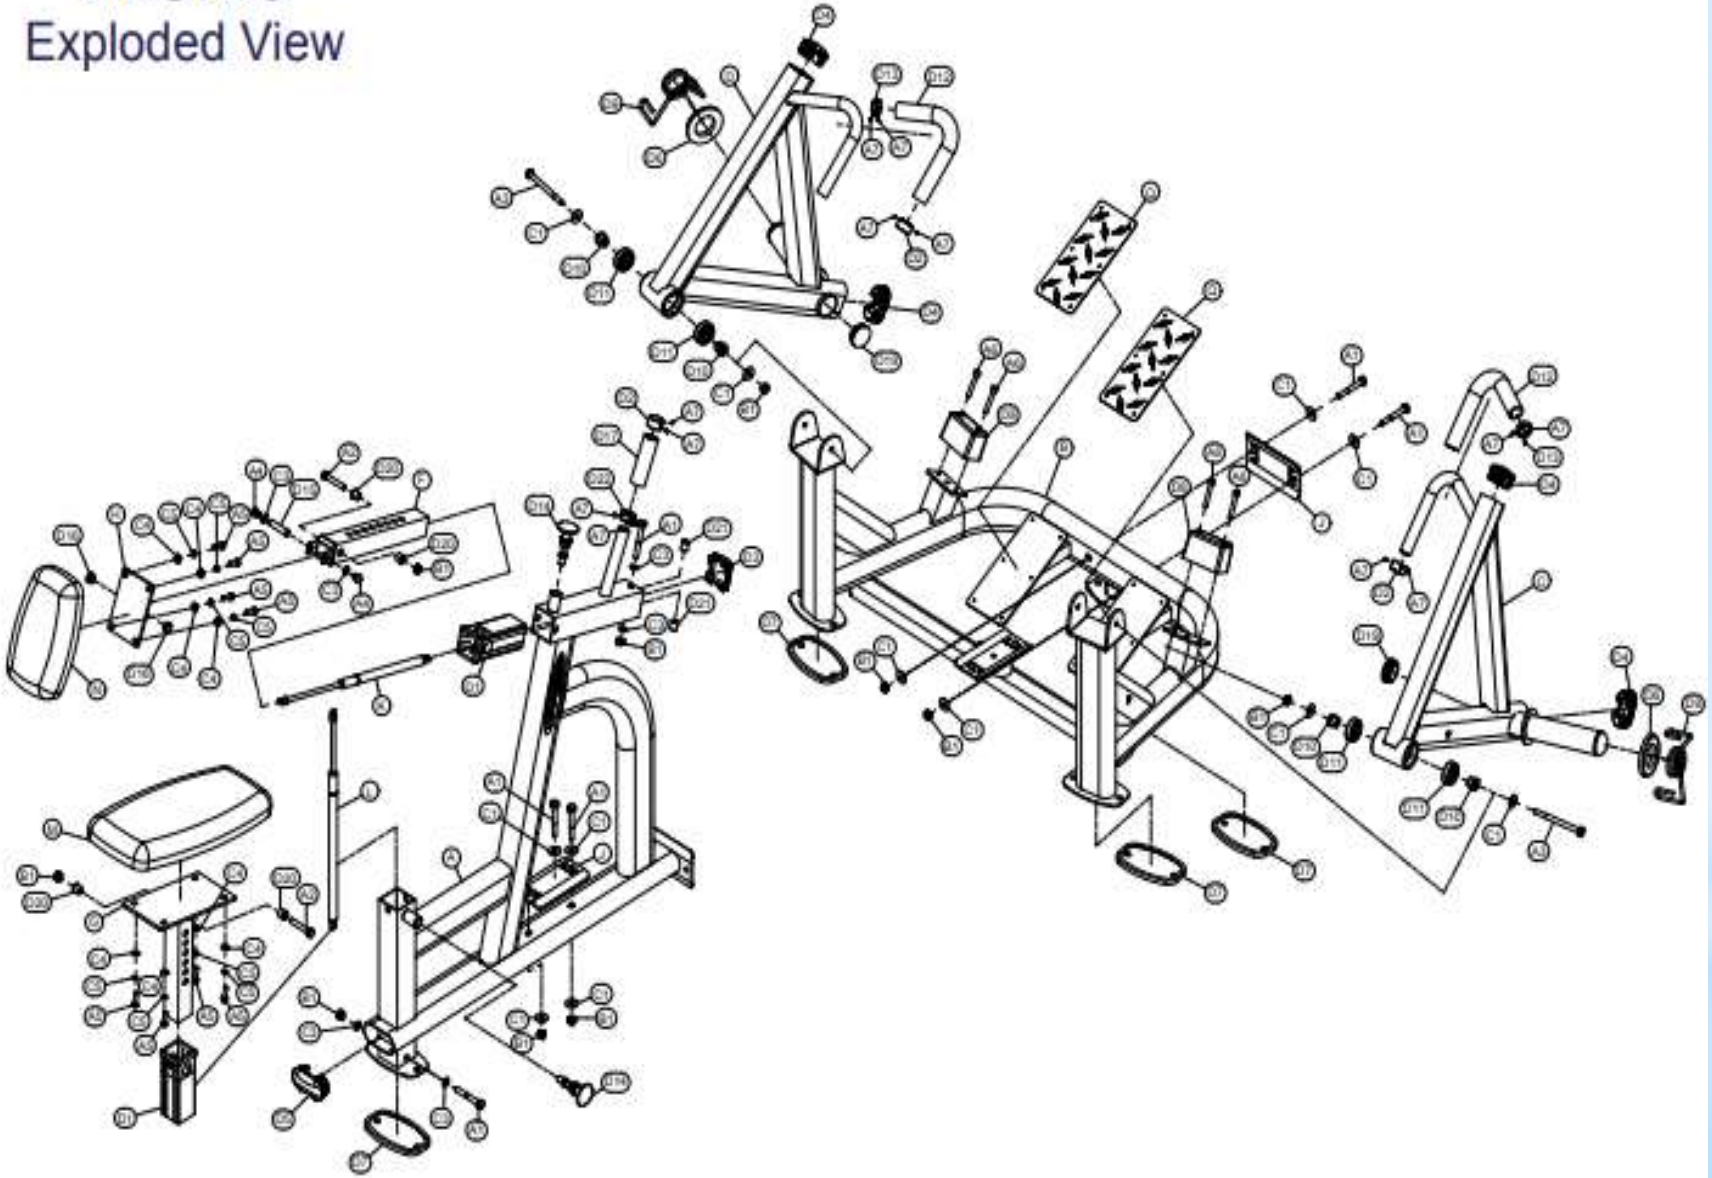

*Well done!

