*PLSP Maintenance



* Customers can put some grease on pivot points(red circle place), with brass or gunmetal bushings.







* Let's maintain your machine!

PLSP.5 PARTS

A [1PCS]

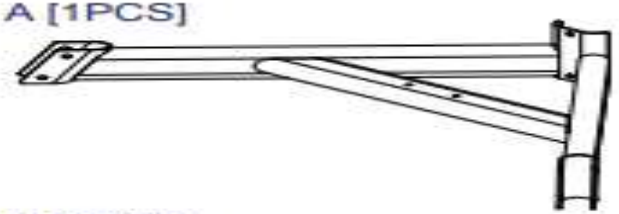


B [1PCS]

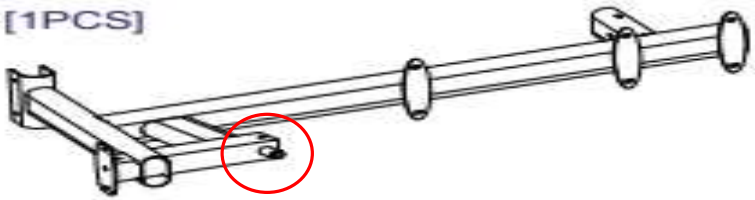


C [2PCS]



E [1PCS]

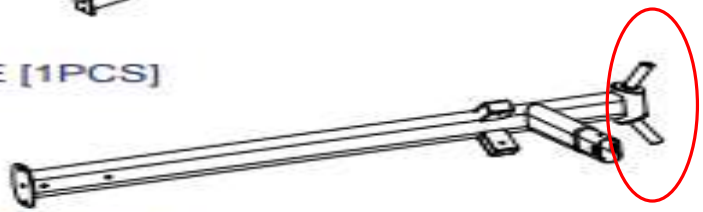

Q [1PCS]

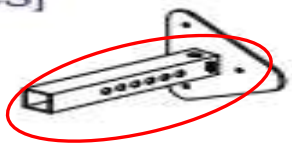

H [1PCS]



I [1PCS]




F [4PCS]
6730001




G [1PCS]
8323234




M [1PCS]
8830023
(pre-installed)

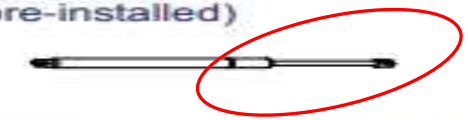

J [1PCS]
9111072

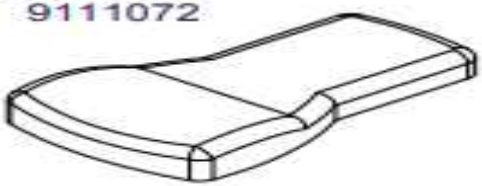

K [1PCS]
9131025



L [1PCS]
9144016




R [1PCS]
9119010
(pre-installed)




PLSP.5 PARTS


D1. 40x80 End Cap (9211-192)pre-installed..... [2PCS]
D2. Ø50 End Cap (9211-020) ..... [2PCS]
D4. End Closure (8130-248) ..... [2PCS]
D5. Rubber Dount (9310-016) ..... [6PCS]
D6. Pinch Cock (OC-06) ..... [2PCS]
D7. Block Rubber (9310-077) ..... [2PCS]
D8. 50x100 END CAP (9211-193) ..... [2PCS](1PCS pre-installed)
D9. Rubber Insert (9310-076) ..... [4PCS]
D11. Nylon Bushing (9211-047) ..... [1PCS]
D13. Impregnated With Handle (9162-102) pre-installed ..... [2PCS]
D14. End Closure (8890-061) pre-installed ..... [2PCS]
D15. Bearing (8510-037) pre-installed .....[4PCS]
D16.Pulley spacer (8530-009).....[2PCS]
D17.End Closure (8130-254)pre-installed.....[2PCS]

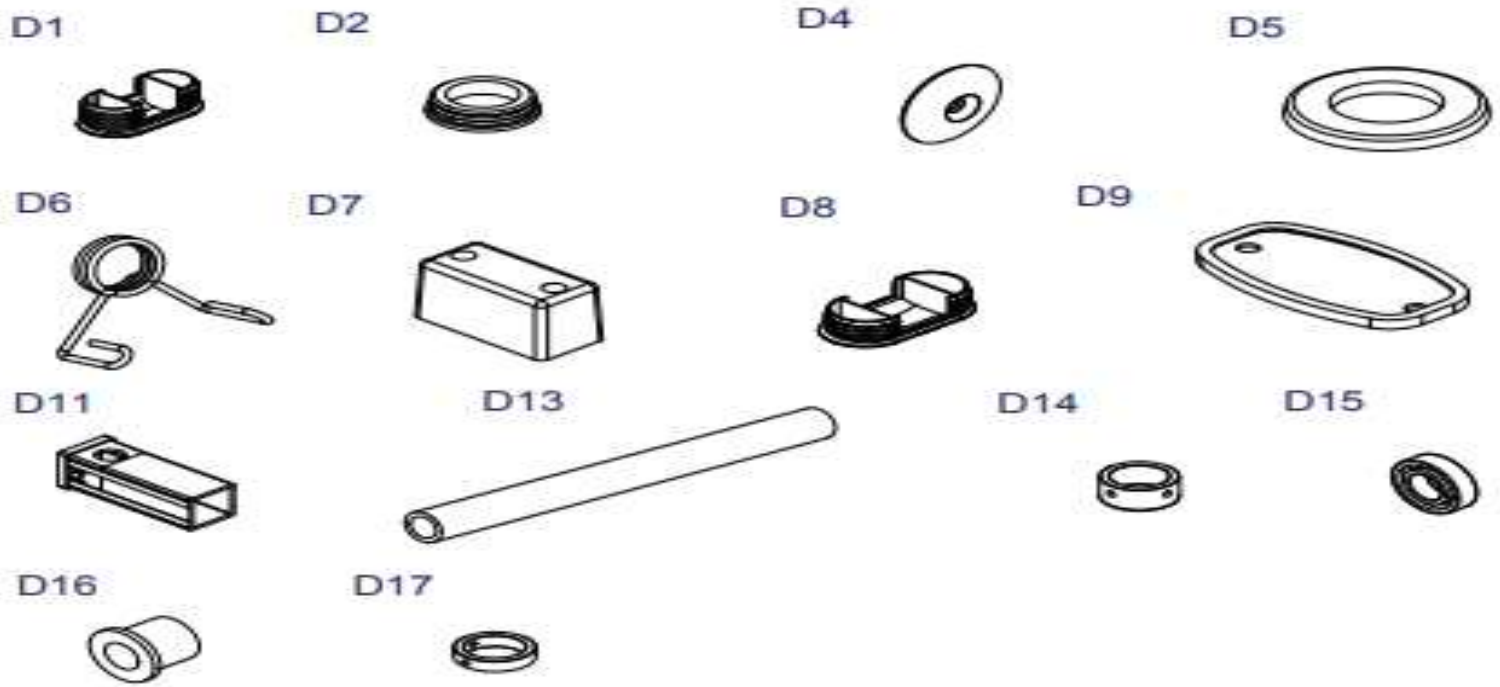


Above shows STEP 1
assembled and completed

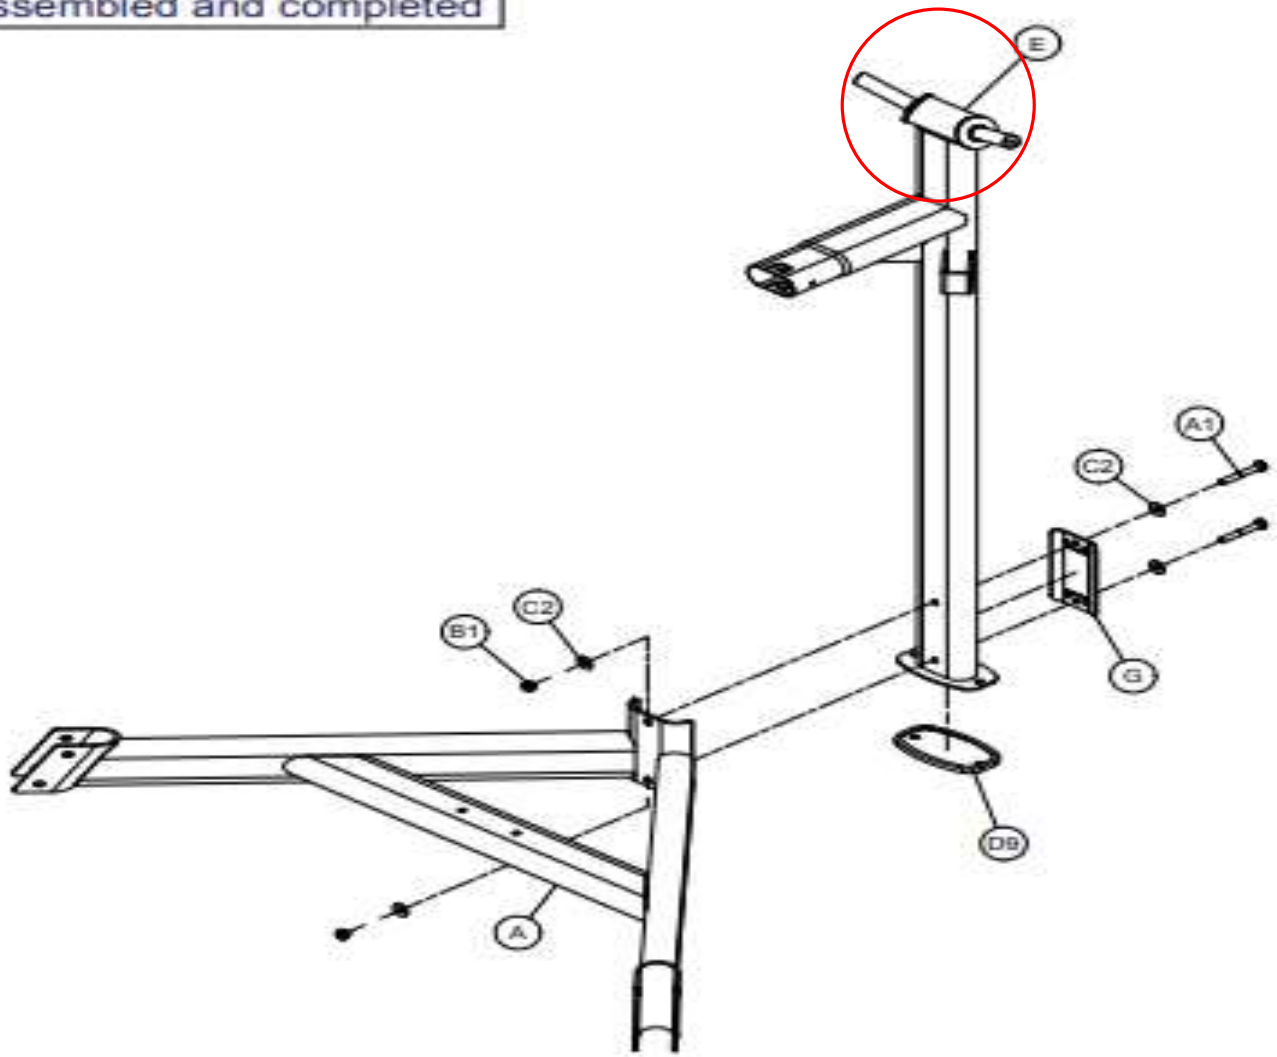


Above shows STEP 2
assembled and completed

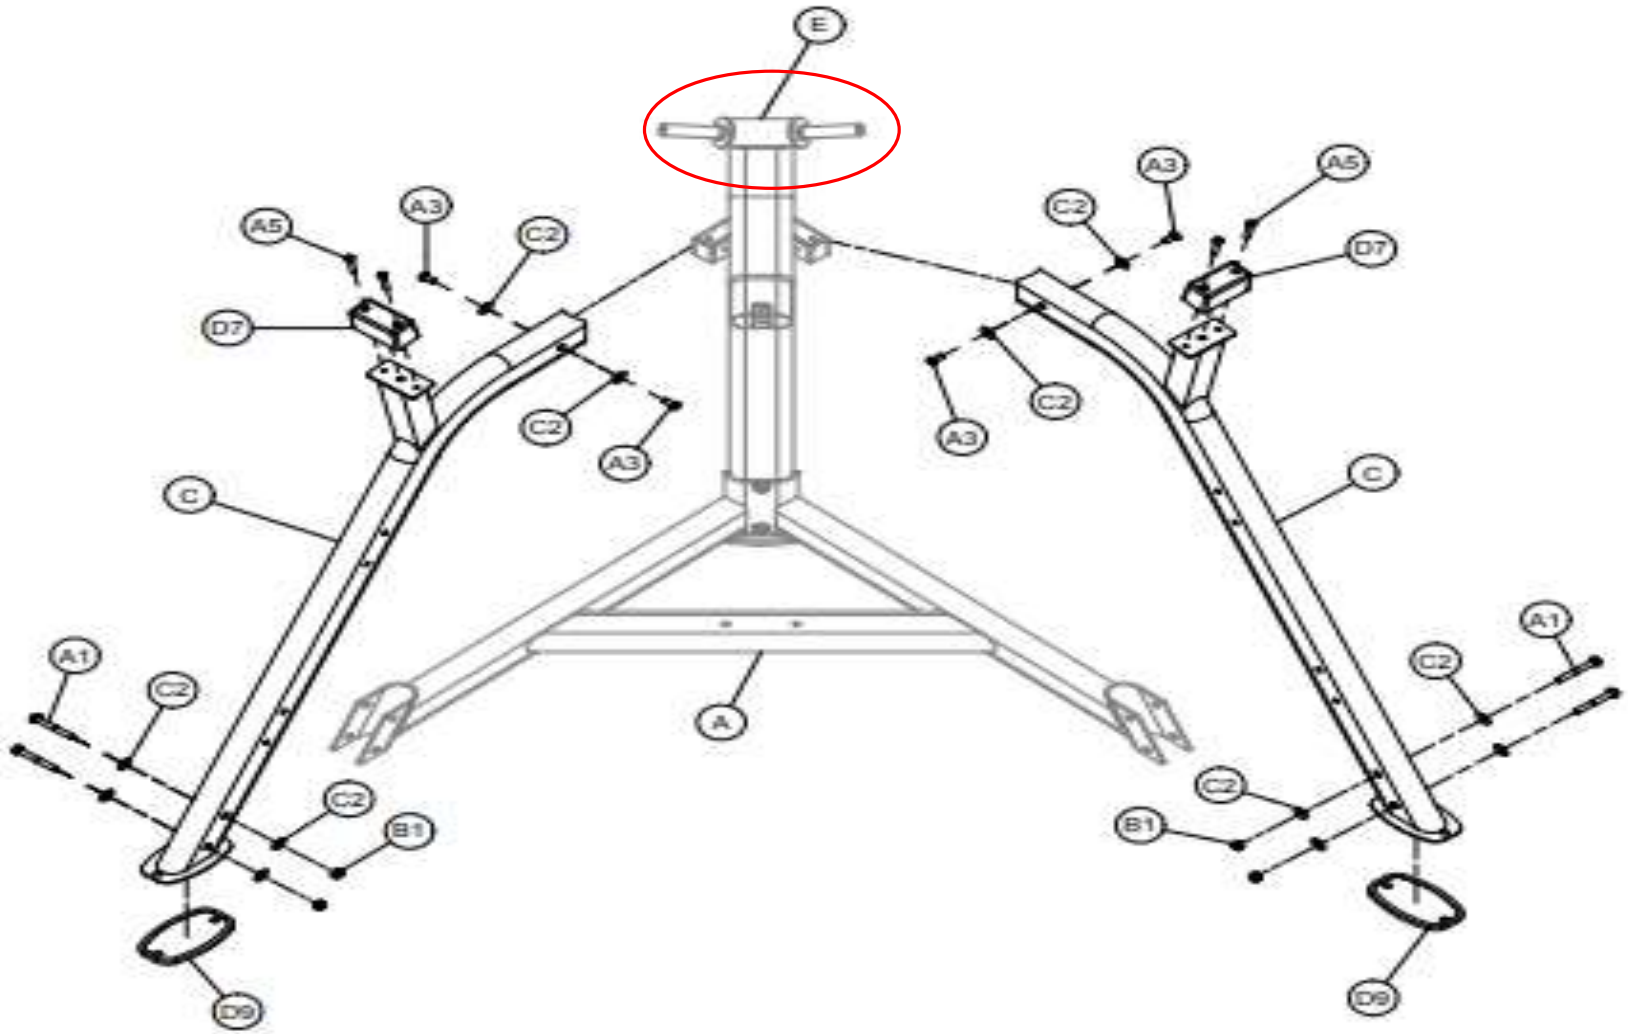


Above shows STEP 3
assembled and completed

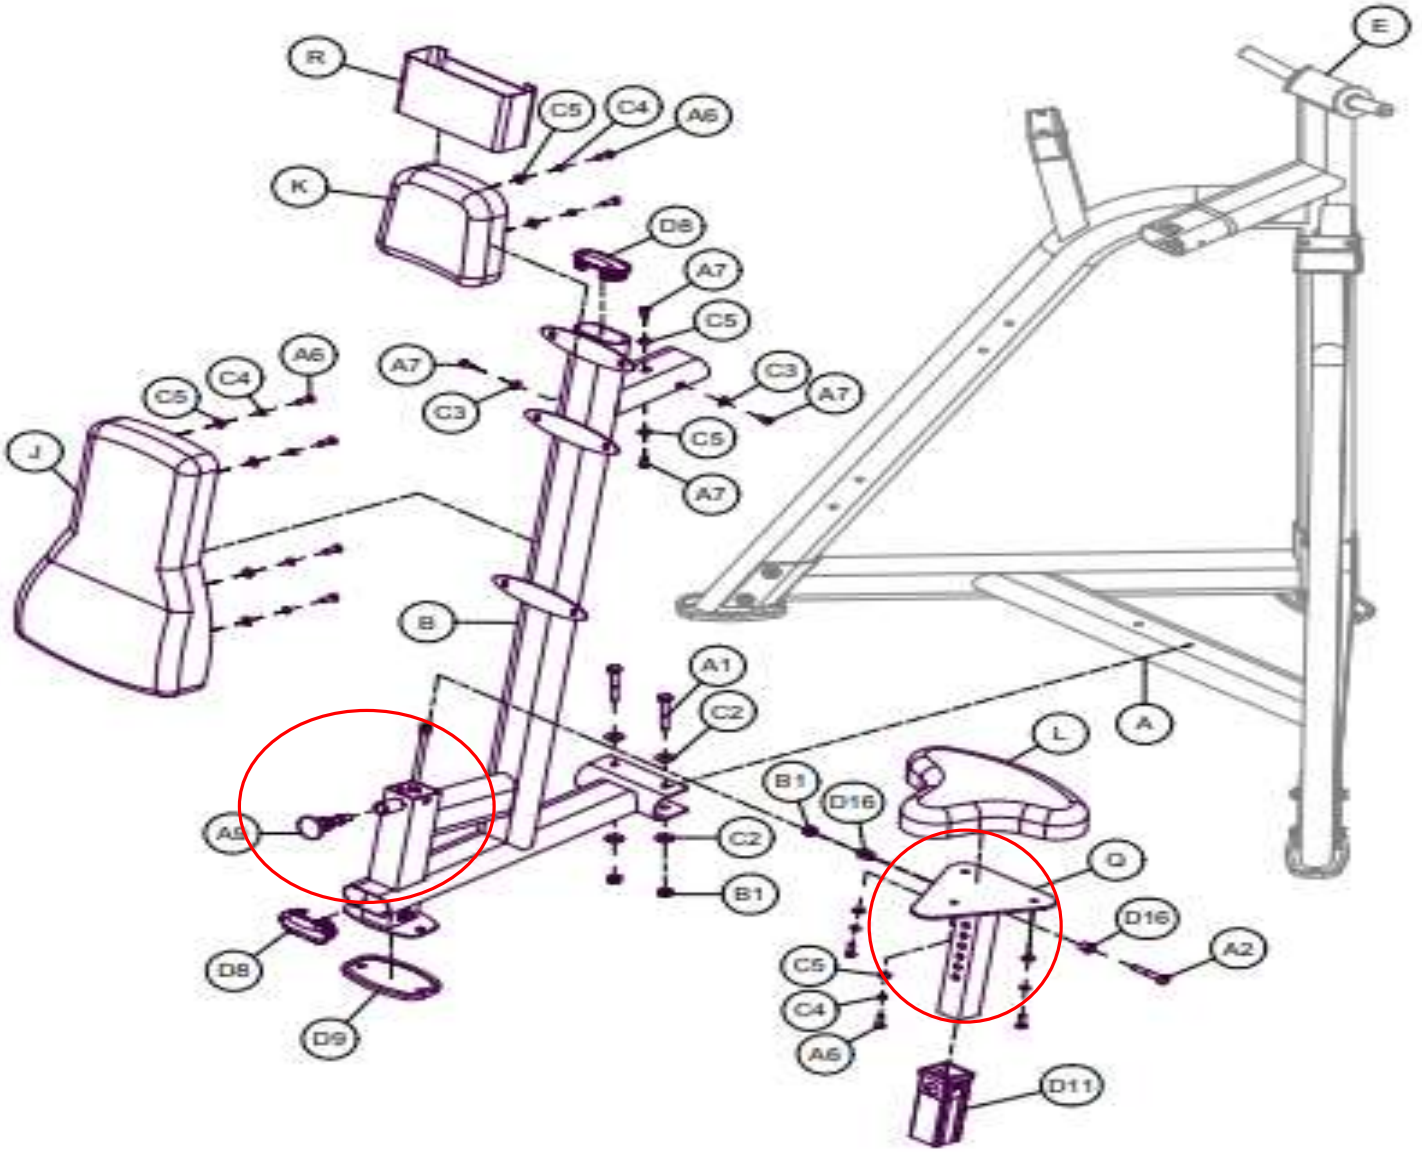


Above shows STEP 4
assembled and completed

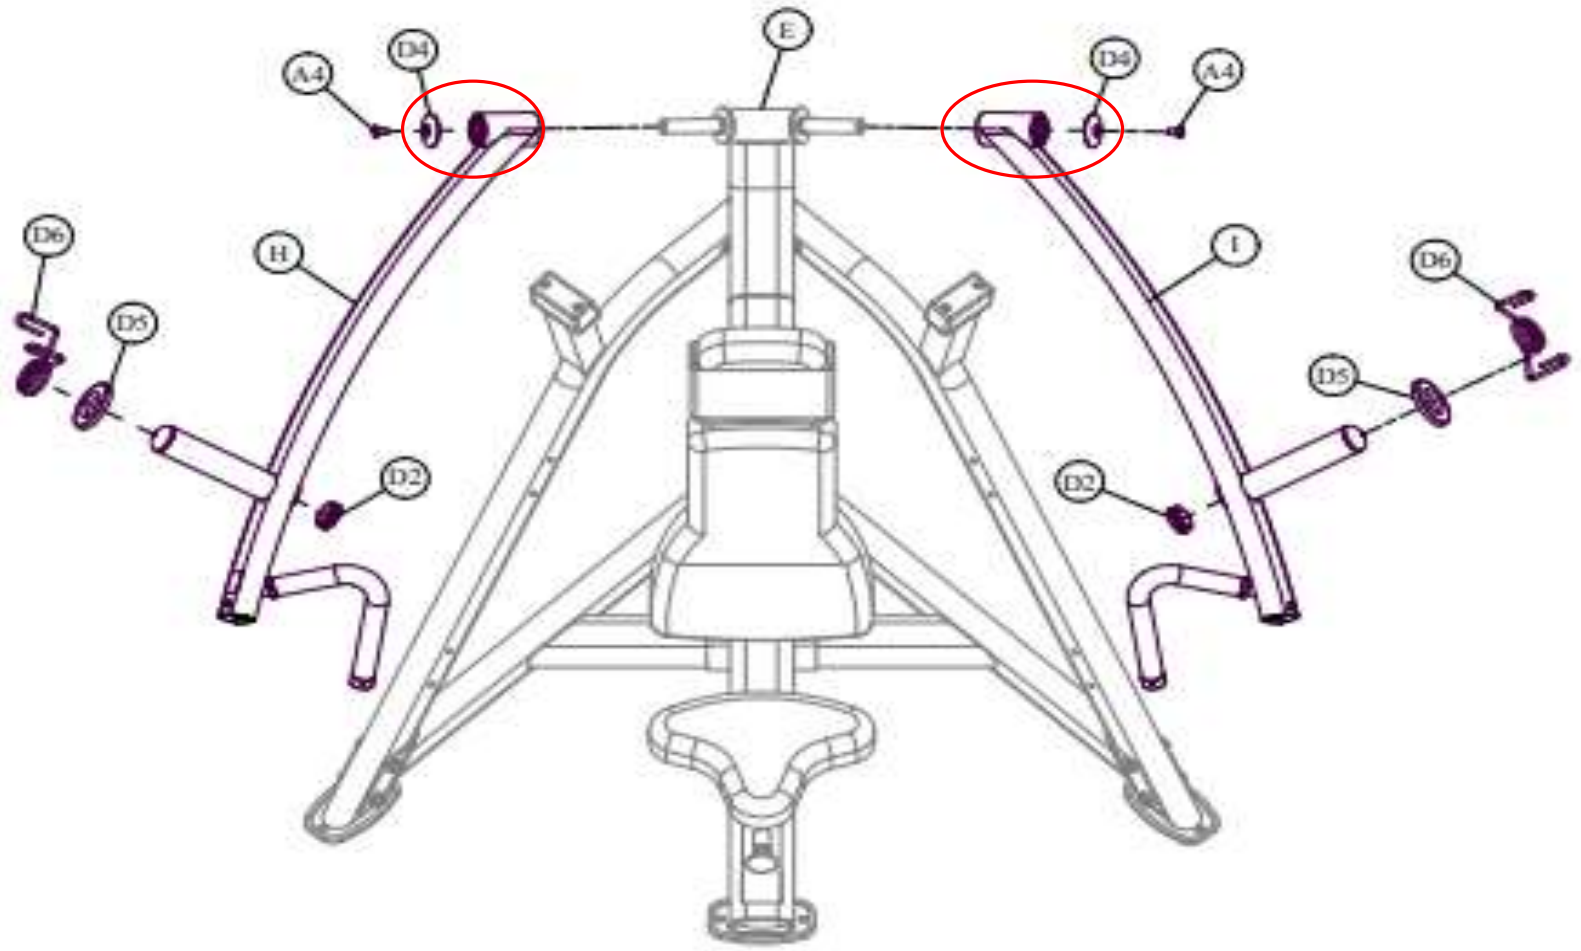

Above shows STEP 5
assembled and completed

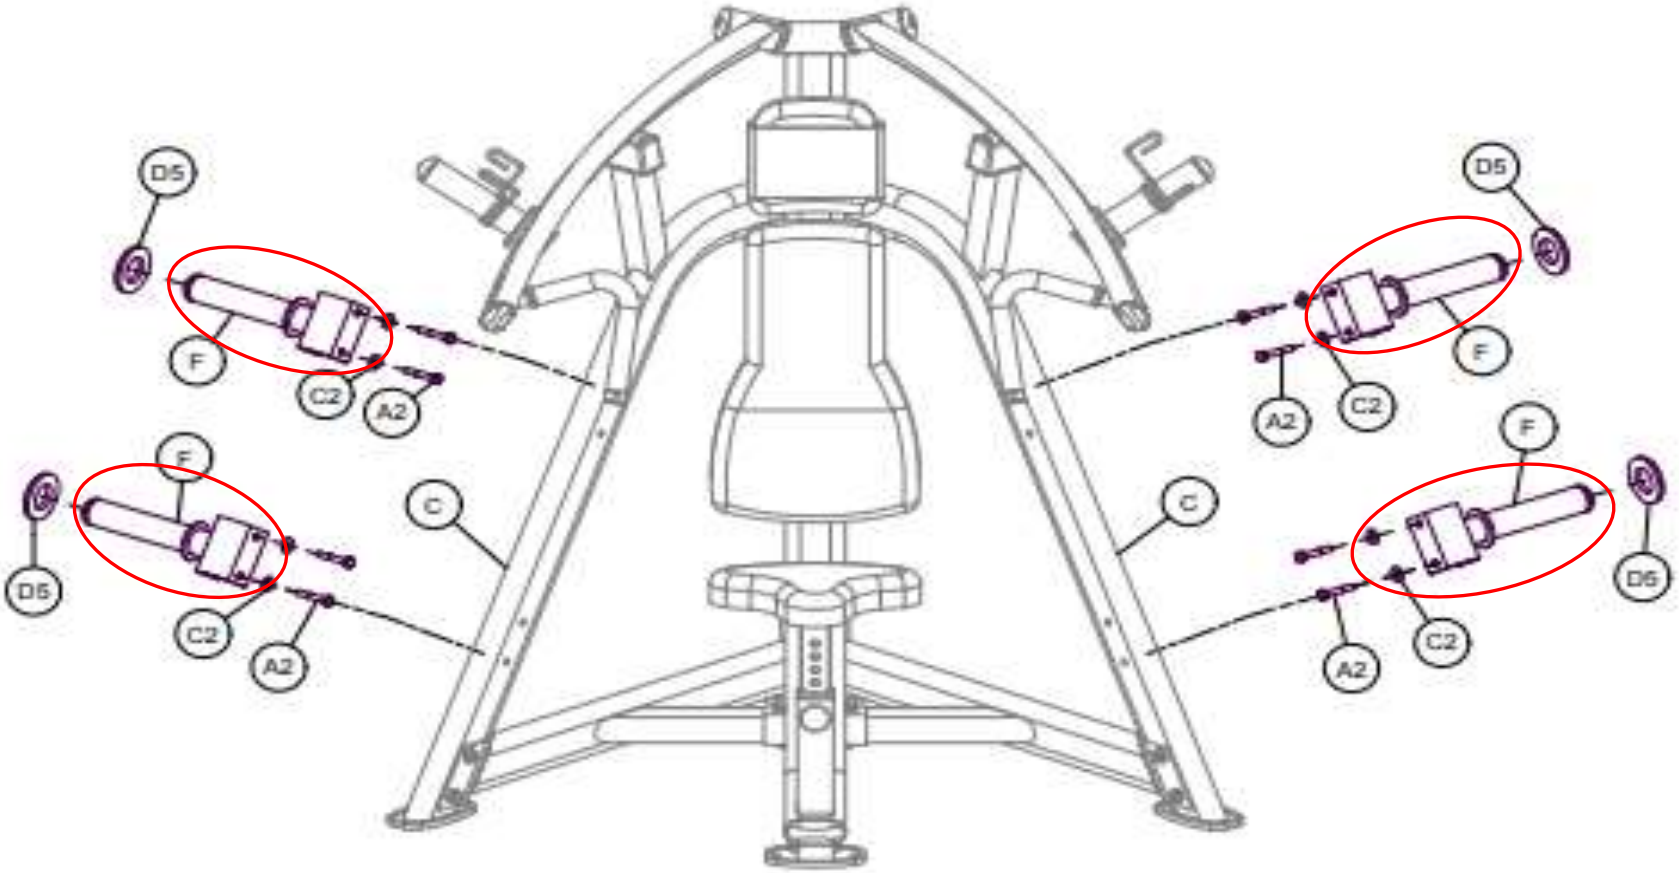

PLSP.5
Exploded View

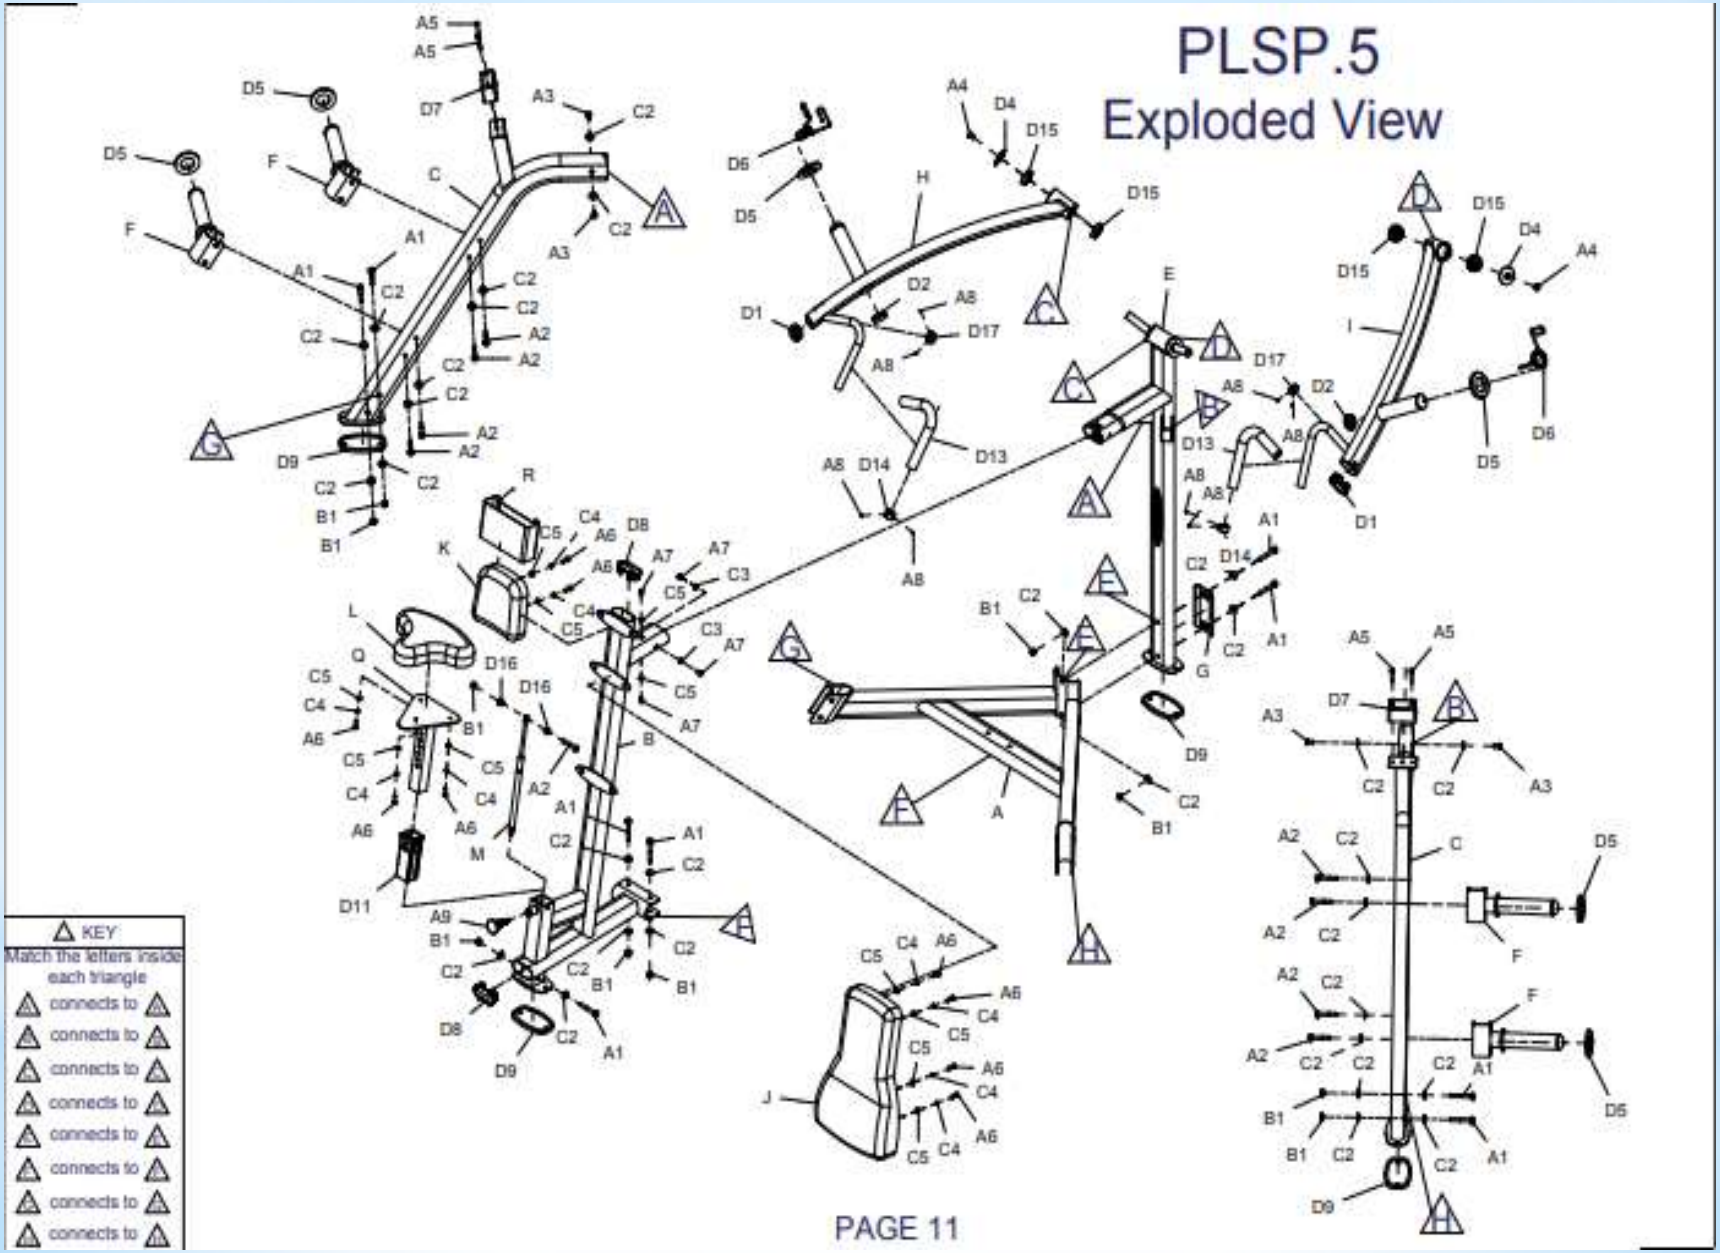

*Well done!

