*PLHE Maintenance



* Customers can put some grease on pivot points(red circle place), with brass or gunmetal bushings.






* Let's maintain your machine!

PLHE PARTS


A [1PCS]

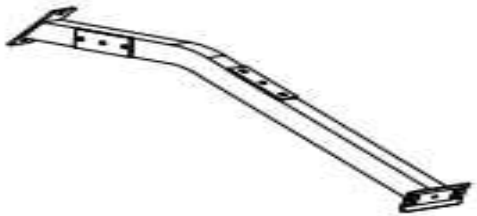

B [1PCS]




D[1PCS]

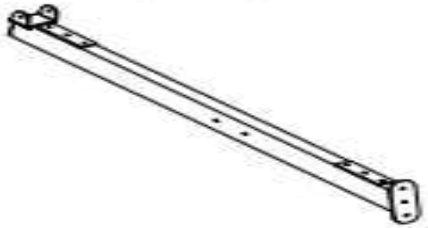


C [1PCS]



E [1PCS]

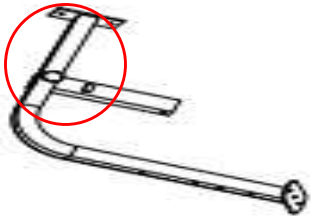


F[1PCS]

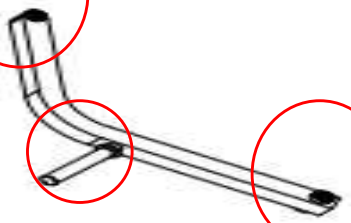

G [1PCS]



H[1PCS]

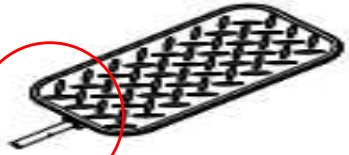

I [1PCS]



J [1PCS]




P [1PCS]
(9313-074)



N [1PCS]
(8323-150)



K[1PCS]

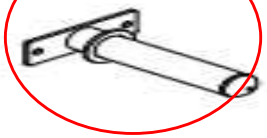

O [1PCS]
(8312-091)



L [1PCS]
(8313-250)





M[1PCS]
(8313-235)



PLHE PARTS

D1. End Closure (8130-248) 2PCS
D2. Ø50 End Cap (9211-020) 2PCS
D3. Nylon Bushing (9211-009) 6PCS
D4. Rubber Dount (9310-016) 2PCS
D5. Nylon Washers(9214-001) 1PCS
D6. End Cover (9211-049) 1PCS
D7. End Cover (9211-197) 1PCS
D8. Rubber Insert (9310-075) 2PCS
D10. Iron Cover (8130-507) 2PCS
D11. Gas Spring (8830-043)(Pre-installed) 1PCS
D12. Iron Cover (8530-010)(Pre-installed) 2PCS
D13.Pinch Cock (OC-06) 1PCS
D14. Fenders (9310-077) 1PCS
D15. End Cover (9211-016) 2PCS
D16. Pop Pin(8250-065G)(Pre-installed) 1PCS
D17. Nylon Bushing (9211-033)(Pre-installed) 1PCS
D18. Snap Fastener (9211-036)(Pre-installed) 6PCS
D19. Shaft Core(8220-332)(Pre-installed) 1PCS
D20. The Bearing (8510-037)(Pre-installed) 4PCS
D21. Rubber Insert (9310-067)(Pre-installed) 1PCS
D22. Iron Cover (8130-253) 1PCS

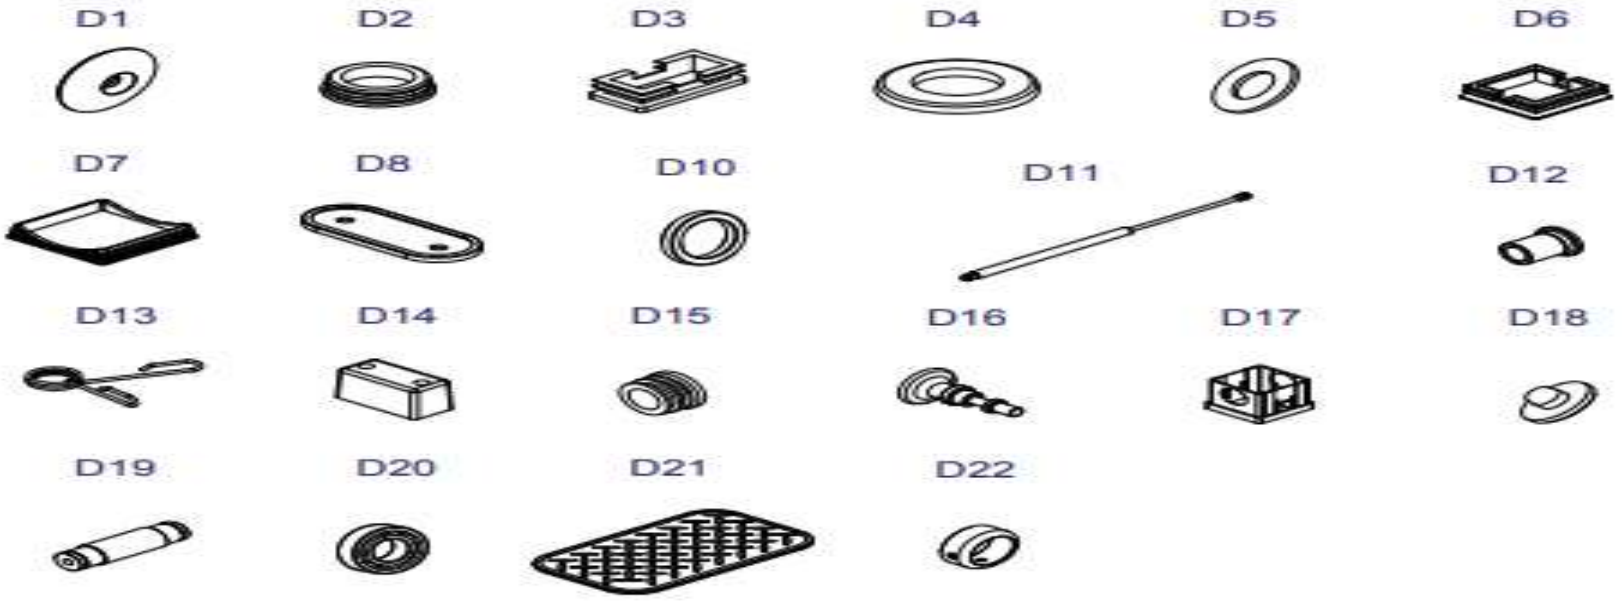


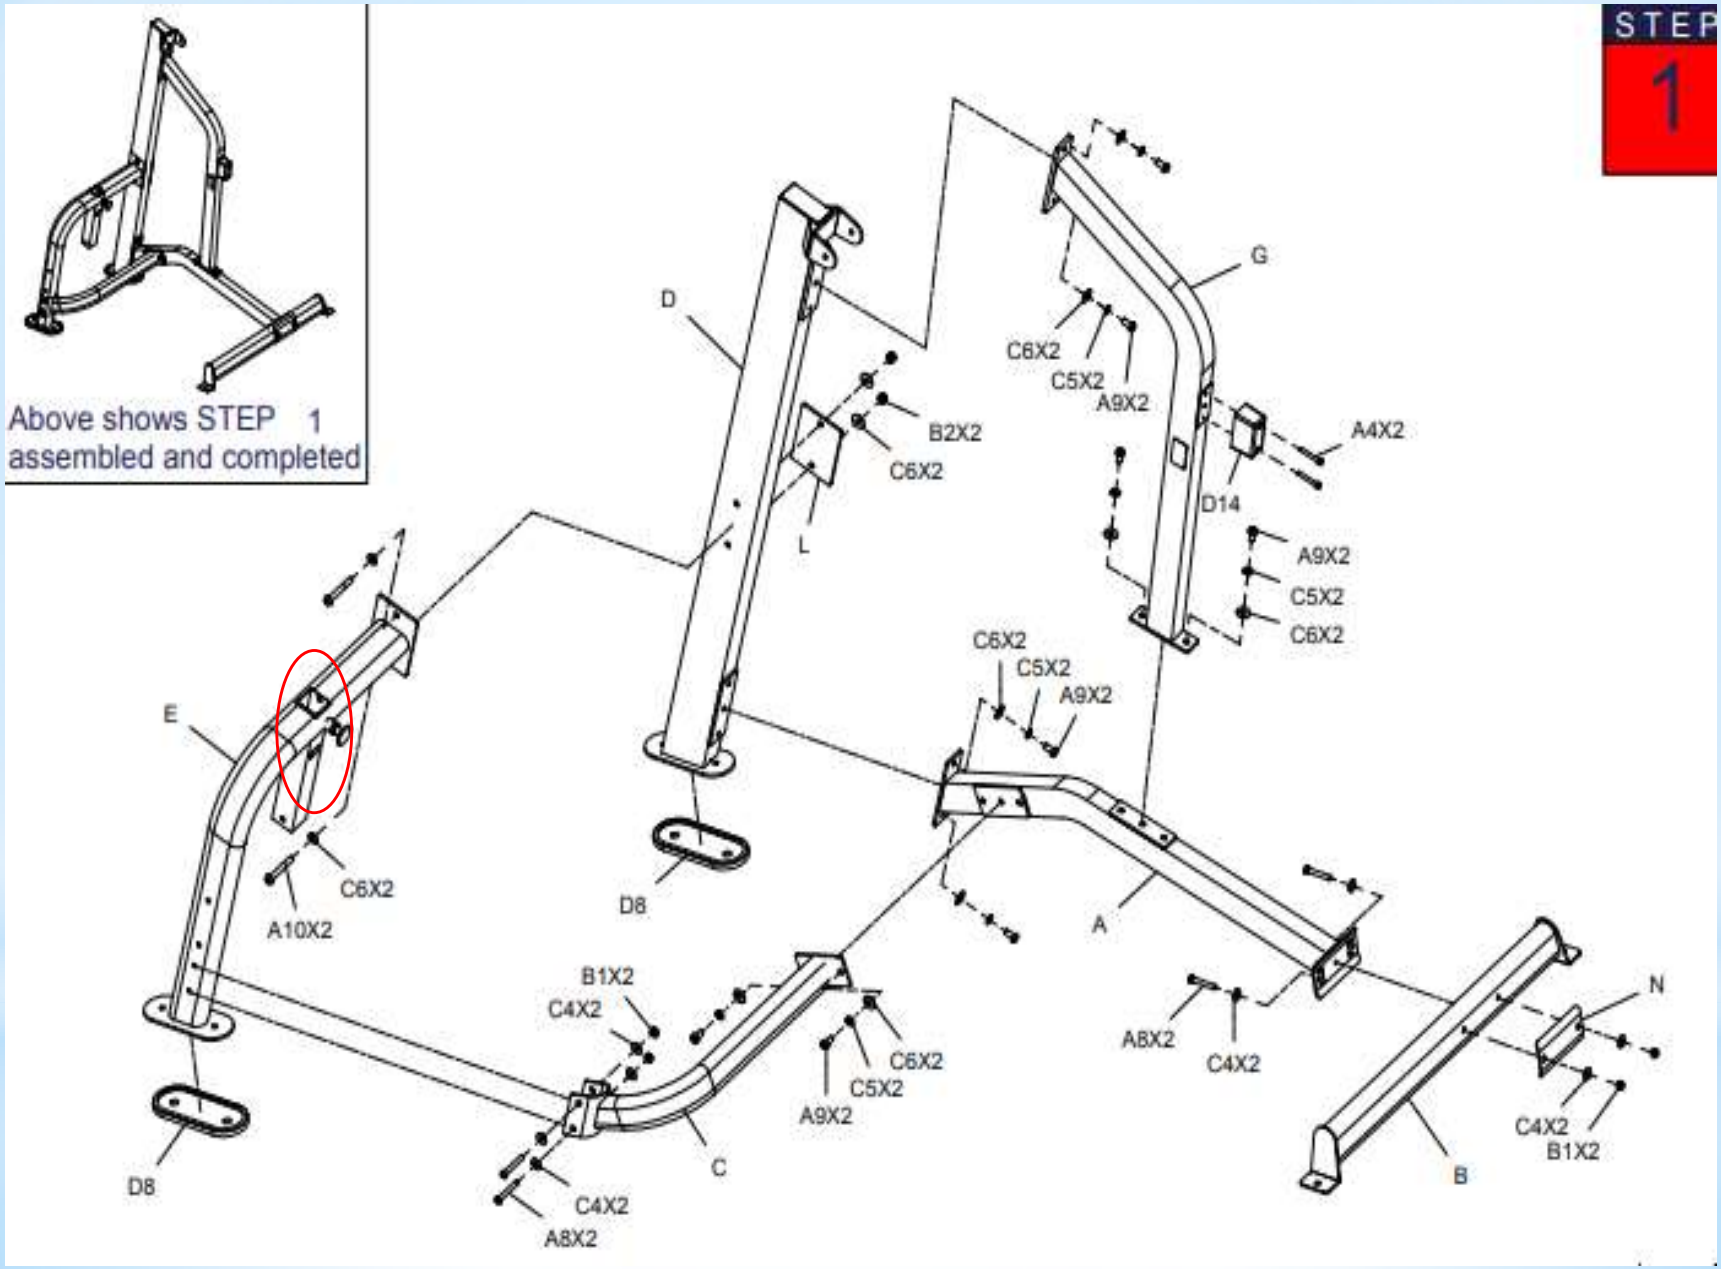

STEP
1
Above shows STEP 1
assembled and completed
D
G
C6X2
C5X2
A9X2
B2X2
C6X2
A4X2
D14
L
A9X2
C5X2
C6X2
C6X2
C5X2
A9X2
E
C6X2
A10X2
D8
A
B1X2
C4X2
C6X2
C5X2
A9X2
A8X2
C4X2
N
C4X2
B1X2
D8
C
C4X2
A8X2
B



bove shows STEP 2
ssembled and completed

STEP 2

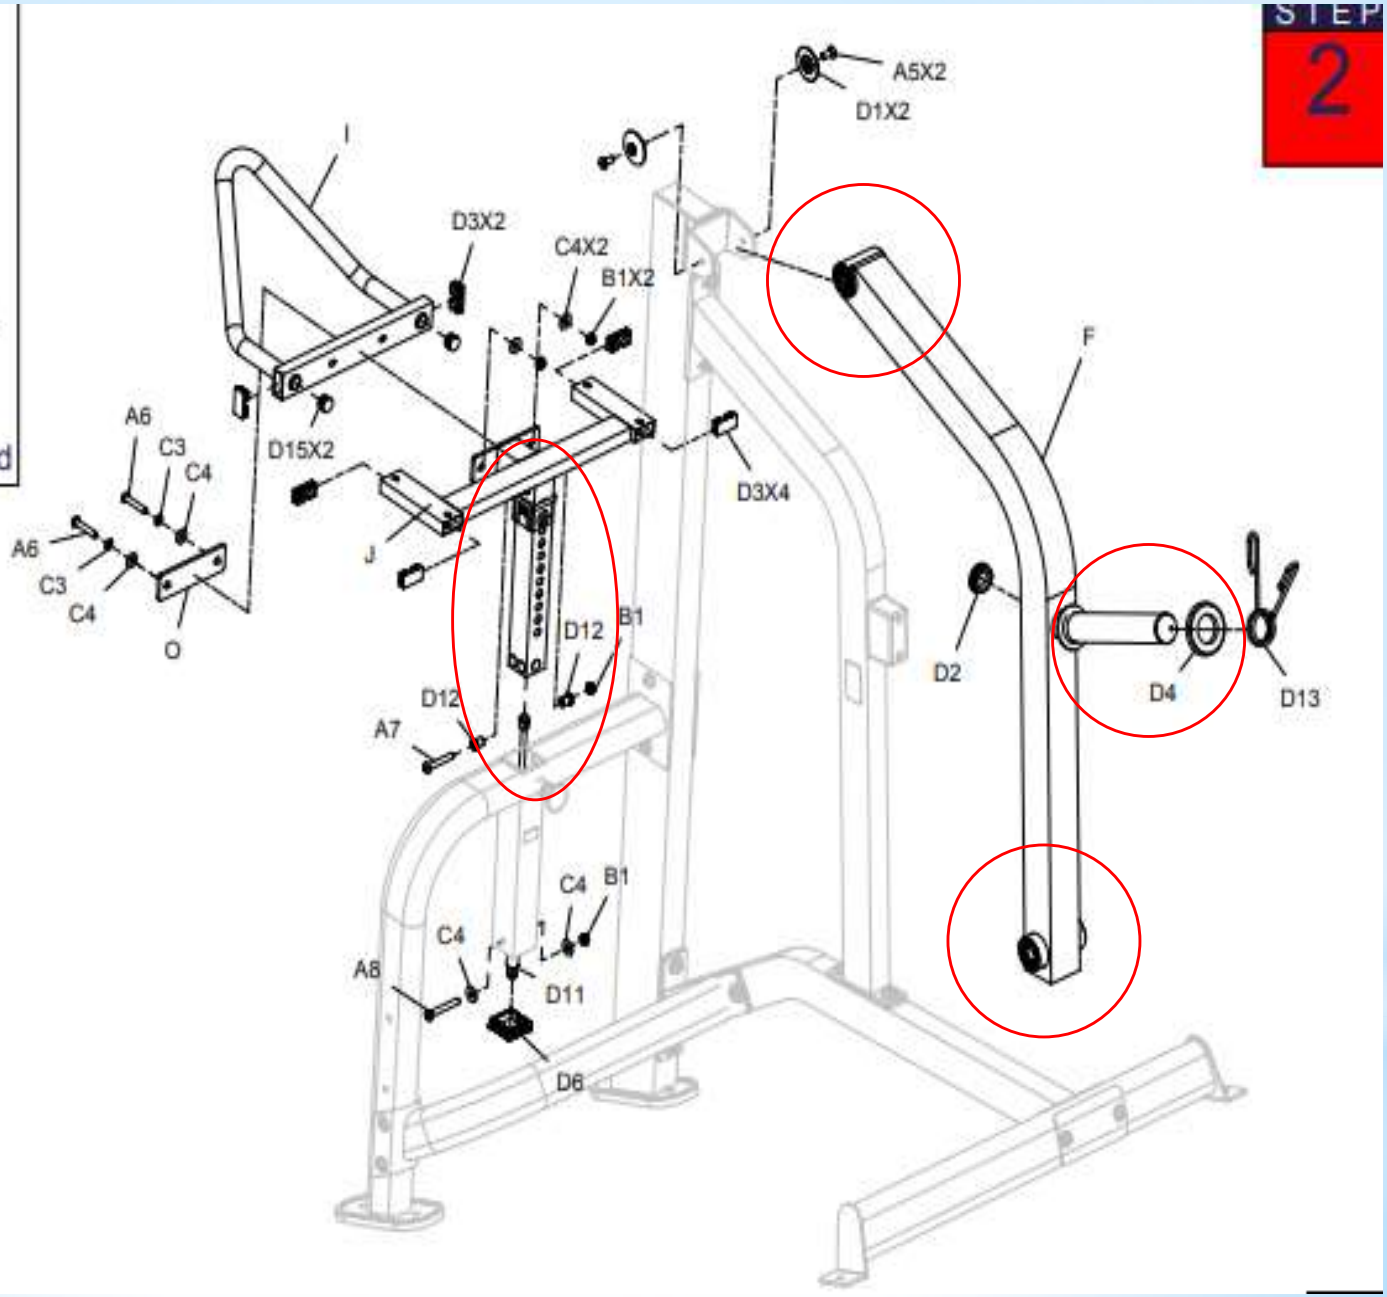

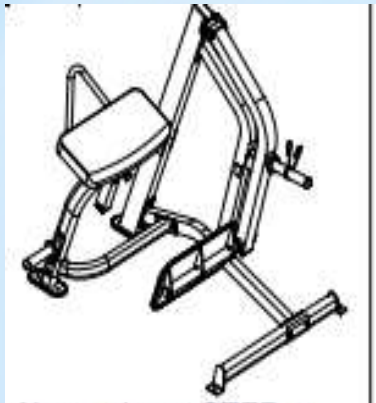

Above shows STEP 3
assembled and completed

STEP
3

P
C2
C1
A3
C2
C1
A3
C2
C1
A3
C2
C1
A3
C4
A8
D4
K
A8
C4
M
B1X2
C4X2
H
D2
D5
A1X2
D10
D12
D10
C1
C1
A2
D7

*Well done!

