




XB 4900

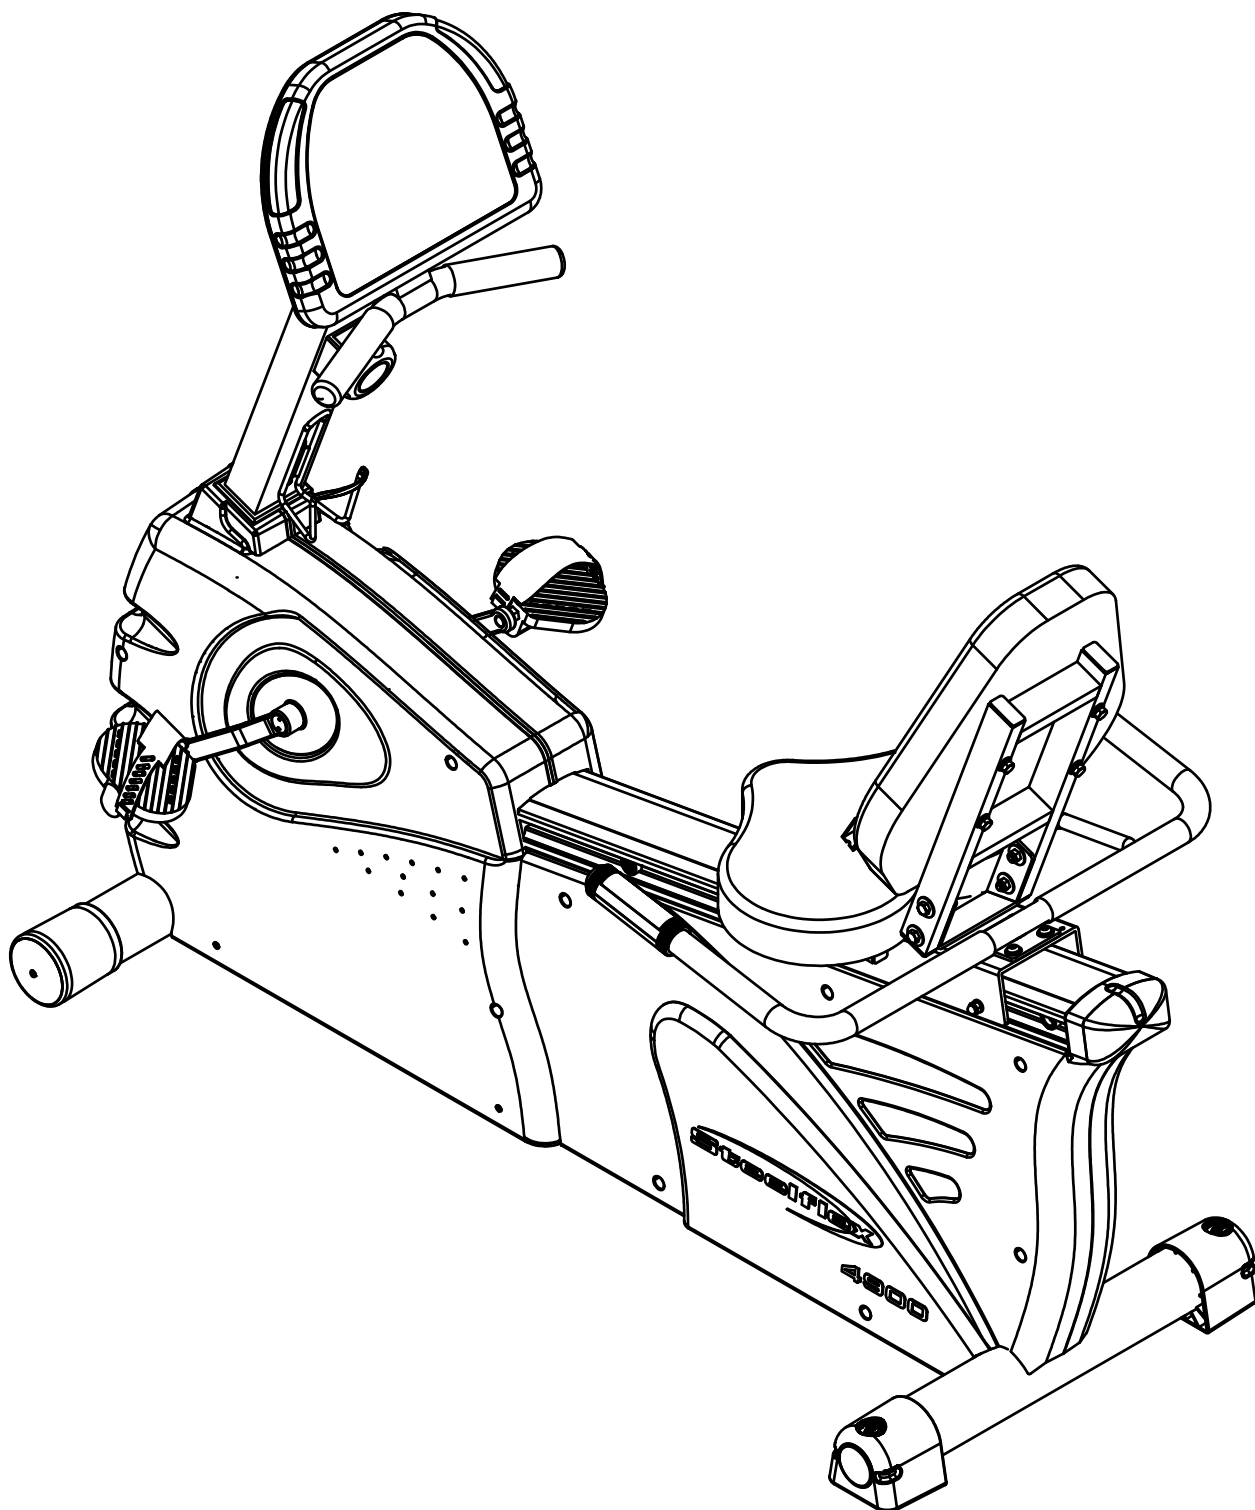

VERSION 0605


XB4900 HARDWARE ILLUSTRATION SHEET

	QTY.
A1. M4X10 ROUND CROSS SCREW -----	【2PCS】
A2. M5X15 ROUND CROSS SCREW -----	【4PCS】
A3. M8X10 ROUND INNER HEX SCREW -----	【4PCS】
A4. M8X90 ROUND INNER HEX SCREW -----	【1PCS】
A5. M10X16 ROUND INNER HEX SCREW -----	【8PCS】
A6. M10X65 ROUND INNER HEX SCREW -----	【2PCS】
A7. 5/16"X2 1/4" HEX HEAD BOLT -----	【8PCS】
C2. M8XØ18 WASHER -----	【12PCS】
C3. M10 (I.D) WASHER -----	【8PCS】
C4. M8 SPRING WASHER -----	【1PCS】
C5. 5/16" SPRING WASHER -----	【8PCS】
C6. M10 SPRING WASHER -----	【2PCS】
C7. M8XØ14 WASHER -----	【1PCS】
D1. Ø21 ROUND END CAP (9261012) -----	【2PCS】
D2. Ø15 ROUND END CAP (9261013) -----	【1PCS】

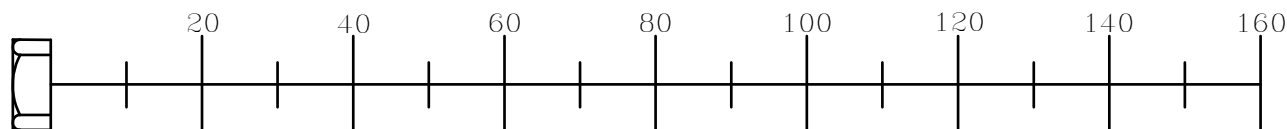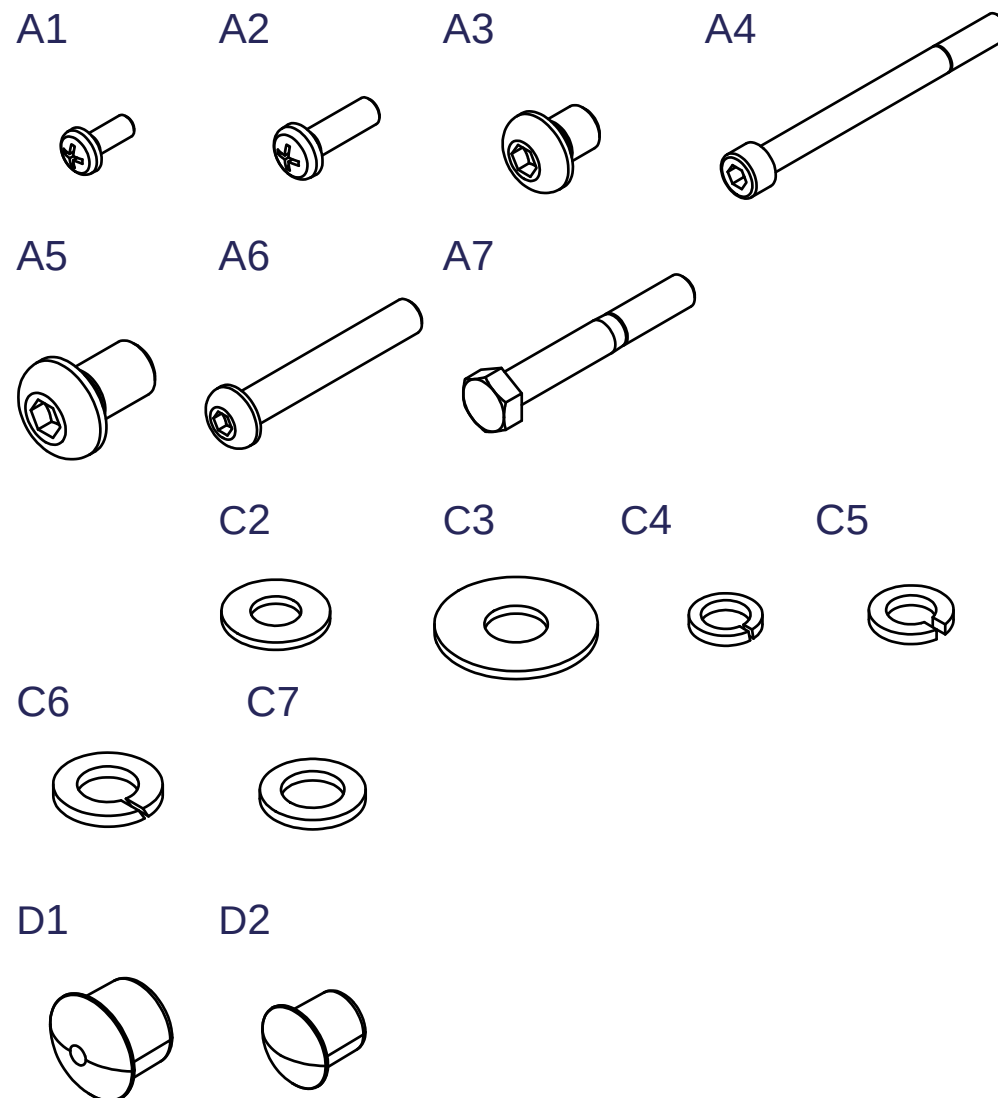


XB 4900 PARTS ILLUSTRATION SHEET


A [1PCS]

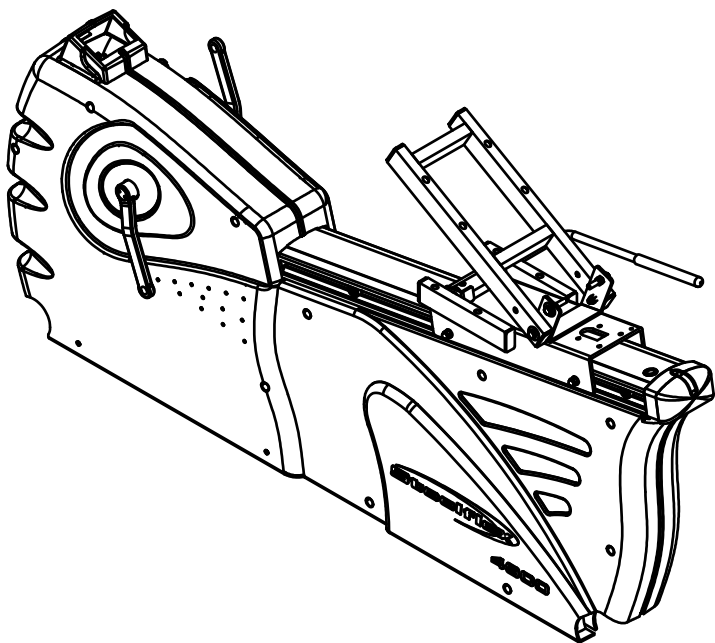


B [1PCS]

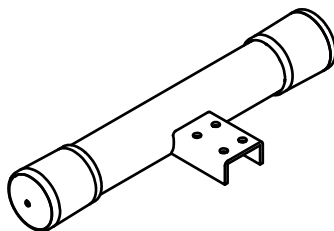


C [1PCS]

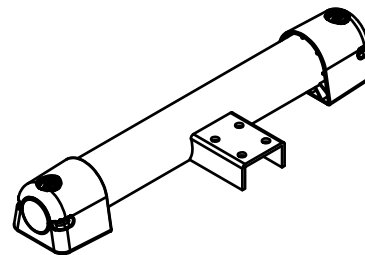


D [1PCS]

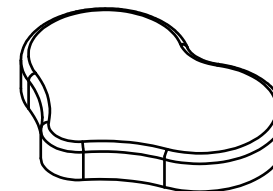


F [1PCS]

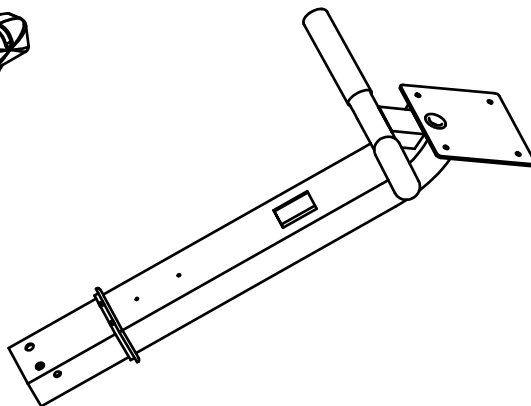


G [1PCS]

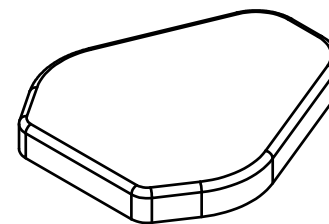

H [1PCS]

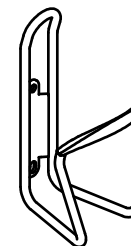


E [1PCS]

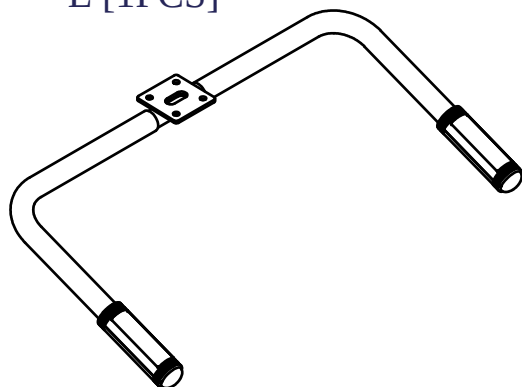


I [1PCS]




J [1PCS]

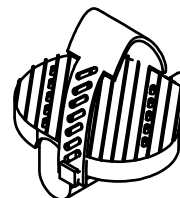

K [1PCS]

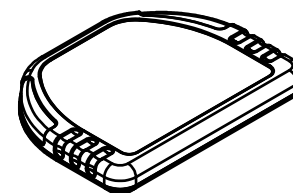



L [1PCS]

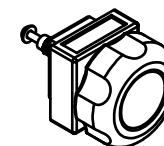

XB 4900

1. Loosen the 5/16" screws (① , ②) on both of the back pad bracket.
2. Move the back pad bracket from position A to B.
3. Tighten the 5/16" screws (① , ②) as well as the other two 5/16" screws (③ , ④) on the back pad bracket.

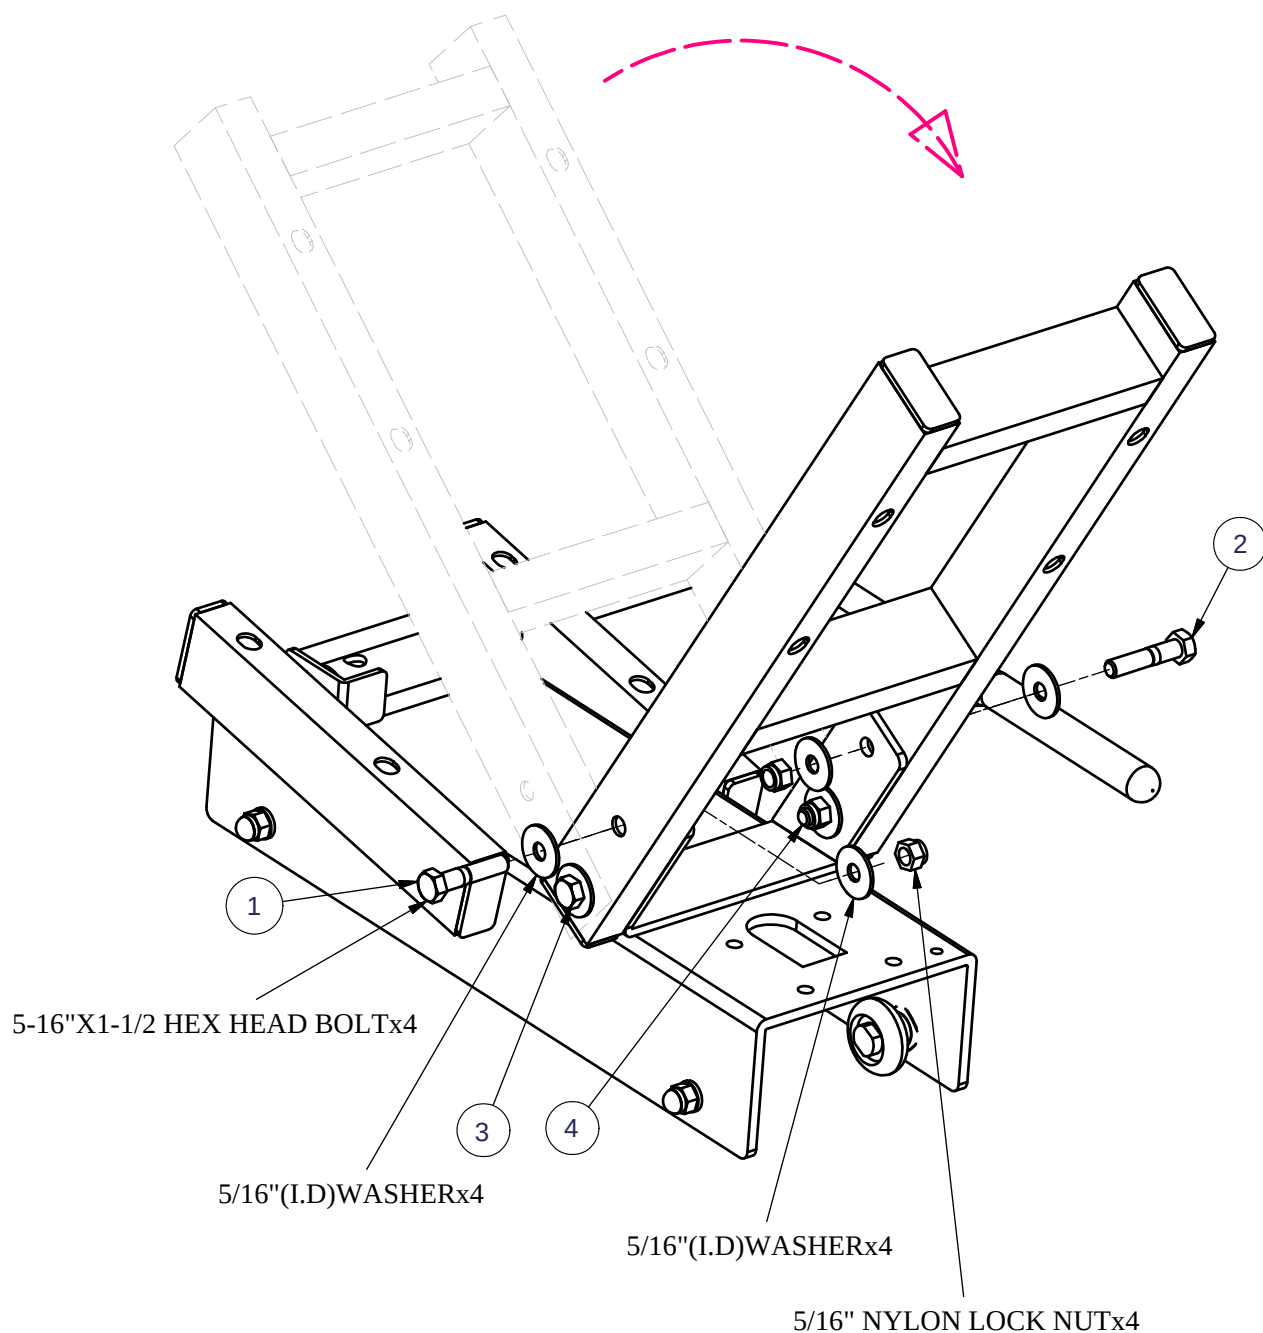

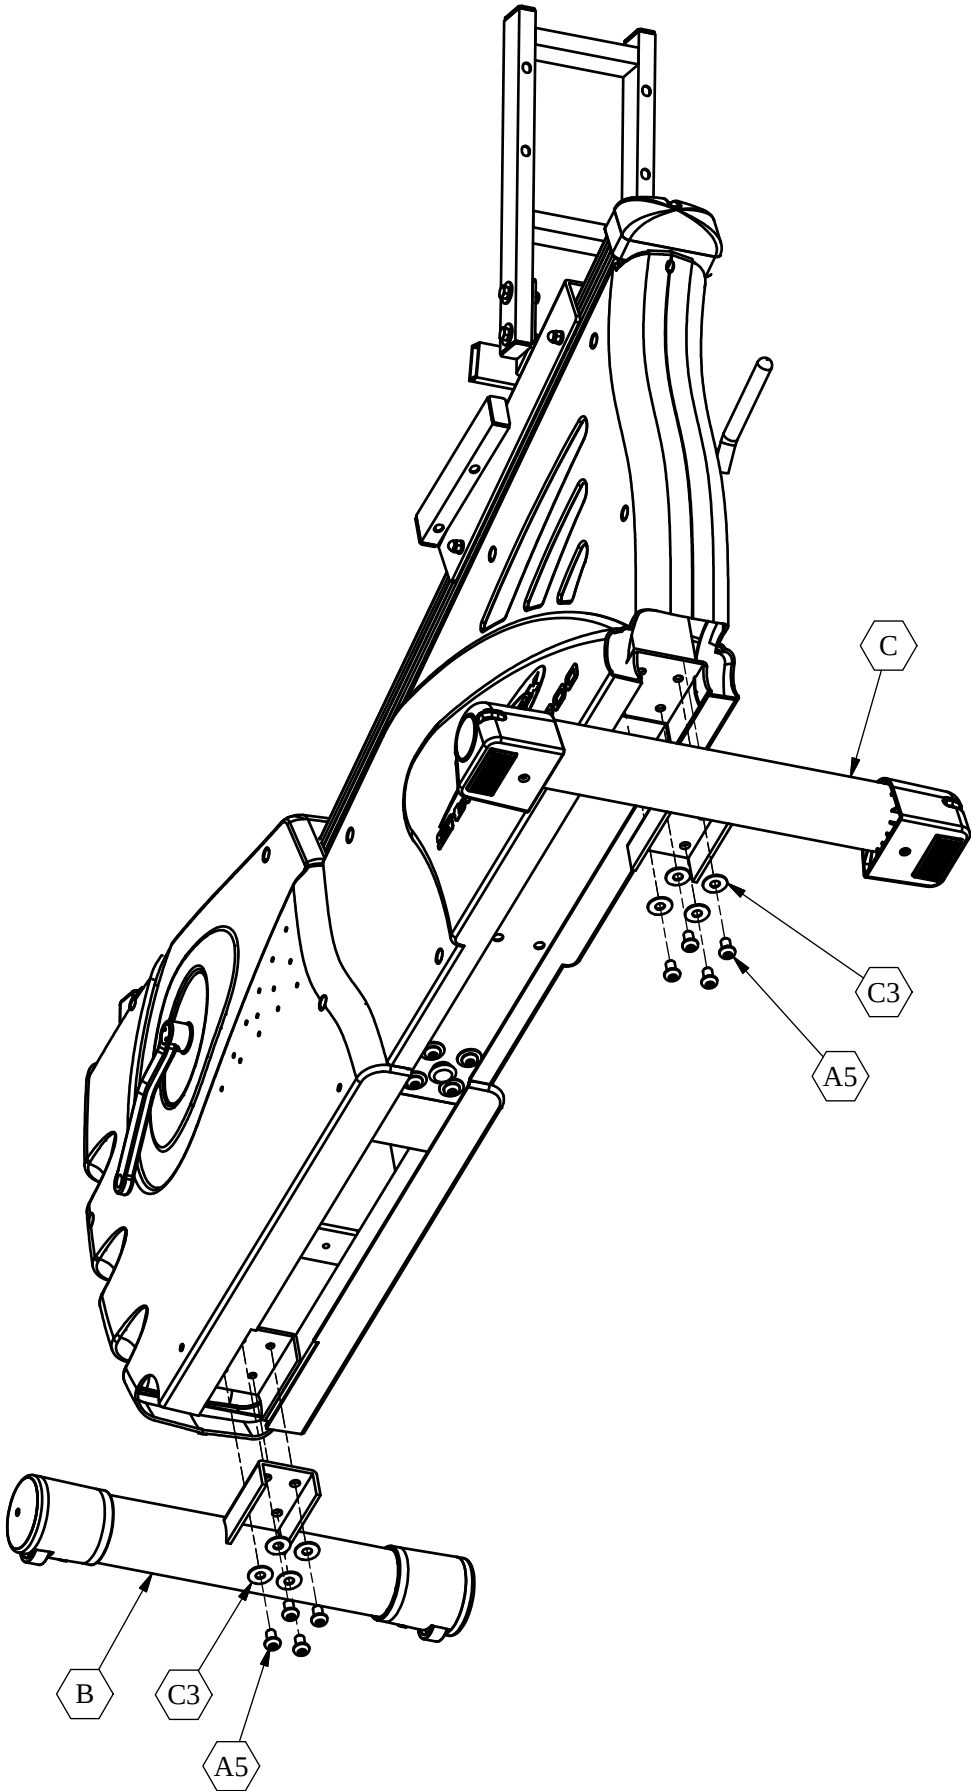

XB 4900

After assembly of F, connect wire in ① .
When put console into main frame, pull
connecting Wire upward.

