# *PSDP Maintenance



* Customers can put some grease on pivot points(red circle place), with brass or gunmetal bushings.








* Let's maintain your machine!

# PSDP HARDWARE
(shown in actual size)


D1.Rubber Insert (9310-076)..... [6PCS]
D2.Block Rubber (9310-131)..... [2PCS]
D3.Nylon Bushing (9211-047)..... [2PCS]
D4.1/2"X38 Pop Pin (8250-065G) pre-installed..... [2PCS]
D5.End Closure (8130-131)..... [2PCS]
D6.Rubber Dount (9310-016)..... [6PCS]
D7.Ø50 End Cap (9211-020)..... [2PCS]
D8.Pinch Cock (OC-06)..... [2PCS]
D9.50X100 End Cap (9211-193)..... [2PCS]
D10.Bearing (8510-037) pre-installed..... [4PCS]
D11.Chrone Collar (8130-287) pre-installed..... [2PCS]
D12.Chrone Collar (8890-048) pre-installed..... [2PCS]
D13.Impregnated With Handle (9162-208) pre-installed. [2PCS]

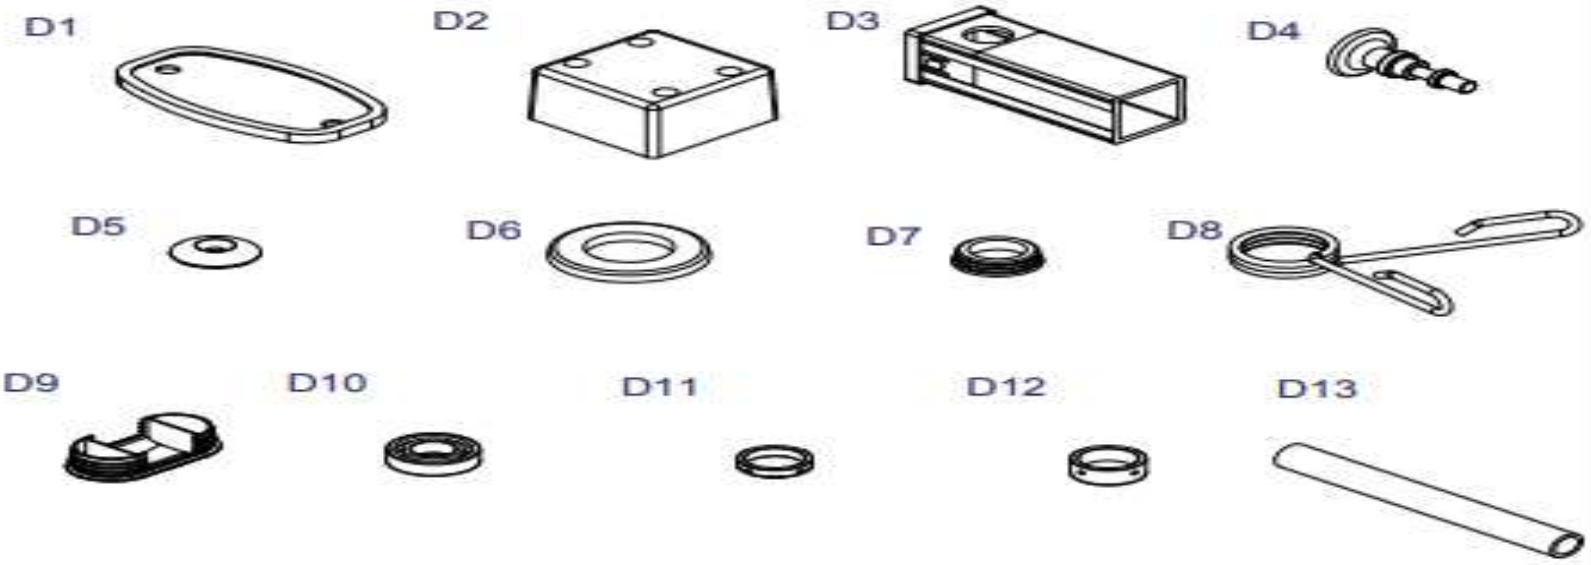


# PSDP HARDWARE

(shown in actual size)


A[1PCS]

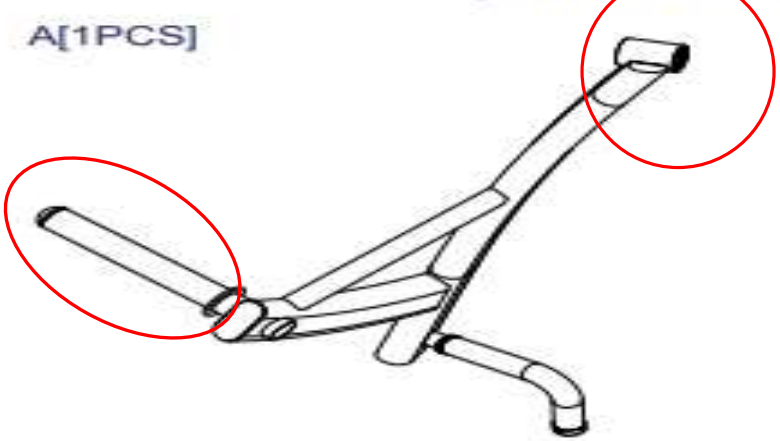


B[1PCS]

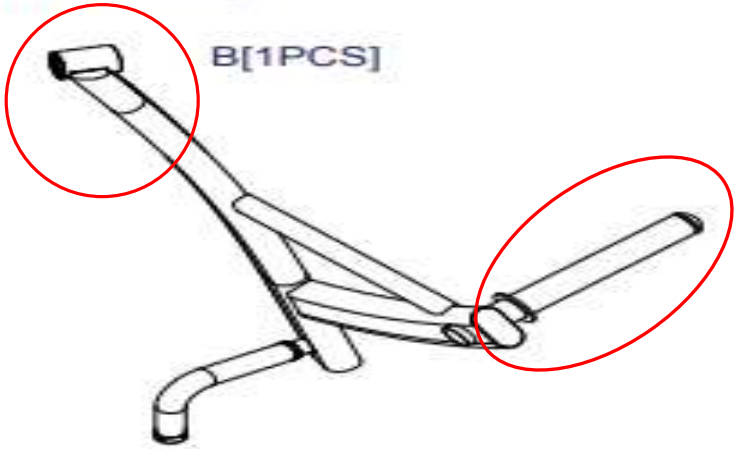


C[1PCS]

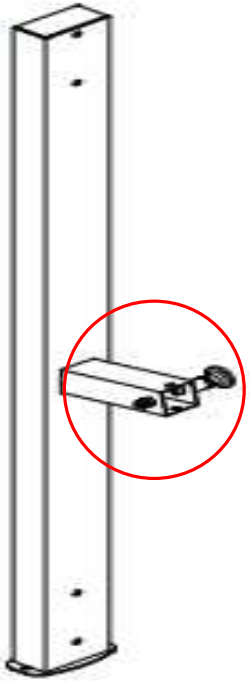


D[1PCS]

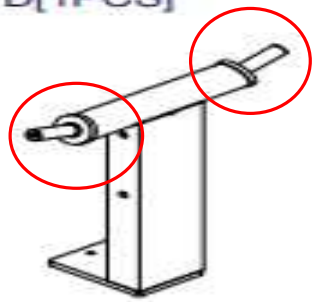


E[1PCS]

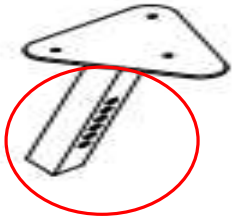

G[1PCS]

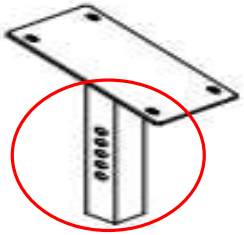


H[1PCS]

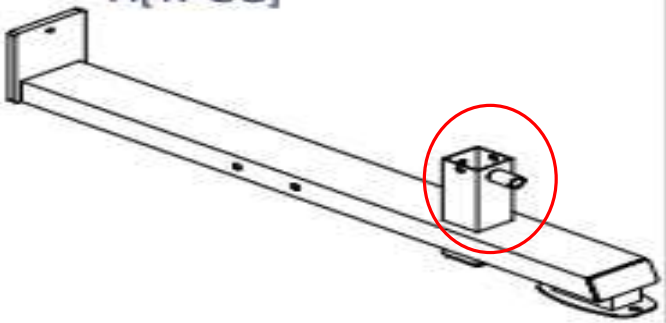


# PSDP HARDWARE

(shown in actual size)


K[1PCS]

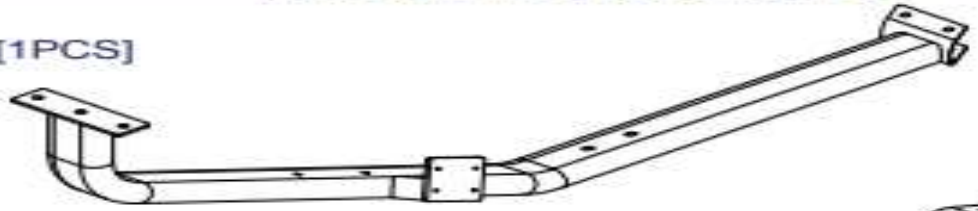


L[1PCS]

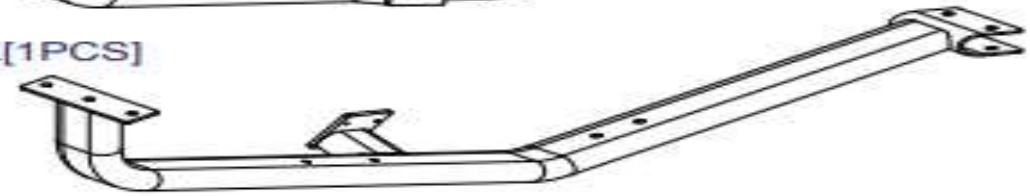


N[4PCS]

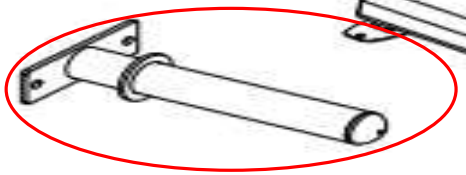

F[1PCS]

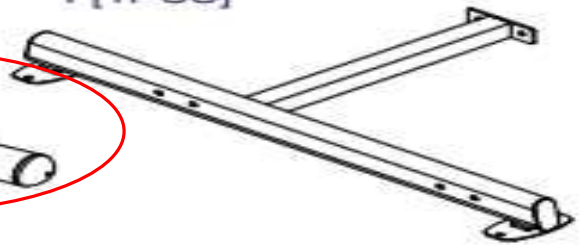

I[1PCS]

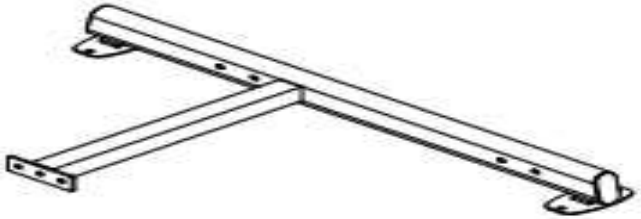

M[2PCS]



O[4PCS]
8313-235




P[2PCS]
8313-250




R[1PCS]
9111-105




S[1PCS]
9121-116

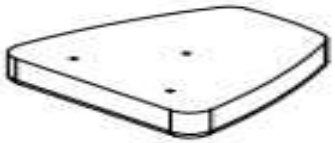


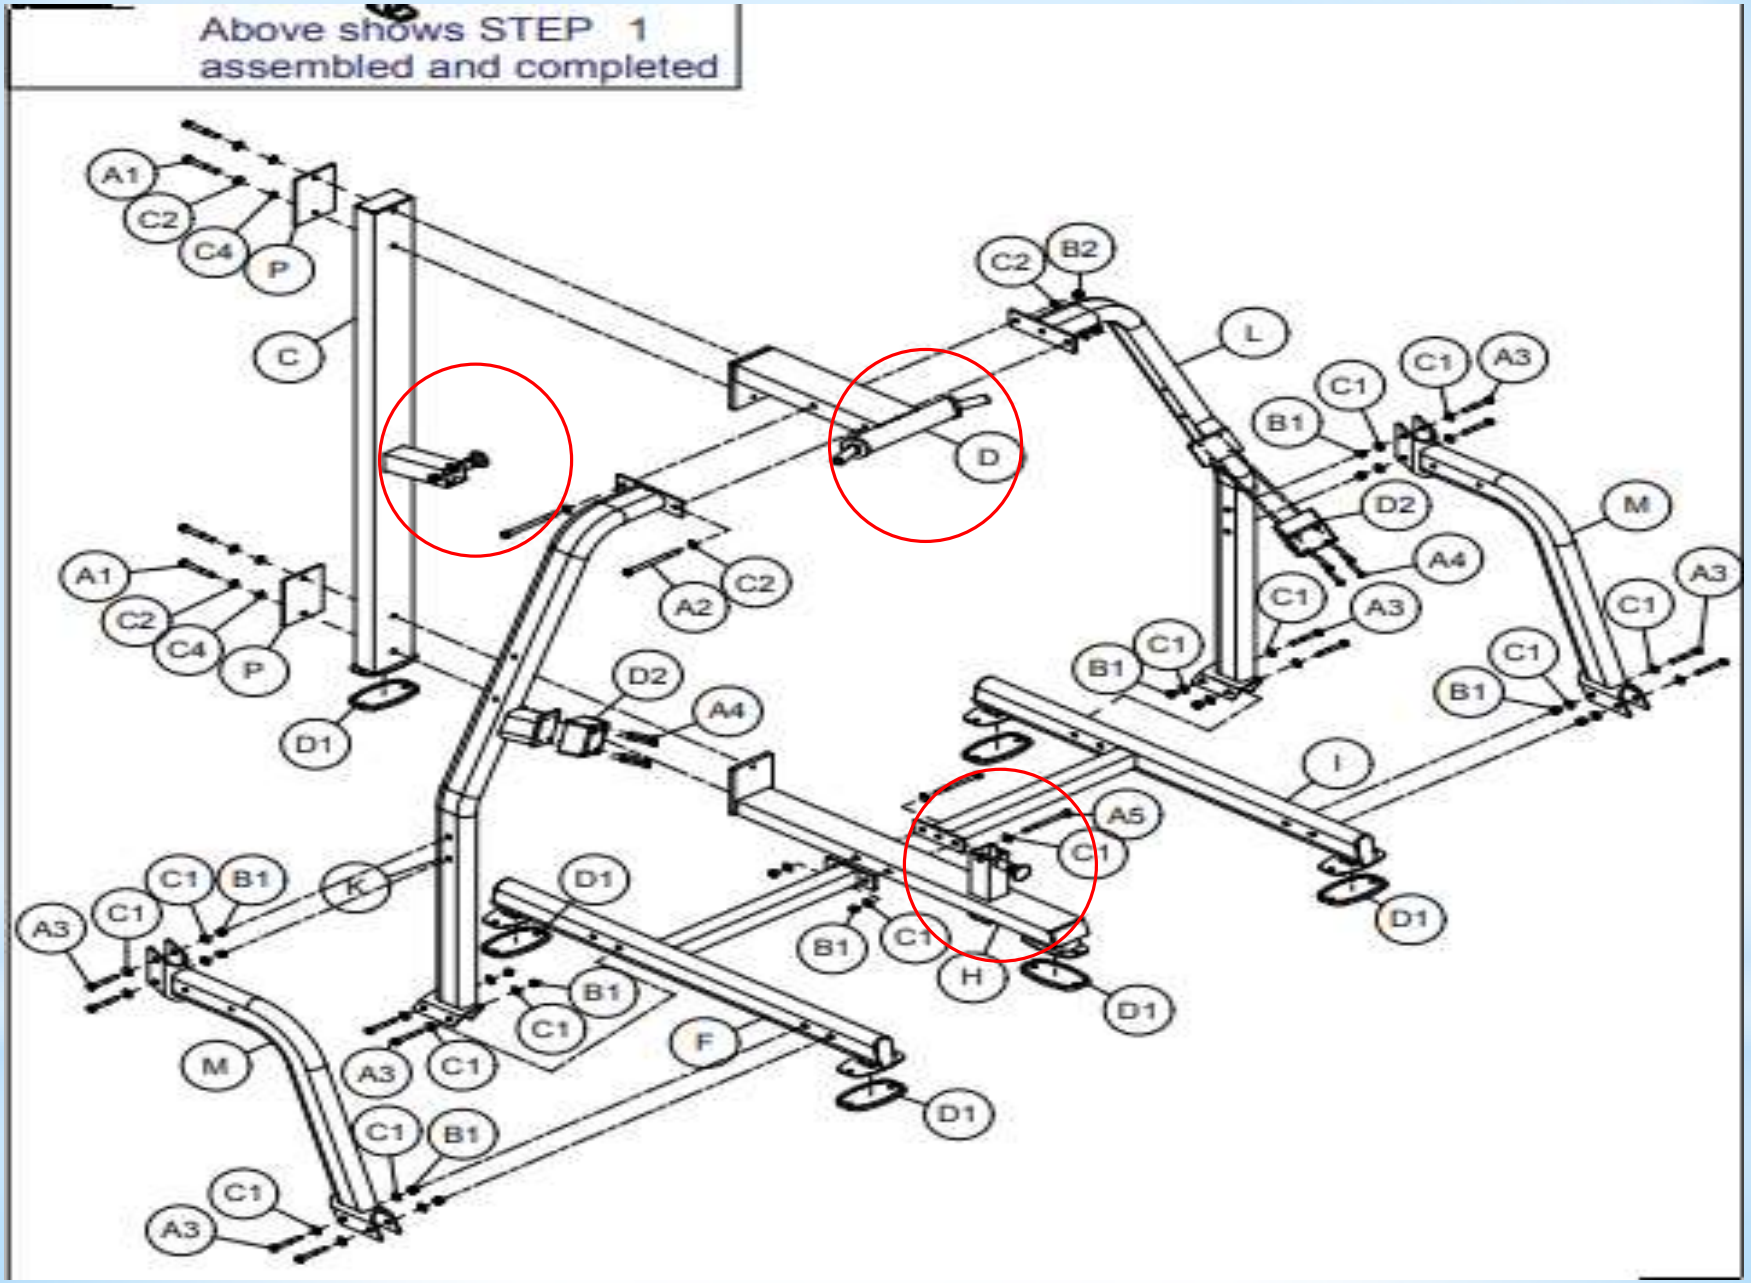
Above shows STEP 1
assembled and completed
A1
C2
C4
P
C
C2
B2
L
C1
A3
B1
D
D2
M
A4
A2
C2
A1
C2
C4
P
D1
D2
A4
C1
A3
B1
C1
C1
A3
B1
C1
I
A5
C1
D1
K
D1
B1
C1
H
D1
A3
C1
B1
B1
C1
M
A3
C1
F
D1
C1
B1
C1
A3


Above shows STEP 2
assembled and completed

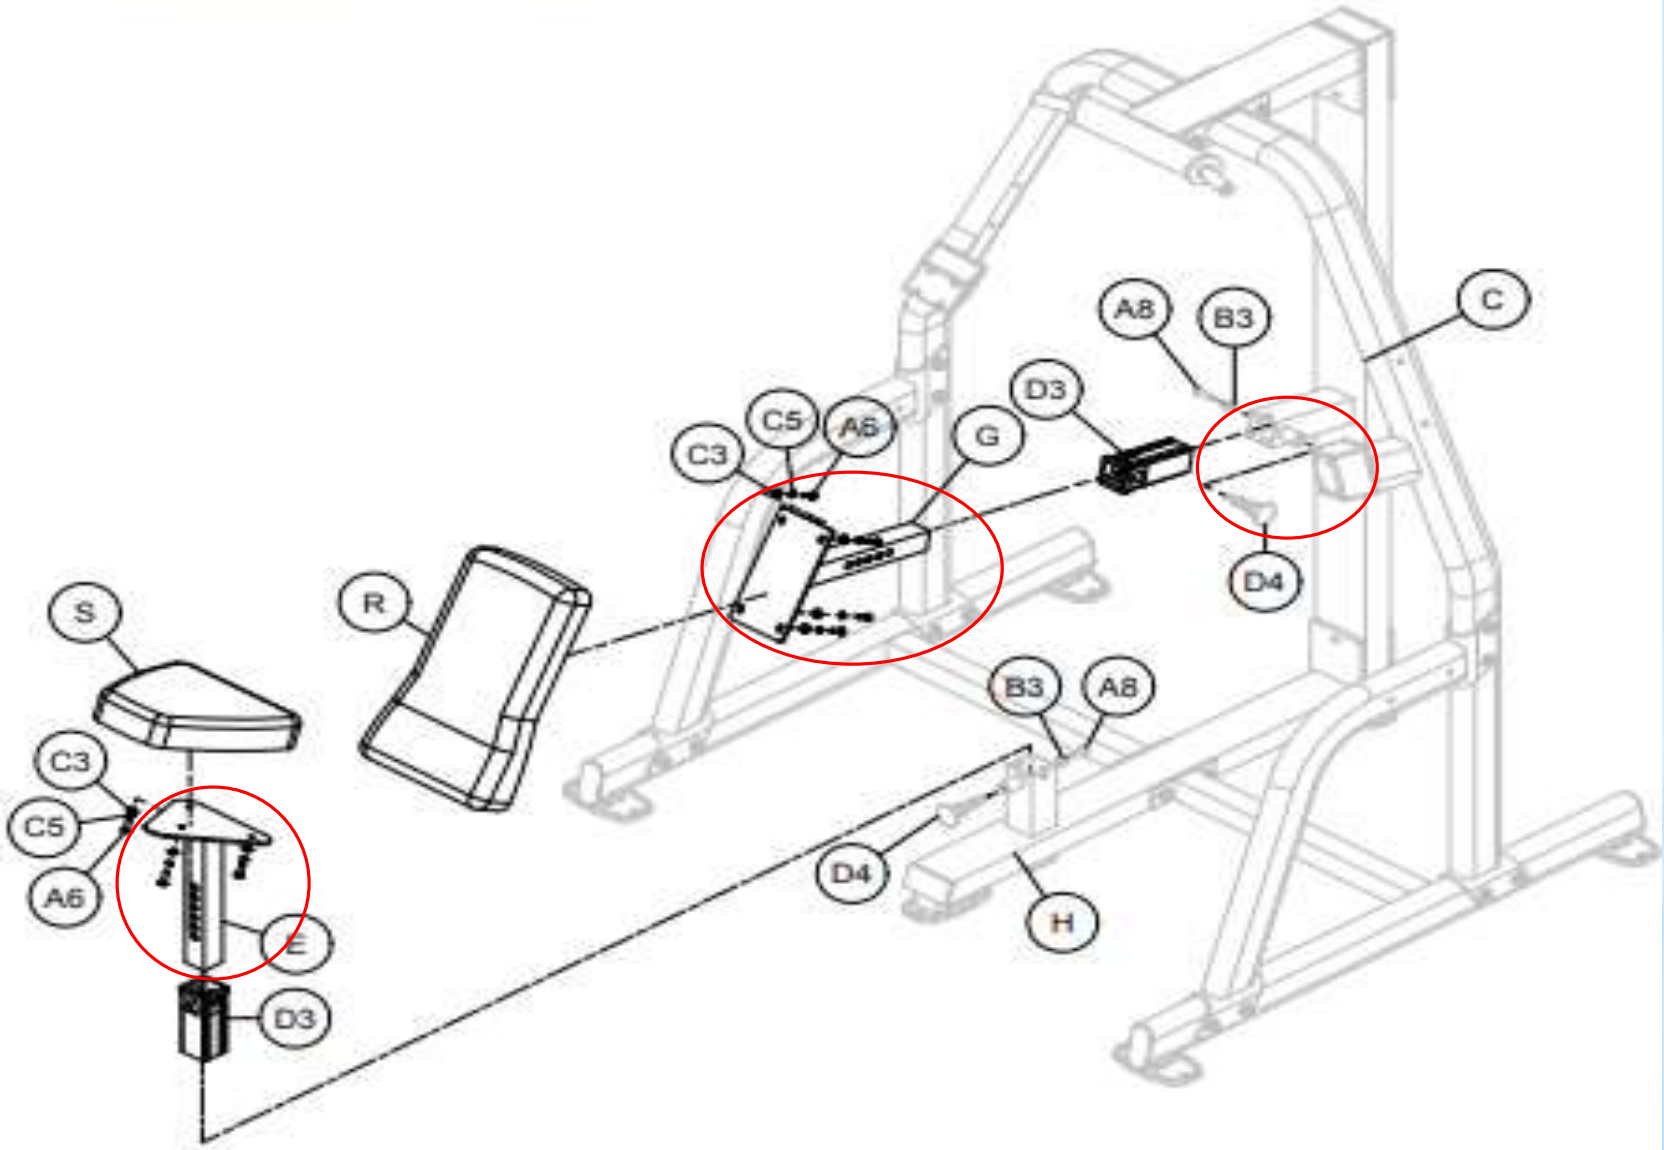

Above shows STEP 3
assembled and completed

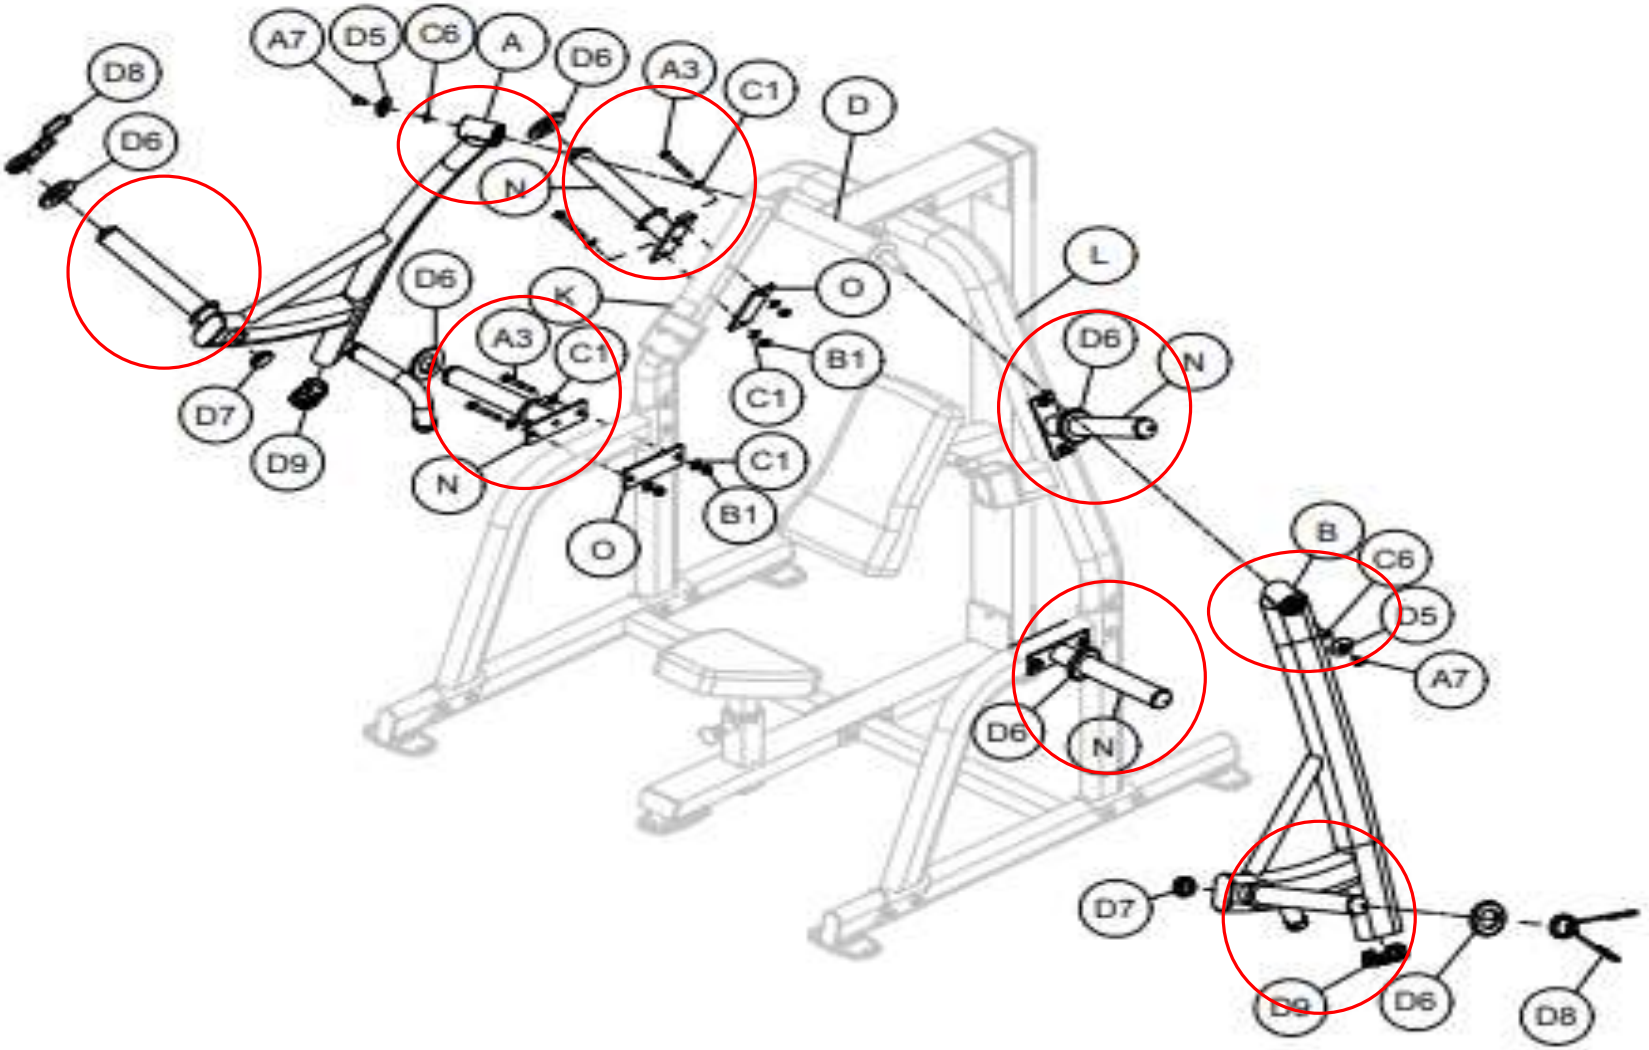

PSDP

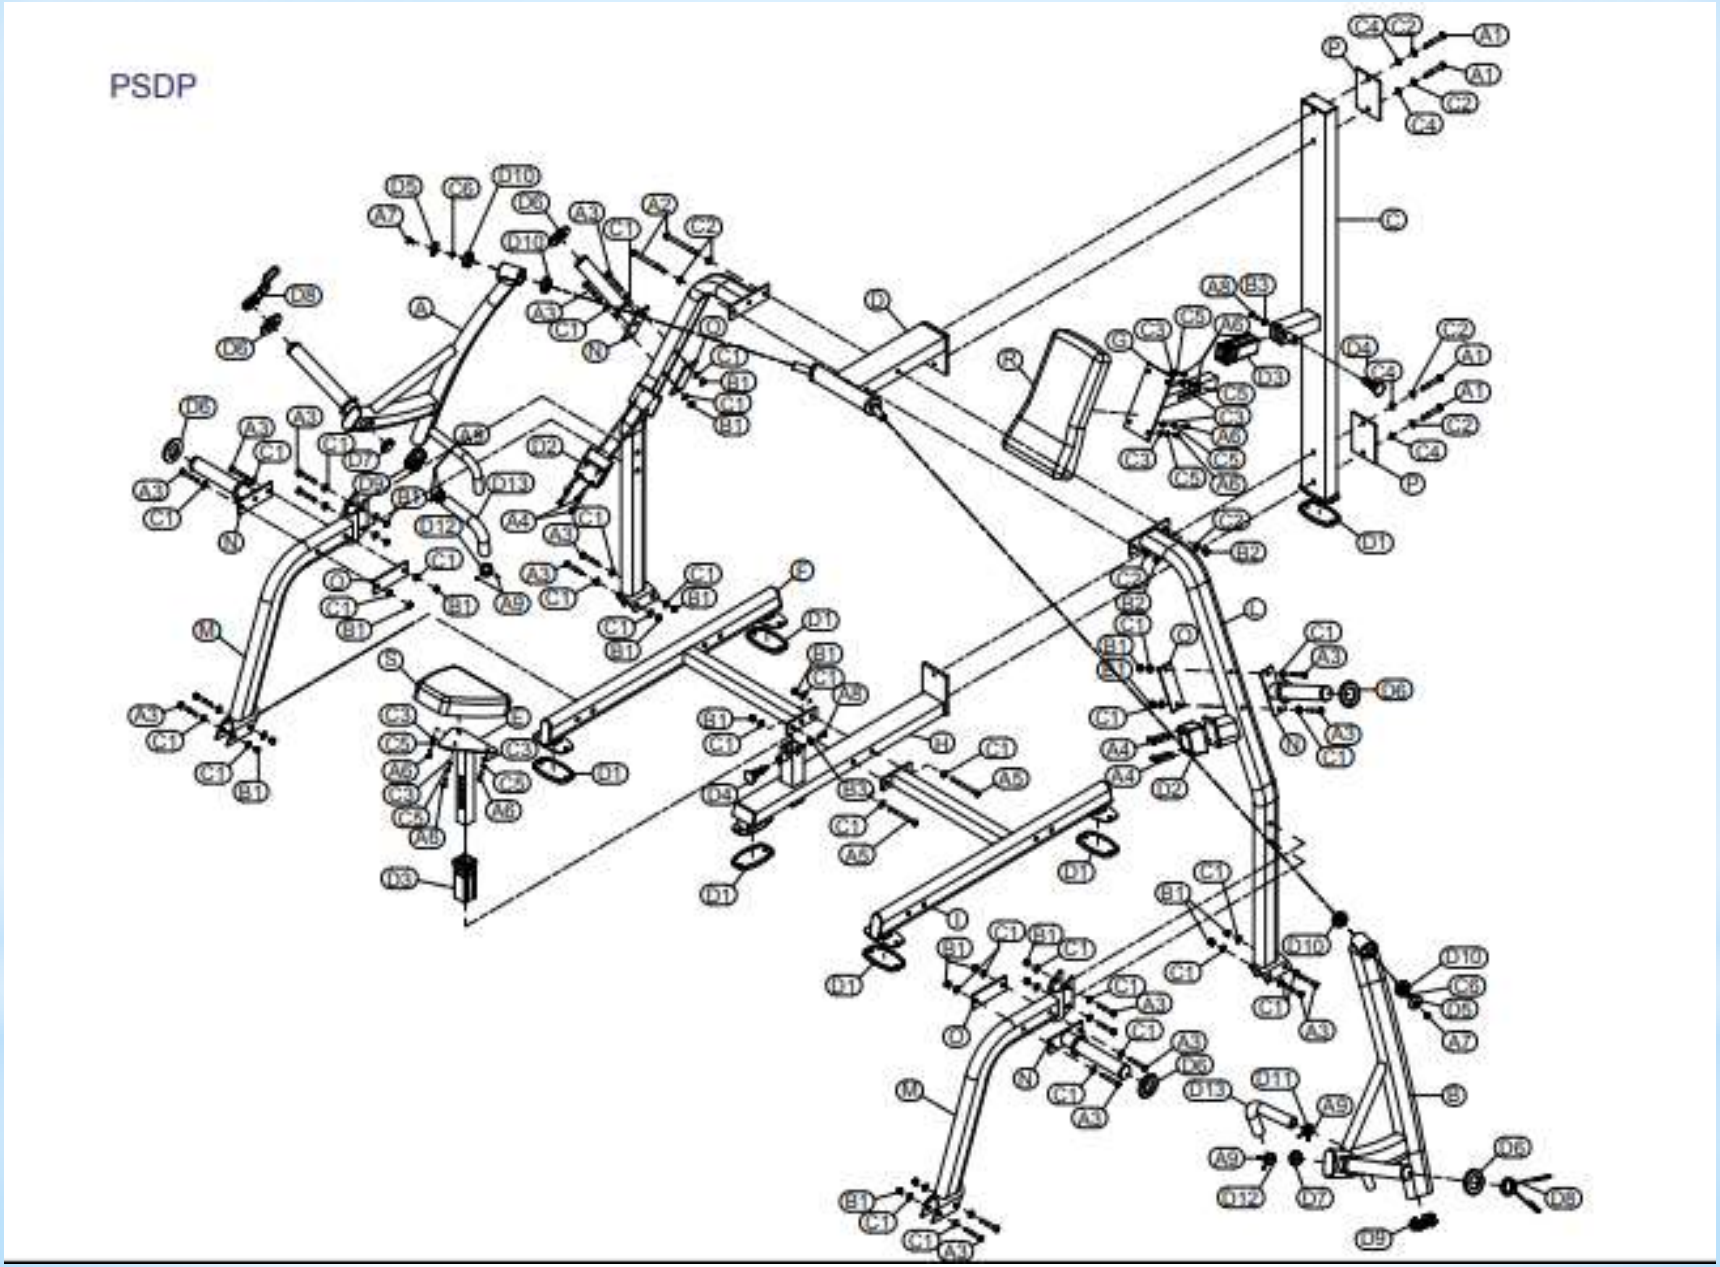

# *Well done!

